

# HUAWEI P50 Pocket

## User Guide



# Contents

## Try New Functions

Getting Started with the Exterior Screen	1
--	---

## Essentials

Basic Gestures	4
System Navigation	7
Phone Clone	8
Lock and Unlock Your Screen	9
Get Familiar with the Home Screen	10
Notification and Status Icons	11
Control Panel	12
Quickly Access Frequently Used App Features	18
Home Screen Widgets	18
Set Your Wallpaper	19
Screenshots & Screen Recording	19
View and Clear Notifications	23
Adjust Sound Settings	24
Enter Text	26
Multi-Window	27
Show Date and Time When the Screen Is Off	30
Power On and Off or Restart Your Device	31
Charging	32

## Smart Features

AI Voice	35
AI Lens	40
AI Touch	42
Easy Projection	42
Multi-screen Collaboration	46
Multi-screen Collaboration Between Your Tablet and Phone	52
Huawei Share	54
Huawei Print	57
Multi-Device Collaboration	58
AR Measure	60
Media Controller	63

## Camera and Gallery

Launch Camera	64
Take Photos	64
Shoot in Portrait, Night, and Wide Aperture Modes	67
Master AI	69

Zoom to Take Photos	69
Macro	70
Take Panoramic Photos	70
Monochrome Photography	71
AR Lens	72
Moving Pictures	73
Add Stickers to Photos	74
Documents Mode	74
Take High-Resolution Photos	75
Pro Mode	75
Record Videos	79
Tracking Shot	81
Slow-Mo Recording	82
Time-Lapse Photography	83
Dual-View Mode	84
Story Creator	85
Leica Colors	86
Filters	86
Adjust Camera Settings	86
Manage Gallery	88
Golden Snap	95
Smart Photo Categorisation	97
Huawei Vlogs	97
Highlights	97

## Apps

Contacts	100
Phone	103
Messaging	110
MeeTime	114
Calendar	116
Clock	117
Notepad	118
Recorder	122
Email	123
Calculator	127
Torch	127
Compass	128
App Twin	129
Optimizer	129
Phone Clone	132

## Settings

Search for Items in Settings	134
------------------------------	-----

	Contents
Wi-Fi	134
Mobile Data	135
More Connections	138
Home Screen & Wallpaper	146
Display & Brightness	148
Sounds & Vibration	151
Notifications	154
Biometrics & Password	155
Apps	159
Battery	159
Storage	161
Security	162
Privacy	164
Accessibility Features	168
Users & Accounts	170
System & Updates	171
About Phone	176

# Try New Functions

## Getting Started with the Exterior Screen

### Basic Settings for the cover screen of the Device

#### Change Themes

Go to **Settings > Home/Exterior screen & wallpaper > Exterior screen**, choose your desired theme in the **Themes** tab, and touch **Apply**.

#### Add Service Widgets to the cover screen

Add **Service widgets** to the cover screen for easier access.

Go to **Settings > Home/Exterior screen & wallpaper > Exterior screen**, touch **Edit** in the **Service widgets** tab, and follow the onscreen instructions to add or delete **Service widgets** or hold and drag the widgets to adjust their order.

### Common Operations for the Cover Screen of the Device

After unlocking the cover screen with your face or fingerprint, you can view notifications, play music, answer calls, and much more directly from the cover screen without having to unfold the device.

#### Device Cover Screen Control

After unlocking the cover screen, you can perform the following on its home screen:


**Swipe right** to access the event card list and view or manage apps that are running, such as for switching songs.

 Not all apps support event cards.

**Swipe left** to access the service widget list and touch to use the services of the service widgets that have been set, such as for taking selfies with the camera.

**Swipe down** to access the Notification Centre and view notifications.

#### Answer or Reject Calls on the Cover Screen

When a call comes in, you can swipe right on the profile picture or  on the cover screen to answer the call, or swipe left to reject it.

After answering a call, you can:

- Touch the button on the right to switch between audio output channels, including Bluetooth earphones and hands-free devices.
- Touch the button on the left to mute or unmute audio.

- When a call is answered on the cover screen and the device is not connected to an external device (such as earphones), speaker mode will be automatically enabled.
- You can go to Notification Centre on the cover screen to view missed calls and return calls.

### Control Music Playback on the Cover Screen

After unlocking the cover screen, you can swipe right on its home screen to display the music playback card, where you can play, pause, or switch songs, and perform much more.

- To prevent misoperations, you can only adjust the volume when your device makes a sound.

### View Notifications on the Cover Screen

After unlocking the cover screen, you can swipe down on its home screen to enter the Notification Centre to perform the following:

- Swipe up or down in the Notification Centre to view notifications. You can touch a notification, then unfold your device to view details.
- Swipe left or right to return to the previous screen or the home screen.
- Touch **Clear all** at the bottom of the Notification Centre to clear all notifications.

To disable notifications from an app, go to **Settings > Notifications > Manage all** and turn off the switch next to the app.

### Wake up and Use AI Voice on the cover screen

After unlocking the cover screen, you can enter the main screen and wake up **AI Voice** to initiate voice chats, set alarms, play music, and do many more things.

Go to **Settings > HUAWEI Assistant > AI Voice > Voice wakeup** and make sure that **Voice wakeup** is enabled.

Say the wakeup phrase to wake up **AI Voice**.

- Voice chat commands: Such as "What's the weather like today?" and "Tell me a joke".
- Alarm setting commands: Such as "Wake me up at 8 AM tomorrow" and "Cancel my 8 AM alarm for tomorrow".
- Music playback commands: Such as "Play music", "Play My Dream", and "Play next song".

- The exterior and interior screens of the device support different **AI Voice** functions. The actual situation prevails.

### Take Selfies with the Cover Screen

Your device supports taking photos using the cover screen when the device is folded.

- 1 Unlock the cover screen, access the home screen, and swipe left or right to find the Camera icon.
- 2 Touch the Camera icon to launch the app.

You can swipe up or down on the cover screen to switch between taking photos and recording videos.

Tap the screen twice to switch between standard and wide-angle modes.

- 3** Face the camera, then touch the cover screen or press the volume button to start shooting.

Once you have finished, touch the preview frame on the cover screen to view your shots.




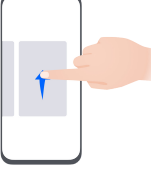 
# Essentials

## Basic Gestures

 
### Basic Gestures and Shortcuts

#### System Navigation Gestures

Go to **Settings** > **System & updates** > **System navigation** and make sure that **Gestures** is selected.


	<p><b>Return to the previous screen</b> Swipe in from the left or right edges to return to the previous screen.</p>
	<p><b>Back to home screen</b> Swipe up from the bottom to go to the home screen.</p>
	<p><b>Recent tasks</b> Swipe up from the bottom of the screen and hold to view recent tasks.</p>
	<p><b>Close an app</b> When viewing recent tasks, swipe up on an app preview to close the app.</p>



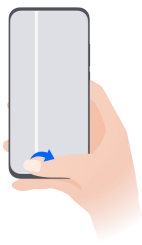

### Switch between apps

 
- Slide across the bottom edge of the screen to switch between apps. Before using this gesture, touch **Settings** on the **System navigation** screen, and ensure that **Slide across bottom to switch apps** is enabled.
- Swipe across the bottom of the screen in an arc to switch between apps.

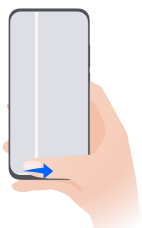

**i** If your device does not have the **Slide across bottom to switch apps** switch, it indicates that the corresponding feature is not supported.


### Knuckle Gestures

 Go to **Settings > Accessibility features > Shortcuts & gestures** to enable **Take screenshot**, **Record screen**.

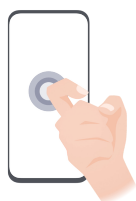

#### Take a screenshot

 Knock twice on the screen with a knuckle to take a screenshot.

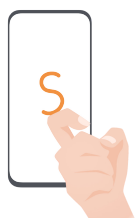


#### Take a scrollshot

Knock on the screen with a knuckle and draw an "S" to take a scrolling screenshot.


 
#### Capture part of the screen


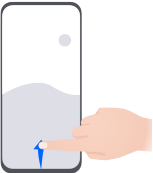 


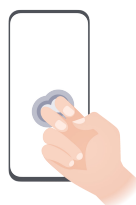

Knock and draw an enclosed area with a knuckle to capture part of the screen.





#### Record screen

 Knock twice on the screen with two knuckles to start or end a screen recording.

## More Gestures

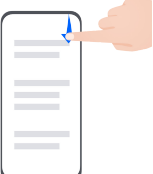	<p><b>Access Home screen editing mode</b> Pinch two fingers together on the home screen.</p>
	<p><b>Display the shortcut panel on the lock screen</b> Turn on the screen and swipe up from the bottom of the lock screen.</p>
	<p><b>Display the search bar</b> Swipe down from the middle of the home screen.</p>
	<p><b>Display the notification panel</b> Swipe down from the upper left edge of the screen.</p>
	<p><b>Turn on a shortcut switch</b> Swipe down from the upper right edge of the screen to display <b>Control Panel</b> and touch  to expand the shortcut switches panel.</p>

## Button Shortcuts

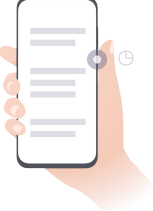 	<p><b>Power off and restart</b> Press and hold the Power button until your device displays the <b>Power off</b> and <b>Restart</b> menu.</p>
	<p><b>Turn up volume</b> Press the Volume up button.</p>




### Turn down volume

Press the Volume down button.



### Take a screenshot

Press the Volume down and Power buttons simultaneously.

 Some products do not have volume buttons.


## System Navigation

### Change the System Navigation Mode


#### Navigate with Gestures

Go to **Settings > System & updates > System navigation** and select **Gestures**.

You can then:

- Go back to the previous screen: Swipe inward from the left or right edge.
- Return to the home screen: Swipe up from the bottom of the screen.
- Access the Recent tasks screen: Swipe up from the bottom of the screen and hold.
- Close an app: Swipe up on an app preview from the Recent tasks screen. Swiping down on an app preview can lock the app. A locked app will not be cleared when you touch  on the Recent tasks screen.
- Switch apps: Swipe across the bottom of the screen in an arc. Alternatively, when **Slide across bottom to switch apps** is enabled, swipe across the bottom edge of the screen.



You can enable **Show navigation bar** to display the navigation bar to assist your gesture operations.


 **Slide across bottom to switch apps** or **Show navigation bar** is not supported on certain products.

#### Use Three-Key Navigation


Go to **Settings > System & updates > System navigation**, and select **Three-key navigation**.

You can then:

- Touch  to return to the previous menu or exit the current app.
- Touch  to return to the home screen.

- Touch  to access the recent tasks screen.

You can touch **Settings** to configure more settings.

- Select a navigation key combination.
- Enable **Hide navigation keys** to allow you to hide the navigation bar when not in use.
- Touch  (if available in the selected navigation key combination) to open the notification panel.

## Use Navigation Dock to Control Your Device

Go to **Settings > System & updates > System navigation > More** and enable **Navigation Dock**.

After the Navigation dock appears, you can:


- Drag the dock to your preferred position.
- Touch the dock to go back.
- Touch and hold the dock, then release it to return to the home screen.
- Touch and hold the dock, then swipe left or right to view recent tasks.

## Phone Clone

### Use Phone Clone to Move Data to Your New Device


**Phone Clone** lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.

#### Migrate Data from a Huawei or Other Android Device

- 1 On your new device, open the **Phone Clone** app, or go to **Settings > System & updates > Phone Clone**, touch **This is the new device**, and select **Huawei** or **Other Android**.
  - 2 On your old device, follow the onscreen instructions to download and install **Phone Clone**.
  - 3 On the old device, open the **Phone Clone** app, touch **This is the old device**, and follow the onscreen instructions to connect the old device with your new device by scanning a code or connecting manually.
  - 4 On your old device, select the data you want to clone, then touch **Next > Transfer** to start cloning.
-  You can search for Android versions that support **Phone Clone** in **AppGallery** and view more information on the app details screen.

#### Migrate Data from an iPhone or iPad

- 1 On the new device, open the **Phone Clone** app, or go to **Settings > System & updates > Phone Clone**, touch **This is the new device**, and select **iPhone/iPad**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.

- 3 On the old device, open the **Phone Clone** app, touch **This is the old device**, and follow the onscreen instructions to connect the old device with your new device by scanning a code or connecting manually.
  - 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.
-  You can search for iOS versions that support **Phone Clone** in **App Store** and view more information on the app details screen.

## Lock and Unlock Your Screen

### Lock and Unlock Your Screen

#### Lock the Screen

If your phone remains inactive for a period of time, it will automatically lock the screen and enter sleep mode to save power.

Alternative, you can manually lock the screen in either of the following ways:

- Press the Power button.
- On the home screen, pinch two fingers together to enter screen editing mode. Touch **Widgets**, then drag the **Screen Lock** icon to the home screen. You can now touch the **Screen Lock** icon to lock the screen.


#### Set the Screen Timeout Period

Go to **Settings > Display & brightness > Sleep** and select a screen timeout period.

#### Turn On the Screen

You can turn on the screen in any of the following ways:

- Press the Power button.
- Go to **Settings > Accessibility features > Shortcuts & gestures > Wake screen**, and enable **Raise to wake**, **Double-tap to wake**, and/or **Show palm to wake**. Then use the corresponding feature to turn on the screen.

 If your device does not have this option, it indicates that this feature is not supported.

#### Unlock the Screen with Password

Once the screen is turned on, swipe up from the middle of the screen to display the password input panel. Then, enter your lock screen password.

#### Use Face Unlock

Turn on the screen and align it with your face. Your device will unlock once your face is recognised.

## Unlock Your Device with Your Fingerprint

Press an enrolled finger against the fingerprint sensor to unlock your device.

## Change the Lock Screen Display

When using an official theme, you can customise the content displayed on the lock screen.

## Display Your Signature on the Lock Screen

Go to **Settings > Home/Exterior screen & wallpaper**, touch **Lock screen signature**, then type text to display on the lock screen.

To remove the signature, touch **Lock screen signature** and delete the text.

## Access Apps from the Lock Screen

You can access commonly used apps, such as Camera, Recorder, and Calculator, from the lock screen.

- Turn on the screen, and swipe up on the Camera icon in the lower right corner to open **Camera**.
- Turn on the screen, and swipe up from the bottom of the lock screen to open the shortcut panel. Then touch the app you wish to access from the available shortcuts, such as **Torch**, **Calculator**, or **Timer**.

# Get Familiar with the Home Screen

## Create and Use Large Folders

You can group similar apps in a large folder and name the folder for better management.

You can also turn a standard folder into a large one (both the folder and the app icons in it will be enlarged) to access apps more easily.


### Create a Large Folder

- 1** Touch and hold an app icon and drag it over another icon to create a new folder.
- 2** Touch and hold a folder to switch between display modes. For example, you can touch and hold a new folder and select **Enlarge** from the displayed menu to create a large folder.
- 3** You can touch the lower right corner of the large folder to open it and then touch the folder name to rename it.  
You can also rename the folder by touching and holding it and selecting **Rename**.

### Operations in a Large Folder


You can perform the following operations in large folders:

























- **Open apps:** In a large folder, touch an icon to access the app directly.































- **Enter and exit folders:** Touch the lower right corner of a large folder to enter it. Touch a blank area in the folder to exit it.  
When there are more than nine apps within a large folder, a stacked icon will appear in the lower right corner of the folder. You can touch the stacked icon to view more apps within the folder.
- **Add or remove apps:** Open a large folder, touch , and add or remove apps as required. If you deselect all apps within the folder, the folder will be deleted.
- **Switch between display modes:** Touch and hold a folder to switch between a standard and large display. For example, you can touch and hold a standard folder and select **Enlarge** from the displayed menu to create a large folder.

## Notification and Status Icons

### Notification and Status Icons

-  Network status icons may vary depending on your region or network service provider. Supported functions vary depending on the device model. Some of the following icons may not be applicable to your device.

	5G network connected		4G network connected
	3G network connected		2G network connected
	Full signal strength		Roaming
	Data saver enabled.		No SIM card inserted
	Hotspot enabled		Hotspot connected
	Hotspot disconnected		Switching network via Wi-Fi+
	Wi-Fi connected		Wi-Fi network is faulty, unable to connect to the Internet
	Wi-Fi 6 connected		Wi-Fi 6 network is faulty, unable to connect to the Internet
	Wi-Fi 6+ connected		Wi-Fi 6+ network is faulty, unable to connect to the Internet
	Airplane mode is ON		Alarm set
	Battery empty		Low battery power
	Charging		Quick charging

	Super charging		Wireless super charging
	Wireless fast charging		Regular wireless charging
	Power Saving mode on		Digital Balance enabled
	Bluetooth enabled		Bluetooth device battery
	Bluetooth device connected		VPN connected
	Driving mode		Projection device connected
	Location service enabled		Eye Comfort enabled
	Connected		Headset with a microphone connected
	In call		VoLTE enabled
	Missed call		There are unread messages.
	Silent mode		Vibration
	NFC enabled		Do Not Disturb mode enabled
	Syncing...		Syncing failed
	Performance mode enabled		New email
	Event reminder		More notifications

 
## Control Panel

### Introduction to Control Panel

You can easily manage and control media playback, shortcuts, and **Device+** in the **Control Panel**.

Swipe down from the upper right edge of the screen to display **Control Panel** where you can access the following features with ease:



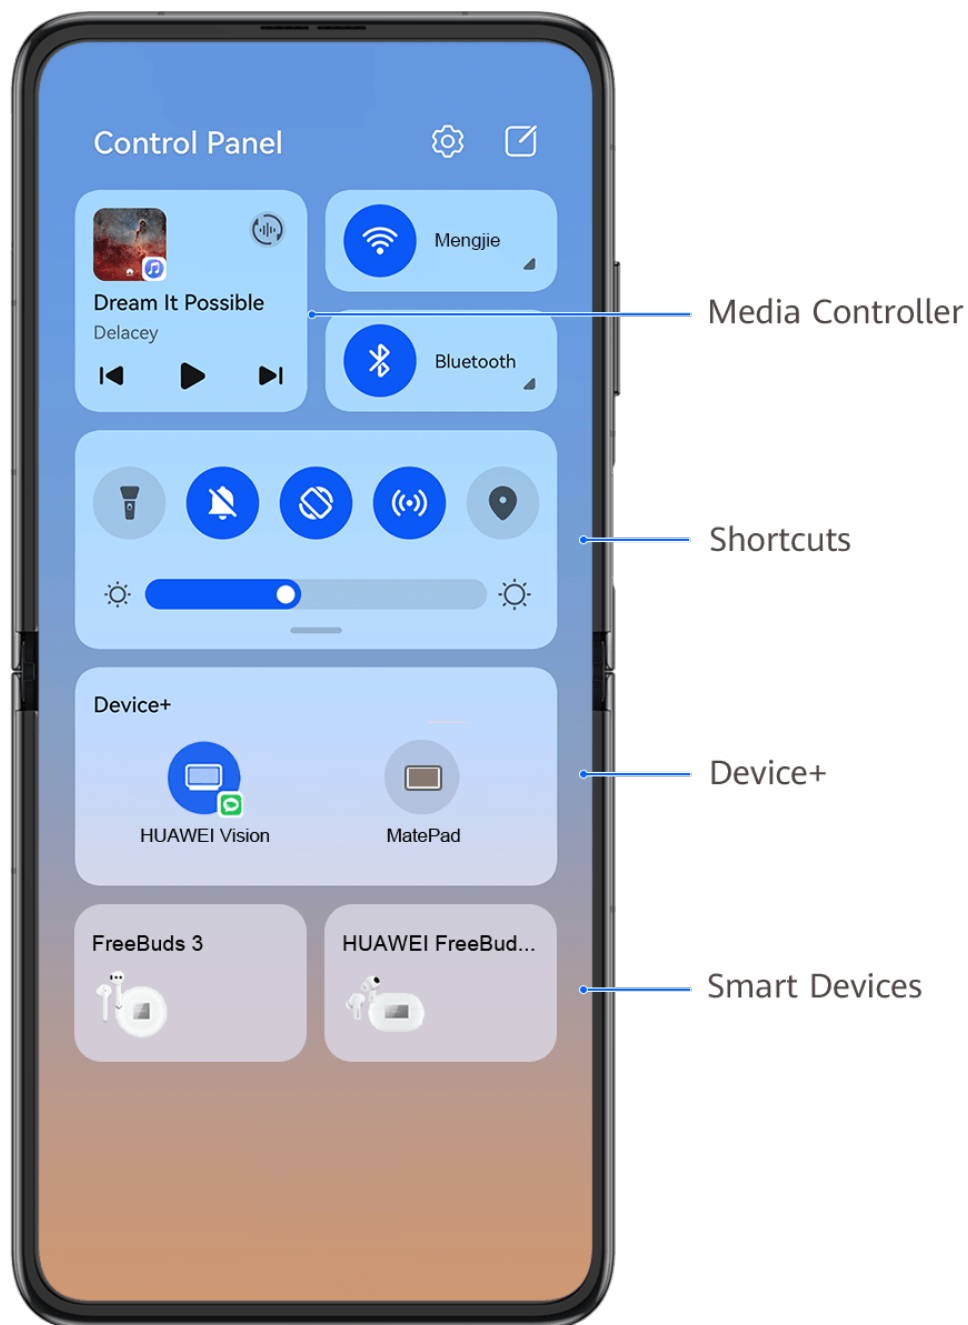


**i** The figures are for reference only.

- **Media controls:** To control media playback and switch between recently used media apps and media devices (such as Visions and Bluetooth headsets).
- **Shortcut controls:** To enable, disable, or set frequently used features.
- **Device+:** Automatically discovers nearby devices logged in to the same HUAWEI ID and allows you to link them so they work together as one.
- **Device controls:** To manage and control devices and scenes that have been added in **AI Life**.


## Use Shortcut Switches
 
## Turn on a Shortcut Switch


Swipe down from the upper right edge of the screen to display **Control Panel** and touch to expand the shortcut switches panel.

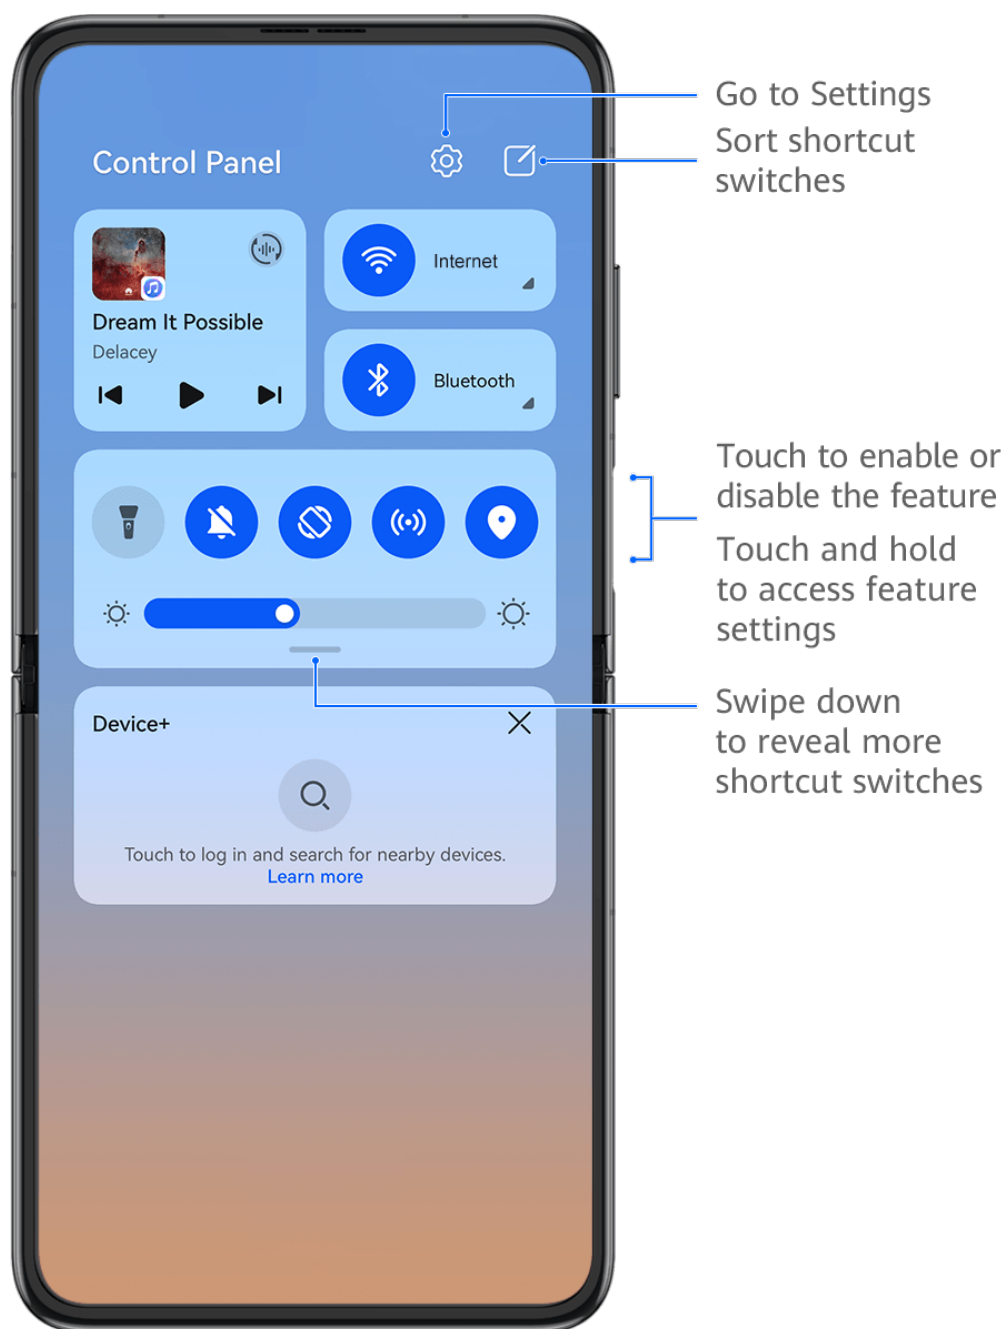

**i** The figures are for reference only.

- Touch a shortcut switch to enable or disable the corresponding feature.
- Touch and hold a shortcut switch to access the settings screen of the corresponding feature (supported by some features).
- Touch  to access the system settings screen.


## Customise Shortcuts

Swipe down from the upper right edge of the screen to display **Control Panel**, go to  > **Edit switches**, then touch and hold a shortcut switch to drag it to your preferred position, and touch **Done**.

## Audio Control Panel



### Manage Audio Playback in Audio Control Panel

When multiple audio apps (such as **Music**) are opened, you can manage music playback and switch between these apps in Audio Control Panel with ease.

- 1 After opening multiple audio apps, swipe down from the upper right edge of the device to display **Control Panel**, then touch the audio playback card at the top of **Control Panel**.
  - 2 The currently and recently used audio apps will be displayed in Audio Control Panel where you can manage playback (such as playing, pausing, and switching to the previous or next song) in the app in use, or touch another audio app to quickly switch playback.
-  • Some apps need to be updated to the latest version before using this feature.
  - Not all apps support Audio Control Panel.

### Quickly Switch Audio Playback Device

When your device is connected to an audio device (such as a headset, Bluetooth speaker, or Vision product), you can quickly switch the playback device in the audio control section in **Control Panel** (such as for transferring the current music playback from your device to a Bluetooth speaker).

- 1 Connect your device to an audio device via Bluetooth or other methods.  
After a Vision product is connected to your device via Bluetooth, you can also connect it to the same Wi-Fi network and log in to the same **HUAWEI ID** as your device to perform more operations.
- 2 Swipe down from the upper right edge of your device to display **Control Panel**, touch  or the device icon (such as ) in the top right corner of the audio control section at the top, then select the audio device from the connected device list to transfer the current audio playback on your device to the device.

## Work Seamlessly Across Devices with Device+

**Device+** allows for collaboration between different devices, making your phone the hub of your nearby tablets, computers, Visions, and other supported devices for them to be controlled conveniently. You can also seamlessly transfer ongoing tasks on your phone, from MeeTime calls to audio and video content being streamed, to your Vision with just a tap, and you can easily view the phone screen projected to your computer, or edit files on your phone using your computer.

 Please make sure your device has been updated to the latest system version.

## Set Device+

Currently, **Device+** supports linking phones with the following types of devices. To use this feature, make sure that devices to be connected support **Device+**. Before you get started, enable Bluetooth and Wi-Fi and log in to your HUAWEI ID on your phone. For other devices, perform the following settings:

- **Tablet:** Enable Bluetooth and Wi-Fi, and ensure that it is logged in to the same HUAWEI ID as your phone.
- **Computer:** Enable Bluetooth and Wi-Fi, and ensure that it is logged in to the same HUAWEI ID as your device and can access the Internet.
- **Vision:** Ensure that it is connected to the same LAN and logged in to the same HUAWEI ID as your device.
- **Bluetooth device:** Some Bluetooth devices (such as Bluetooth headsets) can be linked with your device via **Device+** after establishing a Bluetooth connection.

**Show Device+:** If **Device+** is hidden or cannot be found, go to **Control Panel** and then to



> **Show Device+**.


## Transfer MeeTime Calls and Audio or Video Being Streamed to Other Devices

When you are making MeeTime calls on your device, watching videos (such as in HUAWEI Video, Youku, or other video streaming apps), or listening to music, you can transfer any of these ongoing tasks to another device via **Device+** and pick up from where you left off on the new device. For instance, you can transfer a MeeTime call to your Vision and a video being streamed to your tablet.

 **MeeTime:** This feature is only available in some countries and regions.


You can select different devices to transfer the following tasks:

- **Videos:** Can be transferred to tablets and Visions.
- **MeeTime calls:** Can be transferred to Visions.
- **Music:** Can be transferred to Bluetooth earphones and Visions (either when the screen is on or off).

**1** Swipe down from the upper right edge of your device to display **Control Panel**. Available devices will be displayed in the **Device+** section. You can also touch  to search for nearby devices manually.


**2** Touch a device that you want to transfer the ongoing tasks to.



 The figures are for reference only.

## Use Multi-Screen Collaboration on a Computer or Tablet

You can view or edit files on your phone using your computer or tablet, drag files across devices, and even use phone apps on your computer or tablet.


- 1 Swipe down from the upper right edge of your device to display **Control Panel**. Available devices will be displayed in the **Device+** section. You can also touch  to search for nearby devices manually.
- 2 Select a device that you want to connect to, and your device screen will then be displayed on that device.

To stop Multi-Screen Collaboration, touch the corresponding device again in the **Device+** section.

## Control AI Life Scenes and Devices

You can access existing **AI Life** scenes and devices from **Control Panel** for easier control.

- 1 Swipe down from the upper right edge of your device to display **Control Panel**. You can then turn a smart device on or off, or access the device details screen to manage the device.

- 2 You can go to  > **Edit devices**, then add or delete a scene or device card displayed in **Control Panel**.

## Quickly Access Frequently Used App Features


### Access Frequently Used App Features from the Home Screen

You can access frequently used features of certain apps from app icons on the home screen, and even add shortcuts for these features to the home screen.

### Quickly Access Frequently Used App Features

Touch and hold an app icon until a pop-up menu is displayed, then touch a frequently used feature to access it.

For example, touch and hold the **Camera** icon, then touch a shooting mode, such as Selfie or Video, from the pop-up menu to access it.

-  If no pop-up menu is displayed after you touch and hold an app icon, it indicates that the app does not support this feature.

### Add Frequently Used App Features to the Home Screen

Touch and hold an app icon on your home screen to bring up the pop-up menu. Touch and hold the desired feature and drag it to your home screen to create a shortcut.



## Home Screen Widgets


### Add, Move, or Delete Home Screen Widgets

You can add, move, or delete home screen widgets, such as Screen lock, Weather, Notepad, Clock, Contacts, **Petal Search** and Calendar, according to your personal requirements.

### Add Weather, Clock, and Other Widgets to the Home Screen

- 1 Pinch two fingers on the home screen to access Home screen settings mode.
- 2 Touch **Widgets**, then swipe left to view all widgets.
- 3 Some widgets, such as **Weather**, come in various formats. Touch the widget to show all formats, and swipe right to collapse.
- 4 Touch a widget to add it to the home screen. If there is no room on the current screen, touch and hold it, then drag it to a different screen.

-  To configure the **Weather** app, open it, and touch  to set the configurations as prompted.

For example, to switch between Celsius and Fahrenheit, go to  > **Temperature unit**, and select the temperature unit you want.

## Move or Delete a Widget

Touch and hold a widget on your home screen until your device vibrates, then drag it to the desired position or touch **Remove**.


# Set Your Wallpaper

## Set Your Wallpaper

### Use a Preset Wallpaper

- 1 Go to **Settings > Home/Exterior screen & wallpaper > Wallpaper**.
- 2 Touch an image you want to set as the wallpaper.
- 3 Apply effects on the image as prompted, such as **Blur**.
- 4 Touch **Apply**, then follow the onscreen instructions to complete the setting.

### Set an Image from Gallery as Your Wallpaper

- 1 Open **Gallery**, and open the image you want to set as your wallpaper.
- 2 Go to  **> Set as > Wallpapers**, then follow the onscreen instructions to complete the setting.

# Screenshots & Screen Recording

## Take a Screenshot


### Use Your Knuckle to Take a Screenshot

- 1 Go to **Settings > Accessibility features > Shortcuts & gestures > Take screenshot**, and ensure that **Knuckle screenshots** is enabled.
- 2 Knock the screen twice in quick succession with one knuckle to take a screenshot.

 
### Use a Key Combination to Take a Screenshot

Press and hold the Power and Volume down buttons simultaneously to take a screenshot.

### Use a Shortcut to Take a Screenshot

Swipe down from the upper right edge of the screen to display **Control Panel**, touch  to expand the shortcut switches panel, and touch **Screenshot** to take a screenshot.

### Share and Edit a Screenshot or Switch to Scrollshot

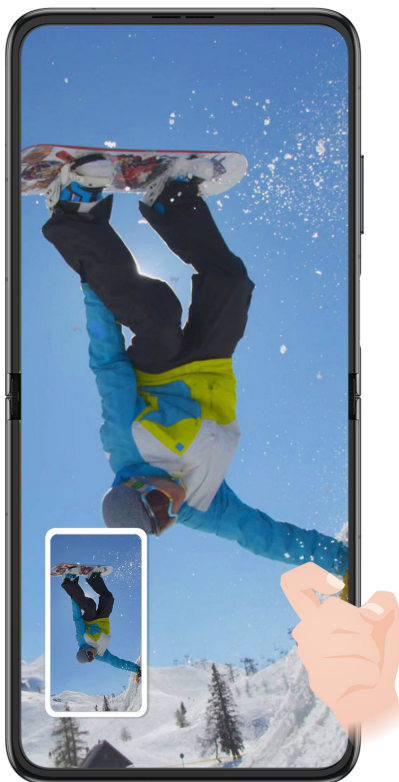

**i** The figures are for reference only.

After you take a screenshot, a thumbnail will be displayed in the lower left corner of the screen. You can then:

- Swipe down on the thumbnail to take a scrolling screenshot.
- Swipe up on the thumbnail to select a way to share the screenshot with your friends.
- Touch the thumbnail to edit or delete it. You can also touch **Scrollshot** to take a scrolling screenshot.

Screenshots are saved to **Gallery** by default.

## Take a Partial Screenshot


Use **Partial screenshot** to take a screenshot of a part of the screen. You can choose your preferred screenshot shape (such as a rectangle, oval, or heart).

## Use Knuckle Gestures to Take a Partial Screenshot








**i** The figures are for reference only.

- 1** Knock on the screen with a knuckle and hold to draw an outline around the part of the screen that you want to capture. Make sure that your knuckle does not leave the screen.
- 2** The screen will display the movement trajectory of your knuckle and take a screenshot of the selected area. You can then:
  - Drag the frame to the desired position or resize it.
  - Touch any of the shape options at the bottom of the screen to change the shape of the captured area. You can also keep the shape that you drew.
- 3** Touch  to save the screenshot.

### Use a Shortcut to Take a Partial Screenshot

- 1** Swipe down from the upper right edge of the screen to display **Control Panel**, touch  to expand the shortcut switches panel, touch  next to **Screenshot**, and touch **Partial screenshot** in the displayed dialog box.
- 2** Follow the onscreen instructions to draw an outline with your finger around the part of the screen that you want to capture.
- 3** The screen will display the movement trajectory of your finger and take a screenshot of the selected area. You can then:
  - Drag the frame to the desired position or resize it.
  - Touch any of the shape options at the bottom of the screen to change the shape of the captured area. You can also keep the shape that you drew.
- 4** Touch  to save the screenshot.

## Take a Scrolling Screenshot

You can use **Scrollshot** to capture a memorable chat, article, or essential work document that cannot be displayed in full on the screen.



### Use Your Knuckle to Take a Scrolling Screenshot



**i** The figures are for reference only.

- 1 Tap a knuckle against the screen and hold to draw an "S". Your device will automatically scroll to the bottom of the page to capture all of the content in a single screenshot.
- 2 You can touch the screen at any time to stop the scrolling.

### Use a Shortcut to Take a Scrolling Screenshot

- 1 Swipe down from the upper right edge of the screen to display **Control Panel**, touch  to expand the shortcut switches panel, touch  next to **Screenshot**, and touch **Scrollshot** in the displayed dialog box.
- 2 You can touch the screen at any time to stop the scrolling.

### Precautions for Using Knuckle Screenshots

- Please double knock the screen consecutively at the same place and at an appropriate speed.
- Keep your knuckle vertical to the screen.
- If you want to take more than one screenshot, wait 2 seconds before knocking on the screen again.

- If there is a screen protector on the screen, knock the screen harder or remove the screen protector and try again.

## Record the Screen

Record your screen activities in sharable videos to compose a tutorial, show off your awesome gaming skills, and a lot more.

### Use a Key Combination to Start Screen Recording

Press and hold the Power and Volume up buttons simultaneously to start screen recording. To stop recording, press and hold both buttons again.

### Use a Shortcut to Start Screen Recording

- 1 Swipe down from the upper right edge of the screen to display **Control Panel**, touch to expand the shortcut switches panel, and touch **Screen Recorder** to start screen recording.
- 2 To stop the recording, touch the timer at the top of the screen.
- 3 The recording will be saved in **Gallery**.

### Use Two Knuckles to Start Screen Recording

- 1 Go to **Settings > Accessibility features > Shortcuts & gestures > Record screen**, and ensure that **Record screen** is enabled.
- 2 Knock the screen twice in quick succession with two knuckles to start screen recording. To stop recording, knock twice again.

## Record Your Voice During Screen Recording


You can enable the microphone to record your voice while recording the screen.

After starting a screen recording, touch the microphone icon and ensure that it is displayed as



. You can now record your voice.



If the microphone is disabled (if it is displayed as ) , you will only be able to record system sounds, such as music. If you don't want any system sounds in your screen recording, mute your device and turn off any music or other media sounds before starting the screen recording.



## View and Clear Notifications

### View and Clear Notifications


#### View Notifications


After receiving a notification, unlock the screen and swipe down from the upper left edge of the screen to open the notification panel where all new messages are displayed.

## Clear Notifications

- You can remove a notification by swiping right on it.
- You can touch  at the bottom of the notification panel to clear all notifications.
-  Some system notifications and notifications from apps running in the foreground cannot be cleared.

## Do Not Disturb Settings for Notifications

If you wish not to be disturbed by a notification, swipe left on it, touch , and choose from options including **Disable notifications**, **Use gentle notifications**, and **DELAY**.

-  Some system notifications and notifications from apps running in the foreground cannot be disabled or delayed.

# Adjust Sound Settings

## Adjust Sound Settings

### Press a Volume Button to Adjust the Volume

Press the Volume up or down button to adjust the volume.

### Press the Power Button to Mute Your Device When It Rings

When your device rings for an incoming call or alarm, you can press the Power button to mute it.

### Flip to Mute

When there is an incoming call, you can flip your device to mute it.

To use this feature, go to **Settings > Accessibility features > Shortcuts & gestures > Mute ringtone/Reduce volume** and make sure that **Flip to mute ringtone** is enabled.

## Change the Sounds and Vibration Settings


You can set the messaging tone, notification tone, and call ringtone depending on your preferences, as well as set the vibration pattern.

- 1 Go to **Settings > Sounds & vibration** and touch **Phone ringtone**, **Messaging tone**, or **Notification tone**.
- 2 You can then:
  - Set a tone.  
Select a preset tone, or touch **Music on device** to select a locally saved song. If two SIM cards are being used, you can set the tones for them individually.
  - Set a vibration pattern.  
Touch **Vibration** and select a vibration pattern as you prefer.

When **Synchronised (default)** is selected, your phone will vibrate according to the rhythm of the tone.

For other options, the vibration pattern of your phone is fixed.

## Use a Shortcut to Switch Between Sound, Vibration, and Silent Modes

**1** Swipe down from the upper right edge of the screen to display **Control Panel** and touch  to expand the shortcut switches panel.

**2** Touch  **Sound**,  **Silent**, or  **Vibration** to switch between different modes.

In Sound mode, your device plays all sounds as normal.

In Silent mode, your device only mutes the ringtones for incoming calls, messages, notifications, and some third-party app notifications. Other sounds, including alarms, voice calls, music, videos, and games, will not be muted.

In Vibration mode, your device is muted and vibrates to provide discreet alerts for calls or messages.

You can also go to **Settings > Sounds & vibration** to switch between **Sound**, **Vibration**, and **Silent** modes.

## System Haptics

The system uses haptics to provide feedback when certain operations are completed, such as when you touch and hold text, a contact, or some other elements on the screen.

Go to **Settings > Sounds & vibration > More settings** and enable or disable **System haptics** according to your preferences.

## Set the Default Volume

Go to **Settings > Sounds & vibration** and you can then set the default volume for the following items:

- **Ringer, Messages, Notifications**
- **Alarms**
- **Music, Videos, Games**
- **Calls**

## Set More settings

On the **Sounds & vibration** screen, touch **More settings**, and set more notification methods according to your preferences. For example, you can set **Screen lock** and **Screen touch**.

## Raise to Reduce the Ringtone Volume

When there is an incoming call, you can raise your device up to reduce the ringtone volume.

To use this feature, go to **Settings > Accessibility features > Shortcuts & gestures > Mute ringtone/Reduce volume** and make sure that **Raise to reduce volume** is enabled.

## Enter Text

### Use Celia Keyboard

**Celia Keyboard** is a secure and intuitive keyboard developed by Huawei. It supports efficient voice inputs, smooth handwriting, an emulated mechanical keyboard, as well as 170+ input languages.

If **Celia Keyboard** is not yet installed on your device, search for it in **AppGallery** to install it. You can set **Celia Keyboard** as the default keyboard using one of the following methods:

- Go to **Celia Keyboard > Select keyboard** and select **Celia Keyboard**.
- Go to **Settings > System & updates > Language & input > Default keyboard** and select **Celia Keyboard**.

### Text Input



#### Keyboard input

**Celia Keyboard** by default comes with a 26-key layout. As you type on the keyboard, a text box will be displayed for you to select predicted words.





Press and hold a letter key and then swipe up to enter a number, or swipe left or right to enter the letter.

#### Voice input

You can speak and have your speech converted into text to improve your input efficiency.

- Touch and hold  to enter the voice input screen.
- Touch  and select a language.
- Speak into the microphone.

### Rich Media Input

- On the keyboard, go to  >  and select different emojis.
- On the keyboard, go to  >  and select different emoticons.

### Switch to Another Input Language


Touch and hold the Chinese/English button in the lower left corner and select **English(United States)** or **More languages...** in the pop-up menu.

Alternatively, touch the Chinese/English button to quickly switch between Chinese and English.

### Celia Keyboard Settings

#### Set the skin

You can set the skin of the keyboard using one of the following methods:


- Go to **Celia Keyboard > Theme** and select a skin.
- On the input keyboard, go to  > **Theme** and select a skin.

### Set the font

Go to **Celia Keyboard > Font** and select a font.

### Set the keyboard sound and vibration effects

You can set the keyboard sound and vibration effects using one of the following methods:

- Go to **Celia Keyboard > Sound & vibration** and adjust the **Keypress volume** and **Vibration intensity**. You can also touch **Sound on keypress** and select your desired audio effects.
- On the input keyboard, go to  > **Sound & vibration** and adjust the **Keypress volume** and **Vibration intensity**. You can also touch **Sound on keypress** and select your desired audio effects.

### Set the mechanical keyboard

On the input keyboard, go to  > **Mechanical keyboard** and toggle on the **Mechanical keyboard** switch.











To switch back to the normal keyboard, toggle off the **Mechanical keyboard** switch.

 Some devices do not support the mechanical keyboard.

## Multi-Window

### Edit the Multi-Window Dock

Swipe inward from the left or right edge of your device and hold to bring up the Multi-Window dock.

- **Add apps:** Go to  >  on the Multi-Window dock, select your desired apps in the **More apps** section, then touch .
- **Move apps:** Go to  > , touch and hold an app icon on the Multi-Window dock, drag it up and down to your desired position on the dock, then touch .
- **Remove apps:** Go to  > , touch  at the top right corner of an app icon, then touch .

The Multi-Window dock is enabled by default. To disable it, go to **Settings > Accessibility features > Multi-Window**, and turn off the **Multi-Window dock** switch.


## Enable Split-screen Mode

Multi-Window allows you to open apps in split screen for multitasking.



### Enable split-screen mode:

- 1 Open an app and swipe inward from the left or right edge and hold to bring up the Multi-Window dock.
- 2 Drag an app icon out of the Multi-Window dock.

### Switch the split-screen panes:

Touch and hold  at the top of a split-screen pane until the pane shrinks, then drag it to the other side of the screen to switch panes.

### Exit split-screen mode:

Touch and hold  or  in the middle of the split screen line and drag it until either pane disappears.

 Support for split-screen mode varies by app.

## Drag and Drop Between Apps with Multi-Window

Use the Multi-Window feature to easily drag and drop images, text, and documents between apps.

- Drag and drop an image: When taking notes with **Notepad**, open **Files**, select the photo you want to add, and drag it into the **Notepad** editor.
- Drag and drop text: When sending an SMS message, open **Notepad**, touch and hold the text you want to send, and drag it into the message text input box.
- Drag and drop a document: When writing an email, open **Files**, select the document you want to attach, and drag it into the email editor.

 Not all apps fully support drag-and-drop with Multi-Window.

## Multi-Window View for a Single App

You can create two task windows for the same app (such as Email and Notepad), and drag images, text, or documents between them.

 This feature is unavailable in some apps.

### Enter the split-screen view within an app.

- 1 Open the Email app.
- 2 Swipe inward from the left or right edge of your device and hold to bring up the Multi-Window dock.
- 3 Touch and hold the Email icon, and drag it to the screen to enter split-screen view.

### Drag images, text, or documents between the split-screen windows.



- **Drag an image:** Select an image from one split-screen window and drag it to the other window.
- **Drag text:** Touch and hold the text and select the desired part from one split-screen window, then touch and hold the text again and drag it to the other window.
- **Drag a document:** Select a document from one split-screen window and drag it to the other window.

## Use the Floating Window

Open a floating window while gaming, and you can chat with a friend without missing a second of the action.

### Display the floating window:

- 1 Swipe inward from the left or right edge and hold to bring up the Multi-Window dock.
- 2 Touch an app icon in the Multi-Window dock to open the app in a floating window.


### Relocate the floating window:

Drag the bar at the top of the floating window to move the window to the desired position.


### Resize the floating window:

Drag the bottom edge, two sides, or bottom corners of the floating window to resize it.


### Display in full screen:

Touch  at the top of the floating window to display it in full screen.

### Minimise the floating window:


Touch  at the top of the floating window to minimise and shrink it into a floating bubble.

### Close the floating window:

Touch  at the top of the floating window to close it.

## Find and Switch Between Floating Windows for Apps

You can quickly find and switch between floating windows for apps using the floating window management function.

- 1 Make sure that you have opened floating windows for multiple apps and minimised them into the floating ball.
- 2 Touch the floating ball to display all floating window previews:
  - **Browse through the floating window previews:** Swipe up or down to find the floating window preview of the app you are looking for.
  - **Display the floating window for an app:** Touch the floating window preview of the app to display it in a floating window.
  - **Close the floating window for an app:** Touch  on the floating window preview to close it.

## Open an Attachment in a Floating Window

You can open a link or attachment within specific apps (such as Email and Notepad) in a floating window.

 This feature is unavailable in some apps.

- 1 Open the Email app.
- 2 Touch a link or attachment in the Email app to open it in the floating window.
  - **Open a link:** Touch a link in the Email app to display it in a floating window.
  - **Open an attachment:** Touch an attachment (such as a document, image, or video) in the Email app to display it in a floating window.

## Show Date and Time When the Screen Is Off

### Show Date and Time When the Screen Is Off

With **Always On Display** enabled, the lock screen will show the date, time, and more when the screen is off.

#### Enable Always On Display




- 1 Go to **Settings > Home/Exterior screen & wallpaper > Always On Display**, and enable **Always On Display**.
- 2 Set **Display mode** as prompted.

#### Set the Style for Always On Display

You can customise the display style for Always On Display (AOD) on your device according to your preferences.

#### Select a GIF Image or Moving Picture



You can select a local image (such as a GIF image or moving picture) for Always On Display to make your display stand out.

- 1 From under **Images** on the **Always On Display** screen, go to  **> Select image >**  .  
 If you have selected a local image, touch this image and go to **Change image >**  .  
 After selecting a GIF image or moving picture, you can touch **Edit > Edit** to edit it.
- 2 Set other options available on the screen as needed, and touch **Apply**.

#### Add Graffiti



You can personalise Always On Display by specifying text to be displayed, selecting your preferred colour scheme, and adding stickers.

- 1 From under **Graffiti** on the **Always On Display** screen, touch the style you would like to use.

- 2 Enter text in the input box and set the style options, such as **Colour**. You can also add **Stickers** and drag the sticker border to adjust its position and size, and touch  or  to change its direction or delete it.
- 3 Touch **Apply**.

### Create an Artistic Image for Always On Display

You can choose from multiple modern art styles (such as the Mondrian style). You can also specify the colour scheme for the artistic image, by taking a photo or choosing from your favourite photos. The colours in the photo will form a colour palette for the artistic image.

- 1 From under **Artistic** on the **Always On Display** screen, touch the style you would like to use.
- 2 Set the related options for the **Artistic** style, such as **Layout**. When setting **Colour**, your device can parse the colours in your specified photo and apply the abstracted colour palette to the artistic image.  
Touch , take a photo or select a photo from Gallery, and then go to  > **Extract colours**.
- 3 Touch **Apply**.

### Clock Styles

You can select an **Analogue** or **Digital** clock style for Always On Display.

- 1 From under **Analogue** or **Digital** on the **Always On Display** screen, swipe left or right to browse the clock styles and select your preferred clock style.
- 2 Set the related options for the selected clock style, such as **Show date**.
- 3 Touch **Apply**.

### Get More Styles for Always On Display

On the **Always On Display** screen, touch **My AODs** or **More**.

## Power On and Off or Restart Your Device

### Turn On and Off or Restart Your Device

#### Power Your Device On and Off

To power off your device, press and hold the Power button for a few seconds, touch **Power off** and **Touch to power off**.

To power on your device, press and hold the Power button for a few seconds until your device vibrates and displays the logo.

## Restart Your Device

Restart your device on a regular basis to clear the cache and keep the device in an optimal state. A restart can sometimes resolve the issue when your device encounters a problem. Just press and hold the Power button for a few seconds, then touch **Restart** and **Touch to restart**.

## Force Restart Your Device

You can force restart your device if it isn't working or won't turn off normally. To do this, just press and hold the Power and Volume buttons (volume up button or volume down button) simultaneously for 10 seconds or longer.

# Charging

## Charge Your Device

Your device will alert you when it is running out of power. Please make sure to charge your device in time to prevent it from turning off automatically when the power runs out.

## Precautions for Charging

- Charge your device using the standard charger and USB cable that came with your device. Using other chargers may result in a fire, explosion, or other hazard.
- Do not use the charger in damp areas, such as in a toilet. Do not handle the charger with wet hands.
- Do not charge your device when there is moisture in the device.
- After you connect your device to a charger or other devices using a USB cable, your device will automatically inspect the USB port. If moisture is detected in the USB port, your device will automatically activate safety measures and stop charging. Disconnect your device from the USB port and wait until the USB port is dry.
- Do not cover your device or charger during charging.
- If your device does not power on after you press and hold the Power button, the battery may have run out. Charge for 10 minutes and then power it on.
- Disconnect the charger from this device and unplug the charger from the power socket once this device is fully charged or is not charging.
- When the battery life becomes noticeably shorter, go to an authorised Huawei Customer Service Centre to replace the battery.
- It is recommended that you avoid using your device while charging.




## Charging with a Charger

To ensure charging safety, use the charger and USB cable that came with your device.

- 1 Use a USB cable to connect the charger to your device.

## 2 Plug the charger into a power socket.

When a beeping sound is heard, your device will start charging, and the charging mode icon and current battery level will be displayed on the charging animation screen.





Icon	Charge Mode
	SuperCharge
	Fast charging
	Standard charging

## Charging Your Device with a PC

- 1 Connect your device to a PC or other device using a USB cable.
- 2 When the **Use USB to** dialog box is displayed on your device, touch **Charge only**.  
If another option has been set previously, the dialog box will not pop up. Swipe down from the upper left edge of the screen to display the notification centre, touch **Settings**, then select **Charge only**.

## Overview of Battery Icons

You can check the battery level from the battery icon on the device screen.

Battery Icon	Battery Level
	Less than 10% battery remaining.
	Charging, less than 10% battery remaining.
	Charging, 10% to 90% battery remaining.
	Charging, at least 90% battery remaining. If 100% is displayed next to the battery icon, or a charging complete message is displayed on the lock screen, the battery is fully charged.

## Reverse Charge with an OTG Cable

On-The-Go (OTG) is a USB transmission technology that allows a device to directly access files on a USB flash drive or digital camera, or connect to an external device such as a keyboard or mouse, with the help of an OTG cable.

You can use your device to charge other devices using an OTG cable.

- 1 Connect your device with the device to be charged using an OTG cable.
- 2 Swipe down from the upper left edge of the screen to display the notification centre, touch **Touch for more options**, and select **Reverse charge**.

**3** Follow the onscreen instructions on the device to be charged to start charging.


# Smart Features

## AI Voice

### AI Voice


**AI Voice** allows you to communicate verbally with your device.

To operate hands-free on your device, wake up **AI Voice** and give a voice command.

-  This feature is only available in some countries and regions.
  - Please make sure your device has been updated to the latest system version.

### Countries and Regions that Support AI Voice

**AI Voice** is only supported in certain countries and regions. You can set your location to one of these countries and regions on your device to use **AI Voice**.

-  **AI Voice** can be used in countries/regions such as the UK, France, Spain, Chile, Mexico, Colombia, Italy, Germany, Saudi Arabia, UAE, Kuwait, Jordan, Iraq, Egypt, Turkey, Thailand, the Philippines, Czech Republic, Romania, Serbia, Ukraine, Pakistan, Singapore, Poland, and Malaysia. You need to select a language supported by **AI Voice** during use.

- Go to **Settings > System & updates > Language & input > Language and region** and touch **Current region** to select a country/region from the above list.
- Go to **Settings > HUAWEI Assistant > AI Voice**, touch **Conversation language**, select a language, and follow the onscreen instructions to set it up.

### Wake up AI Voice

You can wake up **AI Voice** in multiple ways:

#### Press and hold the Power button for 1 second to wake up AI Voice

- Go to **Settings > HUAWEI Assistant > AI Voice > Wake with Power button**, and enable **Wake with Power button**.
- Press and hold the Power button for 1 second to wake up **AI Voice**.

#### Say the wakeup phrase to wake up AI Voice


- Go to **Settings > HUAWEI Assistant > AI Voice > Voice wakeup**, enable **Voice wakeup**, and follow the onscreen instructions to record your wakeup phrase.
- When you need to wake up **AI Voice**, say the wakeup phrase.

- The settings items vary by device. If your device does not provide a specific item, it indicates that the corresponding feature is not supported.
- You cannot wake up **AI Voice** with the wakeup phrase when your device is in a call.
- You cannot wake up **AI Voice** with the wakeup phrase either if you are making an audio or screen recording (with microphone enabled). In this case, you can press and hold the Power button to wake up **AI Voice**.
- This feature is only available in some countries and regions.

### Communicate with AI Voice

**AI Voice** can be in one of the following three modes: Idle, Listening, and Thinking. You can talk to **AI Voice** when it is in the Listening mode.


- Idle mode: **AI Voice** doesn't pick up any sound in this mode.
- Listening mode: You can talk to **AI Voice** as it can listen to you in this mode.
- Thinking mode: **AI Voice** can start to execute your voice commands.

 This feature is only available in some countries and regions.

### View AI Voice Skill

#### View Built-in AI Voice Skills

You can view the built-in **AI Voice** skills in either of the following ways:

- Wake up **AI Voice** and ask: "What can you do?". **AI Voice** will then display the Skill centre where the built-in skills are listed.
- Wake up **AI Voice** and follow the onscreen instructions to swipe up to enter full-screen mode. Then go to  > **Skill centre** to check the built-in **AI Voice** skills.

 • This feature is only available in some countries and regions.

- Please make sure your device has been updated to the latest system version.

### Make Calls and Send SMS Messages with AI Voice

**AI Voice** allows you to make calls or send messages hands-free.

 • This feature is only available in some countries and regions.

- Please make sure your device has been updated to the latest system version.

#### Make Calls with Voice Commands

You can make a call on your device with **AI Voice**.

Wake up **AI Voice** and give voice command, such as "Call Mom", "Call back", "Check call records", or "Redial".

 When you make calls with voice commands, hands-free mode is automatically enabled.



## Send SMS Messages with Voice Commands


You can send SMS messages with **AI Voice**.

Wake up **AI Voice** and give voice commands such as "Send a message", "Check messages", or "Send Dad a message saying the party is tomorrow".

## Set Alarms with Voice Commands

You can create, disable, and query alarms with **AI Voice**.

Wake up **AI Voice** and give voice commands such as "Wake me up at 8 AM tomorrow", "Set an alarm for 8 PM", "Set a Wednesday alarm for 7 AM", or "Show my alarms".

-  This feature is only available in some countries and regions.
  - Please make sure your device has been updated to the latest system version.


## Play Music or Videos with Voice Commands

If you want to listen to music or watch videos, wake up **AI Voice** and give the voice commands directly.

### Play Music with Voice Commands


You can request your device to play a song for you with **AI Voice**.

Wake up **AI Voice** and give voice commands such as "Play music", "Play previous song", or "Play next song".

-  This feature is only available in some countries and regions.


### Play Videos with Voice Commands

Wake up **AI Voice** and give voice commands such as "Play video", "Play Friends in HUAWEI Video", "Show me a funny video", or "Play a Coldplay video".

-  This feature is only available in some countries and regions.


## Open Apps with Voice Commands

You can quickly open an app with **AI Voice**, such as for opening the camera and taking a photo in a specific mode.

-  This feature is only available in some countries and regions.
  - Please make sure your device has been updated to the latest system version.


### Access Camera with Voice Commands

Wake up **AI Voice** and give voice commands such as "I want to take a photo" or "Take a photo".

-  This feature is only available in some countries and regions.

## Open an App with Voice Commands


Wake up **AI Voice** and give voice commands such as "Open the Camera", "Open YouTube", "Open PayPal", or "Open HUAWEI Music".

-  • This feature is only available in some countries and regions.
  - Not all apps support voice control.

## Query the Weather with Voice Commands


### Query the Weather with Voice Commands

To query the weather, wake up **AI Voice** and give voice commands such as "What's the weather like today?", "What's the weather forecast for tomorrow?", "Will it be windy today?", "Is it going to rain tomorrow?", or "What's the temperature today?".

-  • This feature is only available in some countries and regions.
  - Please make sure your device has been updated to the latest system version.

## Speech Translation

**AI Voice** allows you to translate your voice or text input so you can communicate with foreign friends easily.

-  • This feature is only available in some countries and regions.
  - Please make sure your device has been updated to the latest system version.


### Speech Translation

You can use **AI Voice** to translate your voice or text input into the target language you have set.

- 1** Wake up **AI Voice** and give the voice command "Translate".
- 2** Say or type in what you want to be translated.
- 3** **AI Voice** will display the translated result and broadcast it for you.

## Communicate Easily with Face-to-Face Translation


Face-to-face translation allows you to overcome language barriers when you are travelling abroad or in an international conference.

- 1** Wake up **AI Voice** and give the voice command "Face-to-face translation" to enter the translation screen.
- 2** Touch  so the text on each of the two sections can be read from each side of the device.
- 3** Press the button on your side of the section, say what you want to be translated, and release the button for **AI Voice** to display the translated result in real time and broadcast it.

## Set Calendar Events and Reminders with Voice Commands

**AI Voice** allows you to create and check your Calendar events and add reminders for these events.


Wake up **AI Voice** and give voice commands such as "Schedule a meeting for 9 tomorrow morning", "Set a meeting for 2 o'clock tomorrow afternoon", "What's my schedule for tomorrow morning?", or "Do I have any appointments on Monday?".

-  • This feature is only available in some countries and regions.
  - Please make sure your device has been updated to the latest system version.

## Enable AI Lens with AI Voice

You can use **AI Voice** to wake up **AI Lens**.

Wake up **AI Voice** and give a voice command such as "AI Lens".

-  • This feature is only available in some countries and regions.
  - Please make sure your device has been updated to the latest system version.

## Scan and Shop with AI Voice

- 1** Wake up **AI Voice** and give voice commands such as "Look at how much is the refrigerator", or "Help me look at the same style of this juice machine".
- 2** Position the object within the viewfinder and wait for it to be identified.
- 3** You will be provided with purchase links to different shopping platforms once the object has been recognised.

## Scan and Translate with AI Voice

- 1** Wake up **AI Voice** and ask questions or give voice commands such as "Please scan this menu and translate it" or "Scan this street sign and translate it".
- 2** Select the source and target languages from the language list.
- 3** Position the text you want to translate within the viewfinder and wait for it to be translated.

## Scan to Learn More with AI Voice

- 1** Wake up **AI Voice** and ask questions or give voice commands such as "Help me see what this flower is" or "Please have a look what is this building".
- 2** Position the object within the viewfinder and wait for it to be identified.
- 3** Touch the information card to obtain additional information.

## Scan and Count Calories with AI Voice

- 1** Wake up **AI Voice** and ask questions or give voice commands such as "Have a look how much heat this steak has", or "How much heat I can gain by eating this egg tart".

- 2 Position the food within the viewfinder and wait for the calorie and nutrient information to be displayed.


### Scan Codes with AI Voice

- 1 Wake up **AI Voice** and give voice commands such as "Scan this QR code" or "Scan the barcode".
- 2 Position the QR code or barcode within the scan frame and wait for it to be recognised.

### Enable AI Touch with AI Voice

When you see content you are interested in on the screen, wake up **AI Touch** with **AI Voice** to identify onscreen objects and obtain more relevant information.

Go to **Settings > HUAWEI Assistant > AI Touch** and enable **AI Touch**.

-  This feature is only available in some countries and regions.
  - Please make sure your device has been updated to the latest system version.

### Shop with AI Voice


- 1 Go to **Settings > HUAWEI Assistant > AI Touch** and enable **AI Touch**.
- 2 When you see an item you wish to buy on your device, wake up **AI Voice** and ask questions or give commands such as "How much is the cosmetics in the screen", "I want to buy the electric fan in the screen", or "Help me find the same style skirt on the screen".
- 3 When several items are displayed on the screen, adjust the size and position of the identification box to fit around the item you wish to identify.
- 4 After the item has been identified, links to purchase it on different shopping platforms will be displayed.

## AI Lens


### Enable AI Lens

There are several methods for you to access **AI Lens**.

#### From Camera

Open **Camera**, select **Photo** mode, and touch  to access **AI Lens**.




#### From the Lock Screen

When the screen is locked, turn it on, swipe up from the bottom to open the shortcuts panel, and touch  to unlock the screen and access **AI Lens**.

## Scan to Shop

When you see an item you wish to buy in a magazine or when you are strolling on the street, you can use **AI Lens** to quickly search for the item and compare prices across multiple shopping platforms before making a purchase.




### Scan to Shop Using Camera

- 1 Go to **Camera** > **Photo**, touch , and then touch  or  (depending on your device model).
- 2 Position the item you want to buy within the viewfinder, and wait for it to be identified.
- 3 After the item has been identified by **AI Lens**, links to purchase it on different shopping platforms will be displayed.

## Scan to Translate

**AI Lens** allows you to scan and translate text in a foreign language, so you can easily read road signs, menus, or descriptions on cosmetics bottles when you are travelling or shopping abroad.




### Scan to Translate Using Camera

- 1 Go to **Camera** > **Photo**, touch , and then touch  or  (depending on your device model).
- 2 Select the source and target languages from the language list.
- 3 Position the text you want to translate within the viewfinder, and wait for it to be translated.

## Scan to Learn More

**AI Lens** allows you to learn more about artworks or landmarks you see by scanning the objects with your camera.





### Scan to Learn More Using Camera

- 1 Go to **Camera** > **Photo**, touch , and then touch  or  (depending on your device model).
- 2 Position the object within the viewfinder and wait for it to be identified.
- 3 Touch the information card to obtain additional information.

## Scan and Count Calories

**AI Lens** allows you to count the calories and nutrients in an item of food by scanning it with your camera.



## Scan and Count Calories with Camera

- 1 Go to **Camera** > **Photo**, touch , and then touch  or  (depending on your device model).
  - 2 Position the food within the viewfinder and wait for information about the calories and nutrients per 100 g to be displayed.
-  The information is for reference only.

## Scan Codes for Services and Information

You can scan different types of QR codes and bar codes with **AI Lens**, and then touch the identified result to be redirected to other pages for more services and information.

### Scan Codes Using Camera

- 1 Go to **Camera** > **Photo**, touch , and then touch .
- 2 Position the QR code or barcode within the scan frame and wait for it to be recognised.

## AI Touch

### Enable AI Touch

When you see any content that you are interested in on your device, touch and hold the screen with two fingers spread slightly apart to bring up **AI Touch** to learn more.

Go to **Settings** > **HUAWEI Assistant** > **AI Touch** and enable **AI Touch**.

### Shop with AI Touch

When you see an item you wish to buy on your device, you can use **AI Touch** to quickly search for the item and compare prices across multiple shopping platforms before making the purchase.




### Touch and Hold the Screen with Two Fingers for Visual Shopping


- 1 Go to **Settings** > **HUAWEI Assistant** > **AI Touch** and enable **AI Touch**.
- 2 When you see an item you wish to buy on your device, touch and hold the screen with two fingers spread slightly apart to bring up **AI Touch**.
- 3 When several items are displayed on the screen, adjust the size and position of the identification box to fit around the item you wish to identify.
- 4 You will be provided with purchase links to different shopping platforms once the object has been recognised.

## Easy Projection

## Project Your Device Screen Wirelessly

Project your device wirelessly to stream films and work on a bigger screen (such as a TV). Different display devices support different projection protocols. Therefore, the projection method may vary. Choose a suitable method based on the protocol supported by your device.

- i For details about the supported projection protocols, refer to the product manual or contact the product manufacturer.
- 1** Ensure that the DVKit/Cast+/Miracast switch or the projection switch is enabled on the display device. For details about how to turn on the switch, refer to the product manual or contact the product manufacturer.
  - 2** Swipe down from the upper right edge of your device to display **Control Panel** and touch .
  - 3** In **Control Panel**, touch  to expand the shortcut switches panel, then touch **Wireless Projection**. Your device will then start searching for available external displays. You can also go to **Settings > More connections > Easy Projection** to enable **Wireless Projection**.
  - 4** Touch the device that you want to project your device to from the detected devices. By default, after the connection is successful, banner notifications for incoming calls, messages, and alarms, and Multi-Window are only displayed on your phone instead of the external display. To show notifications on the external display, touch  and turn off the switch for **Hide notifications**.

To exit wireless projection, go to  > **Disconnect**.

 
## Device Projection Using a Wired Connection

You can project your device screen on a large display (for example, a TV) using a wired connection.

It is recommended that you purchase the accessories from authorised channels.

### Projection Using a Type-C Cable

- 1** Prepare a Type-C cable. Use a Type-C to HDMI, Type-C to DP, or Type-C to MiniDP cable depending on your large display.

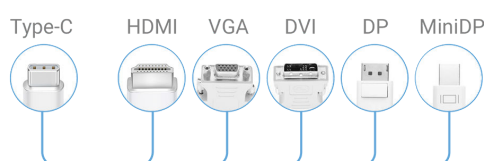

- 2** Connect the Type-C end to your device and the other end to the large display.



- 3 On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

### Projection Using a Docking Station

You can use a docking station to connect your device with a large display, and connect them with a wired keyboard and mouse.

- 1 Prepare a docking station.  
Multiple types of ports are available on a docking station. If the large display supports HDMI and you need to use a wired mouse and keyboard, use a docking station with at least one HDMI port and two USB ports.




- 2 Connect your device and the large display to the docking station, then connect the wired mouse and keyboard to the docking station.





- 3 On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

## Use Desktop Mode

After your device screen is projected, go to  > **Desktop** on your device.

In **Desktop**, your device and the large display work independently and can show different content. The content projected on the large display is in a layout similar to that on a computer desktop.

 
Therefore, you can edit a document on the large display while chatting on your device. You don't need to worry about missing out on notifications, calls, or messages, as a red dot will appear on the notification panel on the external display to let you know.


## Use Your Device as a Touchpad

After projecting your device on the large display in **Desktop**, if no keyboard is available, your device can work as a touchpad to complete input operations of a mouse and keyboard.

Go to  > **Touchpad**. You can:

- Use gestures as instructed to simulate mouse commands.

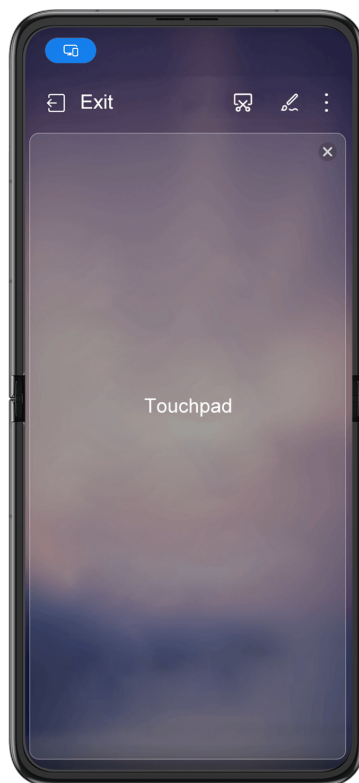

 The figures are for reference only.


- When no external keyboard is connected, touch the text input box on the external display to display the onscreen keyboard to input text.  
If an external keyboard is connected, the onscreen keyboard will not be available. In this case, you need to use the external keyboard to input text.

### Use Screen Projection to Make Work Easier

In **Desktop**, you can use the following features:

- **Multi-window display:** Open multiple windows at a time to multitask.
- **File management:** Save files to the desktop, create files or folders, and rename or delete files.
- **Quick search:** Search for documents, multimedia files, and apps using the start menu search box.
- **Quick app projection:** Touch and hold an app icon on your device to view the projection options. You can then project and open the app on the large display.


### Exit Desktop Mode

To exit Desktop mode, go to  > **Mirror screen**.






## Multi-screen Collaboration

## Multi-Screen Collaboration Between Your Device and Laptop

Connect your device to a Huawei/Honor laptop and use your keyboard and mouse to unlock and control your device, or share files across systems, making your work more productive and efficient.






 The operations may vary between PC Manager versions.

### Connect Your Device to Your Computer Through OneHop

- 1 Ensure that your computer has a Huawei Share sensor or an area labelled with a  or  icon.
- 2 On your computer, enable Wi-Fi, Bluetooth, and PC Manager, and agree to the user agreement.
- 3 Swipe down from the upper right of your device screen to display the **Control Panel**, touch  to expand the shortcut switches panel, then turn on **NFC, Wi-Fi, and Bluetooth**.
- 4 Place the NFC area (near the rear camera) on the back of your device against the Huawei Share sensor or the area with a  or  icon until your device vibrates or plays a tone.
- 5 Follow the onscreen instructions to connect your device to your computer.

### Connect Your Device to Your Laptop Using Bluetooth






- 1 Swipe down from the upper right edge of your device screen to display the **Control Panel** and enable **Bluetooth**.
- 2 Open PC Manager (version 10.0 or later) on the laptop and go to **My devices > My Phone > Connect**. Place your device above the keyboard and your laptop will start searching for your device.

 To check the version of PC Manager, go to   > **About**. To update PC Manager, go to   > **Check for updates**.

- 3 Follow the onscreen instructions to connect your device to your laptop.



### Connect Your Device to the PC by Scanning the QR Code

- 1 Open PC Manager (version 10.0 or later) on your PC, go to **My devices > My Phone > Connect**, and select the QR code option in the upper left corner.

 To check the version of PC Manager, go to   > **About**. To update PC Manager, go to   > **Check for updates**.

- 2 Ensure that your device is connected to the Internet and use it to scan the QR code displayed on the PC.
- 3 Follow the onscreen instructions to connect your device and PC.

## Connect Your Device to the PC with a USB Cable

- 1 Use a USB cable to connect your device and PC.
- 2 On the PC, open PC Manager (version 10.1 or later).
  -  To check the version of PC Manager, go to **Settings > About**. To update PC Manager, go to **Settings > Check for updates**.
- 3 Confirm to connect to the PC on your device.
  -  If you cancel the connection on your device, you can establish a wired connection again. To do so, open PC Manager and go to **My devices > My Phone > Connect > Other ways to connect > USB**.

## Disconnect Your Device from Your Laptop

After you have finished using your device and laptop, you can disconnect them using the following methods:

- Open PC Manager on your laptop and go to **My devices > My Phone > Disconnect**.
- Swipe down from the upper left edge of your device to display the notification panel and touch **DISCONNECT**.
- If your device and laptop are connected via a USB cable, remove the cable to disconnect them.

## Drag to Transfer Files Between Your Device and Laptop

After connecting your device to a laptop, you can transfer files between them to make work easier.

### Drag and drop files


After Multi-Screen Collaboration is established between your device and PC, you can drag and drop files such as pictures and videos between them to make your work easier.

Transfer files from your device to the PC.

- In the device window on the PC, open **Gallery** or **Files**, click and hold a picture or video, click and hold any of the selected files until a dragging icon is displayed, then drag the files to a folder on your PC.
- In the device window on the PC, drag the selected pictures or text and drop them in an opened document on your PC.  
For example, drag a photo or text from Notepad in the device window and drop it to an Office document opened on your PC, then continue editing on your PC.

Transfer files from your PC to your device:

- Go to **Gallery > Albums** in the device window, and drag a picture or video from your PC to the device window.
- Open **Files** in the device window, and drag a document from your PC to the device window.



-  The file will be saved in the folder that is open in **Files**, or in the **Huawei Share** folder by default.
- Open a file in the device window on the PC, then drag a picture or text from Notepad to the device window.  
For example, drag a picture on your PC to a Notepad item opened in the device window, then continue editing on your device.

### Use Huawei Share OneHop to Transfer Files

After Multi-Screen Collaboration is enabled between your device and PC, you can transfer files between them using Huawei Share OneHop, without needing a data cable or any software.


### Share pictures and videos

#### • Transfer pictures and videos from your device to your PC:

- 1 On your device, select one or more pictures and videos in **Gallery**.
- 2 Place the NFC area (near the rear camera) on the back of your device against the  or  label on the PC until your device vibrates or plays a tone. The selected pictures or videos will be quickly transferred to your PC.




#### • Transfer pictures from your PC to your device:


- 1 Right-click a picture on your PC and use Huawei Image viewer to open it.
- 2 On your device, exit **Gallery** or go to the home screen, and place your device against your PC (in the same way as above) to transfer the picture from your PC to your device.

-  Ensure that PC Manager is running version 9.0 or later.

### Record the PC screen:

Shake your device and place it against your PC to project and record the PC screen on your device.

- 1 Shake your device and immediately place the NFC area (near the rear camera) on the back of the device against the  or  label on your PC until your device vibrates or plays a tone. Your PC screen will then be projected and recorded on your device.
- 2 Touch  on your device to stop the screen recording, which will be saved to **Gallery** on your device.



-  This feature is currently supported on Intel laptops only.
  - Ensure that PC Manager is running version 9.1 or later.

### Share documents

#### • Transfer documents from your device to your PC:


- 1 On your device, use Microsoft Office to open the document you want to transfer.



- 2 Place the NFC area (near the rear camera) on the back of your device against the  or  label on the PC until your device vibrates or plays a tone. The selected documents will be quickly transferred to your PC.

- **Transfer documents from your PC to your device:**

- 1 On your PC, use Microsoft Office to open the document you want to transfer.
- 2 On your device, exit Microsoft Office or return to the home screen, then place the device against your PC (in the same way as above). The file opened on your PC will then be transferred to your device.

 Ensure that PC Manager is running version 9.1 or later.

## Operate Your Device from Your PC


After Multi-Screen Collaboration is enabled between your device and PC, you can use a mouse and keyboard with the PC to facilitate using device apps and files.

### Operate Device Apps on Your PC

#### Use a mouse to perform operations quickly

- Open an app: Click an app in the device window on your PC to open it.
- **Browse a page:** Use the mouse scroll wheel to browse web pages in the device window or scroll between desktop tabs.

#### Use a keyboard to perform operations quickly

- **Input text:** Use the input method on your PC to enter text in the device window.
- **Copy and paste text:** Press Ctrl+C on the PC keyboard to copy text and press Ctrl+V to paste it in the device window.
  -  To view information about the text you have copied recently, click the Notification Centre icon on the PC, then select the **Clipboard** tab.
- **Send messages quickly:** Press Ctrl+Enter on the keyboard to send a message in the device window.
- Exit an app: Press the ESC key on the keyboard to exit an app in the device window.

#### Always display the device window on the top

In the device window on your PC, click  >  to pin the device window so that it will be always displayed on the top, and click this icon again to unpin the device window.

### Answer a Voice or Video Call on Your Laptop

After Multi-Screen Collaboration is enabled between your device and laptop, you can use the laptop to answer voice and video calls (such as those in WeChat, QQ, and MeeTime) from your device. During a call, the audio and video can be played through your laptop and its accessories such as the speaker and camera.

Swipe down from upper left edge of your device to display the notification panel, and touch **Play audio/video on phone** or **Play audio/video on PC** to switch the audio output device.

 Please ensure that your laptop is running PC Manager 10.1 or a later version.

### Open and Edit Files on Your Device Using Apps on the PC




After connecting your device to your laptop, you can open and edit various files on your device from your laptop.





- **Documents:** Use Microsoft Office on your laptop to open a document.
- **Pictures:** Use Photoshop on your laptop to open or edit a picture.
- **Audio and video files:** Use Windows Media Player to open an audio or video file.
- **Web pages:** Use IE browser on your laptop to open a web page.
- **Compressed files:** Use WinRAR on your laptop to extract and open compressed files.

 Please ensure that your laptop is running PC Manager 10.1 or a later version.

### Cross-Device Distributed File Management

After your device is connected to your laptop, you can view and access files on the device by category on the laptop, and save the files being edited on the laptop to the device.

 • Make sure that your laptop is running PC Manager 11.1 or a later version. In addition, go to   > **Settings** > **Connections** in PC Manager to ensure that **Multi-Device Files** is enabled.

- To check the PC Manager version, go to   > **About**. To update PC Manager, go to   > **Check for updates**.

**View files on your device from the laptop:** Use the following methods:

- Open PC Manager, click **Home**, then go to **Connect your phone** > **Access phone files** for your device.
- Open PC Manager and go to **My devices** > **My Phone** > **Access phone files**.
- On the desktop of your laptop, double-click **This PC** and open the drive named after your device.

**Access files on your device from your laptop:** When viewing files on your device by category from your laptop you can directly drag photos, text, and other files to an open document or a folder on your laptop. For example, you can drag a photo from your device to a note that you are editing on your laptop, or to an email you are writing on your laptop to send it as an email attachment.


**Save files from your laptop to your device:** You can save a file being edited or an email attachment on your laptop to the corresponding folder of your device that is connected to your laptop.

## Share Your Device's Mobile Data Network with Your Laptop

After Multi-Screen Collaboration is enabled between your device and laptop, you can share your device's hotspot with your laptop in PC Manager.

- 1 Ensure that your device is connected to the Internet using mobile data.
- 2 Open PC Manager and go to **My devices > My Phone > Instant Hotspot**.

After Instant Hotspot is enabled, your laptop will use your device's mobile data to access the Internet.


-  Please ensure that your laptop is running PC Manager 11.0 or a later version.
  - The operations may vary between PC Manager versions.

## Multi-screen Collaboration Between Your Tablet and Phone

### Multi-screen Collaboration Between Your Phone and Tablet


Connect your phone and tablet to use Multi-screen Collaboration for cross-device operations, such as to display your phone screen on the tablet, use your phone apps on the tablet, drag files across the two devices, and edit a file from your phone on the tablet.

#### Connect Your Tablet and Phone

-  Only certain Huawei and Honor tablets support this feature.

Connect your phone and tablet and enable Multi-screen Collaboration using one of the following methods (depending on your device model):

#### Connect over Bluetooth:

- 1 Swipe down from the upper right edge of the tablet screen to display **Control Panel**, touch  to expand the shortcut switches panel, and enable **Multi-Screen Collaboration**.
- 2 Swipe down from the upper right edge of the phone screen to display **Control Panel** and enable **Bluetooth**.
- 3 Hold your phone close to your tablet and follow the onscreen instructions to establish a connection.


#### Scan a QR code to connect:

- 1 Open **Multi-Screen Collaboration** on your tablet and touch **Scan to connect** on the **Multi-Screen Collaboration** screen.
- 2 Ensure that your phone is connected to the Internet and connect your phone and tablet as prompted.

#### Connect by tapping against an NFC-capable keyboard:



You can place your phone against the standard NFC-capable keyboard that comes with your tablet to enable Multi-screen Collaboration.

- 1 Make sure that your tablet has been paired with the keyboard.
- 2 Swipe down from the upper right edge of the phone screen to display **Control Panel**, touch  to expand the shortcut switches panel, and enable **NFC**.
- 3 Tap the NFC area at the back of your phone (near the rear cameras) against the NFC area of the keyboard until your phone vibrates or plays a tone.
- 4 Connect your phone and tablet as prompted.

### Access Phone Apps and Files from Your Tablet

After connecting your phone with your tablet, you can operate your phone from your tablet, such as to use phone apps and files, view phone notifications (such as SMS messages), and make or answer phone calls.

When your phone screen is unlocked, you can perform the following operations in the phone window on your tablet:

- Open **Phone** to make a call by dialling a number.
- Open **Messaging** to view and reply to SMS messages.
- Open **Gallery** or **Files** to view photos, videos, and files, as well as to play video or audio files from your phone.
- Swipe down from the upper left edge of your phone or tablet screen to display the notification panel and touch **Play audio/video on phone** or **Play audio/video on tablet** to switch between playback devices.
- If your tablet is connected to an external keyboard or a stylus, you can use it to input text and control the phone window on your tablet.

### Drag to Transfer Files Between Your Phone and Tablet


- 1 Open **Gallery** or **Files**, and touch and hold a picture, video, or document.
- 2 Select more files if needed, touch and hold any of the selected files, then drag them when an icon for dragging files appears.

For example, you can:

- Drag to transfer files in **Gallery** or **Files** between your phone and tablet.
- Drag to transfer files in **Files** between your phone and tablet.
- Drag a picture, text, or file from your phone to an open document on your tablet, such as a Microsoft Office document, memo, or email.

### Disconnect Your Phone from Your Tablet

After you have finished using your phone and tablet, you can disconnect them using the following methods:

- On the phone window displayed on the tablet, touch  to disconnect.
- Swipe down from the upper left edge of your phone or tablet screen to display the notification panel and touch **DISCONNECT**.


## Huawei Share


### Share Files Between Devices with Huawei Share

You can use Huawei Share to easily share files wirelessly between Huawei devices.

#### Share Online Files Between Devices

 
Share videos, websites, and other content in apps (such as **Video**, HUAWEI Browser, and Dianping) as links via Huawei Share. The content will be displayed directly on the receiving device once received.


- 1** On the receiving device, enable **Huawei Share**.
- 2** On the sending device, open the app or website you want to share the content from, go to  > **More**, touch **Huawei Share**, wait for the system to scan for available devices, and touch the name of the device you want to send the content to.
- 3** On the receiving device, touch **Accept** to accept the transfer. The content will be opened upon completion of the transfer.


-  • The operations may vary depending on the app you share from.
  - Please make sure both devices have been updated to the latest system version.


#### Share Local Files Between Devices

If both devices support ultra-fast transmission, you can share a 2 GB film or a series of albums with a lot of photos between the devices within 30 seconds via **Huawei Share** (for the list of devices that support ultra-fast transmission, please visit the official website). You can preview the content on the receiving device before the transfer. Upon receiving the file, the content will be displayed directly on the receiving device. For example, the recipient will be automatically directed to Gallery to view received pictures and videos.

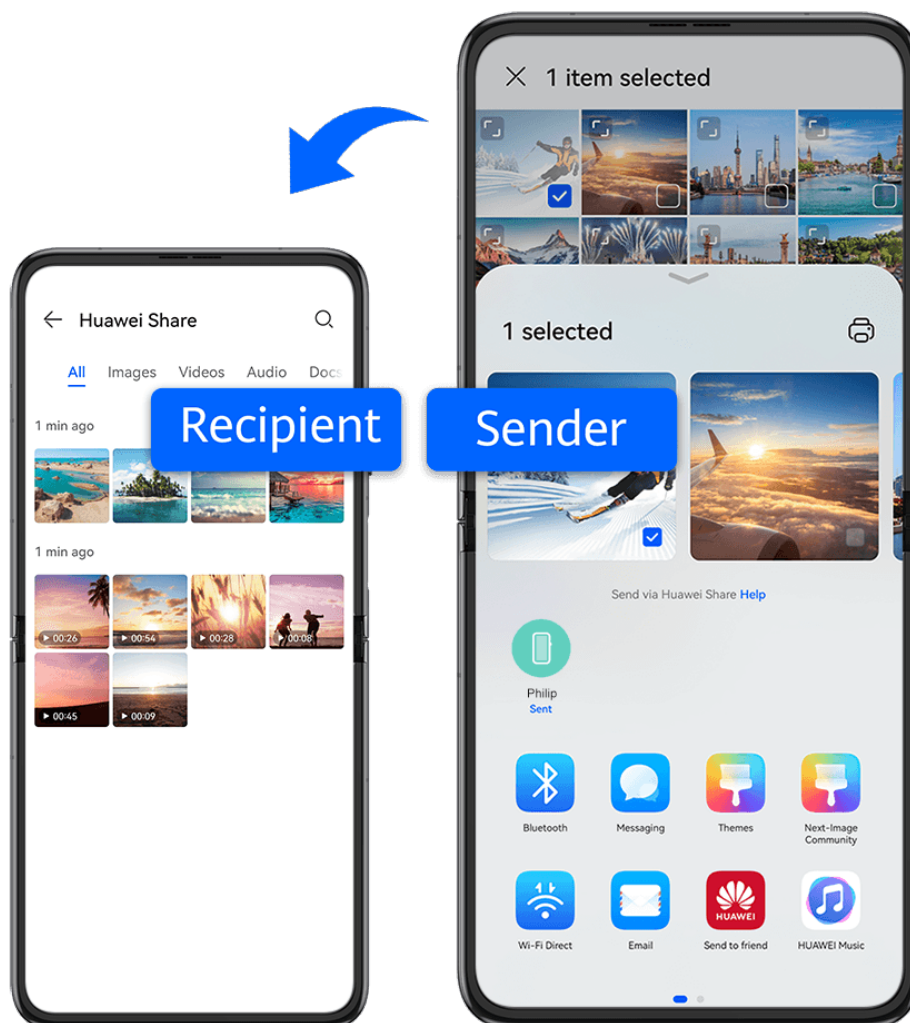

 The figures are for reference only.

- 1 On the receiving device, enable **Huawei Share**.
- 2 On the sending device, touch and hold the file to be shared, and touch . Then touch **Huawei Share**, wait for the system to scan for available devices, and touch the name of the device you want to send the file to.

 These steps may be different if you are sharing files directly from an app.

- 3 On the receiving device, touch **Accept** to accept the transfer.

Then open **Files** to view the received file.


You can also view the received images or videos by going to **Gallery > Albums**.

## Share Files Between Your Device and Computer with Huawei Share

 You can use Huawei Share to easily share files wirelessly between your device and a computer (Windows or macOS).

### Share Files from Your Device to Your Computer

Share files from your device to your computer using Huawei Share. You can then easily access the shared folders on your device from your computer.

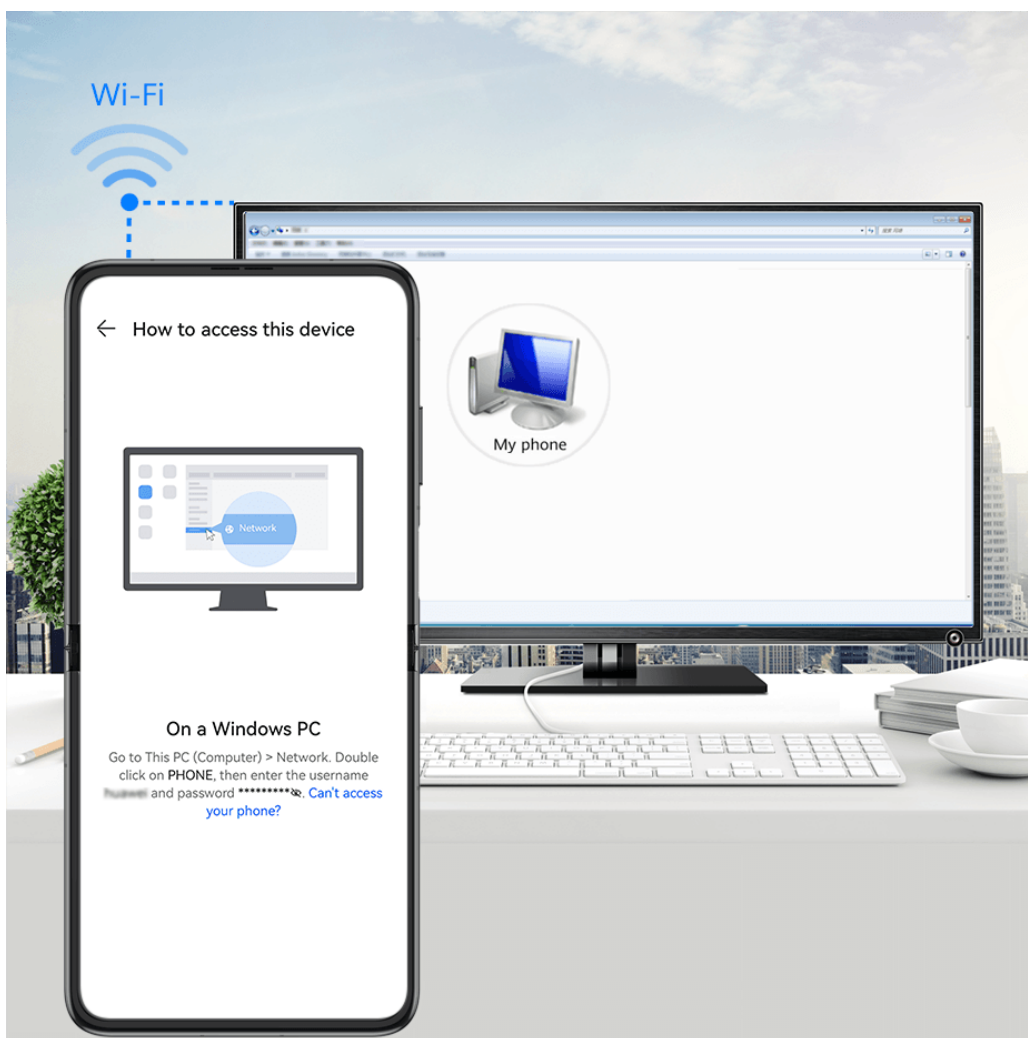


**i** The figures are for reference only.

- 1 Make sure your device and computer are connected to the same Wi-Fi network.
- 2 On your device, access the **Huawei Share** settings, then enable **Huawei Share** and **Computer Share**.
- 3 Make a note of the name displayed next to **Name shown on computers** as well as the user name and password under **Verification**.
- 4 Perform the following operations on a Windows-based computer (desktop or laptop) or a macOS-based computer (laptop):
  - Windows: Go to **This PC (Computer) > Network**.
  - macOS: Go to **Finder > Go > Network**.
- i** Currently, this feature is only available on Macs running macOS 10.8 to 10.14.
- 5 On your computer, double-click the name of your device and enter the user name and password that you made a note of.
- 6 Open a shared folder, such as the **Internal storage** or **Album** folder, to view, edit, or copy files from your device to your computer or vice versa.  
Changes made to files in the shared folders on your computer will be automatically synced to your device and vice versa.

## Share Files Between Your Device and Computer

You can use Huawei Share to share files between your device and Huawei computer.

- 1 Swipe down from the upper right edge of your device to display **Control Panel**, touch  to expand the shortcut switches panel, then enable **Huawei Share**.
- 2 Open PC Manager on your computer and enable **Huawei Share**.

You can transfer files in the following ways:

#### **From your device to your computer:**

- 1 On your device, touch and hold to select files to be transferred, then touch **Share**.
- 2 From the device list, select the name of the target computer.
- 3 In the displayed dialog box on your computer, click **Accept**.
- 4 After the transfer is successful, the folder where the transferred files are saved will be automatically opened on your computer for your easy access.


#### **From your computer to your device:**

- Transfer by sharing

- 1 On the computer, right-click the files to be transferred and select **Huawei Share**.
- 2 From the device list that pops up, select your device.
- 3 In the displayed dialog box on your device, touch **Accept**.

- Transfer by dragging

- 1 Select the file to be transferred and drag it to the corresponding device on the Huawei Share screen.
- 2 In the displayed dialog box on your device, touch **Accept**.


-  Ensure that PC Manager is running version 11.1 or later.

## Huawei Print

### **Print Files Using Huawei Print**

Your device can easily detect nearby printers that support Huawei Print and allows you to print photos and documents stored on your device with just a touch.

- 1 Power on the target printer and ensure that it is connected to the same Wi-Fi network as your device or that Wi-Fi Direct is enabled.
- 2 You can print files stored in different locations on your device:

- **Gallery:** Open one or select multiple photos in **Gallery** and go to **Share** > .
- **Files:** Select one or more files in **Files** and go to **Share** > **Print**.
- **Third-party apps:** Open the document you want to print in a third-party app, such as WPS, and go to **Share** > **More** > **Huawei Print**.

-  The operations may vary depending on the app you use.

- 3** Touch **Select** to detect nearby printers and select the one you need. You can then set the number of copies, colour, paper size, and other options on the preview screen, then touch **PRINT**.  
If no printer is detected, download and install the printer plug-in as prompted on the **Select printer** screen.

## Multi-Device Collaboration

### Work Seamlessly Across Devices with Device+

**Device+** allows for collaboration between different devices, making your phone the hub of your nearby tablets, computers, Visions, and other supported devices for them to be controlled conveniently. You can also seamlessly transfer ongoing tasks on your phone, from MeeTime calls to audio and video content being streamed, to your Vision with just a tap, and you can easily view the phone screen projected to your computer, or edit files on your phone using your computer.

 Please make sure your device has been updated to the latest system version.

### Set Device+

Currently, **Device+** supports linking phones with the following types of devices. To use this feature, make sure that devices to be connected support **Device+**. Before you get started, enable Bluetooth and Wi-Fi and log in to your HUAWEI ID on your phone. For other devices, perform the following settings:

- **Tablet:** Enable Bluetooth and Wi-Fi, and ensure that it is logged in to the same HUAWEI ID as your phone.
- **Computer:** Enable Bluetooth and Wi-Fi, and ensure that it is logged in to the same HUAWEI ID as your device and can access the Internet.
- **Vision:** Ensure that it is connected to the same LAN and logged in to the same HUAWEI ID as your device.
- **Bluetooth device:** Some Bluetooth devices (such as Bluetooth headsets) can be linked with your device via **Device+** after establishing a Bluetooth connection.

**Show Device+:** If **Device+** is hidden or cannot be found, go to **Control Panel** and then to



> **Show Device+**.


### Transfer MeeTime Calls and Audio or Video Being Streamed to Other Devices

When you are making MeeTime calls on your device, watching videos (such as in HUAWEI Video, Youku, or other video streaming apps), or listening to music, you can transfer any of these ongoing tasks to another device via **Device+** and pick up from where you left off on the new device. For instance, you can transfer a MeeTime call to your Vision and a video being streamed to your tablet.


 **MeeTime:** This feature is only available in some countries and regions.

You can select different devices to transfer the following tasks:

- **Videos:** Can be transferred to tablets and Visions.
- **MeeTime calls:** Can be transferred to Visions.
- **Music:** Can be transferred to Bluetooth earphones and Visions (either when the screen is on or off).


- 1 Swipe down from the upper right edge of your device to display **Control Panel**. Available devices will be displayed in the **Device+** section. You can also touch  to search for nearby devices manually.
- 2 Touch a device that you want to transfer the ongoing tasks to.



 The figures are for reference only.

### Use Multi-Screen Collaboration on a Computer or Tablet

You can view or edit files on your phone using your computer or tablet, drag files across devices, and even use phone apps on your computer or tablet.


- 1 Swipe down from the upper right edge of your device to display **Control Panel**. Available devices will be displayed in the **Device+** section. You can also touch  to search for nearby devices manually.

- 2 Select a device that you want to connect to, and your device screen will then be displayed on that device.

To stop Multi-Screen Collaboration, touch the corresponding device again in the **Device+** section.

## Control AI Life Scenes and Devices


You can access existing **AI Life** scenes and devices from **Control Panel** for easier control.

- 1 Swipe down from the upper right edge of your device to display **Control Panel**. You can then turn a smart device on or off, or access the device details screen to manage the device.
- 2 You can go to  > **Edit devices**, then add or delete a scene or device card displayed in **Control Panel**.

## AR Measure


### Use Your Device to Measure Height, Volume, and More



AR Measure enables you to measure height, volume, and more without needing a measuring tape.

-  Before taking measurements, ensure that your surroundings are well lit and clear of obstacles and reflective objects.




### Measure Height


In the **Tools** folder on your home screen, touch **AR Measure** and select **Height** or go to

**People** >  (depending on your device model) to measure height automatically or manually.


-  If the  icon cannot be found in the viewfinder, it means that your device does not support automatic height measurements.

### Manually measure height


- 1 If your device supports automatic measurements, touch  to disable auto mode first. Frame the subject's feet in the viewfinder and slowly move your device to locate the plane.
- 2 When the plane is identified, move your device to point  at the subject's feet and touch  to add a starting point.
- 3 Slowly move your device upwards until the camera points at the subject's face. When the subject's face is identified, your device will automatically display the subject's height.
- 4 Drag the end point to fine-tune the measurement result.


Touch  to take a photo of the subject and the measurement result.









-  To manually measure the height of two or three people at the same time, get them to stand side by side, then mark the feet of one subject as the starting point. Lift your device until your subjects' faces have been identified, at which point their individual heights will be displayed.

### Automatically measure height




- 1 On a device that supports automatic height measurements, touch  and make sure that auto mode is enabled. Frame the subject's feet in the viewfinder and slowly move your device to locate the plane.
- 2 When the plane is identified, follow the onscreen instructions and slowly move your device upwards until the camera points at the subject's face. When the subject's face is identified, your device will automatically display the subject's height.

Touch  to take a photo of the subject and the measurement result.

### Measure Length



- 1 On the **AR Measure** screen, go to **Objects** >  or touch **Length**.
  - 2 Frame the surface on which the object is resting in the viewfinder and slowly move your device to locate the plane.
  - 3 Move your device to point  at one end of the object and touch  to add a starting point.
  - 4 Move your device slowly so that  travels along the edge of the object until it reaches the end. Touch  to complete the measurement.
  - 5 Your device will automatically display the result.  
Drag the end points to fine-tune the measurement result.
-  For best results, keep a distance of 0.3–1.5 m (about 1–5 ft.) between your device and the object.

### Measure Area








-  Currently, only the area of rectangles can be measured.
- 1 On the **AR Measure** screen, go to **Objects** >  or touch **Area**.
  - 2 Frame the surface on which the object is resting in the viewfinder and slowly move your device to locate the plane.
  - 3 When your device identifies the plane of the object, it will automatically display a frame that matches the size of the plane. When the frame matches the size of the plane, touch .
  - 4 Your device will automatically display the result.  
Drag the tips of the object to fine-tune the measurement result.

## Measure Volume



On the **AR Measure** screen, go to **Objects** >  or touch **Volume**. Both automatic and manual measurements are supported.

- 
  - If the  icon cannot be found in the viewfinder, it means that your device does not support automatic volume measurements.
  - Currently, only the volume of cubes and cuboids can be measured.
  - Make sure the object is not placed against a wall and there is a distance of 1 to 1.5 m (3.3 to 5 ft.) between your device and the object.

### Manually measure volume

- 1** If your device supports automatic measurements, touch  to disable auto mode first. Frame the surface on which the object is resting in the viewfinder and slowly move your device to locate the plane.
- 2** When the plane is identified, move your device to point  at the object's bottom edge and touch  to add a starting point.
- 3** Move your device slowly so that  travels along the long edge of the object until it reaches the end. Then touch .
- 4** Move your device to create a frame for the bottom of the object. When the frame matches the bottom length and width of the object, touch .
- 5** Move your device to create a frame for the whole object. When the frame matches the size of the whole object, touch . Your device will automatically display the result.
- 6** Drag the tips of the object to fine-tune the measurement result.

### Automatically measure volume


- 1** On a device that supports automatic measurements, touch  and make sure that auto mode is enabled. Frame the object in the viewfinder and slowly move your device to locate the plane.
- 2** When your device identifies the plane and recognizes the object, a frame will be displayed automatically. Then touch . Your device will automatically display the result.
- 3** Drag the tips of the object to fine-tune the measurement result.

# Media Controller

## Audio Control Panel



### Manage Audio Playback in Audio Control Panel

When multiple audio apps (such as **Music**) are opened, you can manage music playback and switch between these apps in Audio Control Panel with ease.

- 1 After opening multiple audio apps, swipe down from the upper right edge of the device to display **Control Panel**, then touch the audio playback card at the top of **Control Panel**.
  - 2 The currently and recently used audio apps will be displayed in Audio Control Panel where you can manage playback (such as playing, pausing, and switching to the previous or next song) in the app in use, or touch another audio app to quickly switch playback.
-  Some apps need to be updated to the latest version before using this feature.
    - Not all apps support Audio Control Panel.

### Quickly Switch Audio Playback Device

When your device is connected to an audio device (such as a headset, Bluetooth speaker, or Vision product), you can quickly switch the playback device in the audio control section in **Control Panel** (such as for transferring the current music playback from your device to a Bluetooth speaker).

- 1 Connect your device to an audio device via Bluetooth or other methods.  
After a Vision product is connected to your device via Bluetooth, you can also connect it to the same Wi-Fi network and log in to the same **HUAWEI ID** as your device to perform more operations.
- 2 Swipe down from the upper right edge of your device to display **Control Panel**, touch  or the device icon (such as  ) in the top right corner of the audio control section at the top, then select the audio device from the connected device list to transfer the current audio playback on your device to the device.

# Camera and Gallery

## Launch Camera

### Launch Camera

There are multiple ways to open the Camera app.

#### From the Home Screen


From the home screen, open **Camera**.

#### From the Lock Screen

When the screen is locked, turn on the screen, then swipe up on the camera icon in the lower right corner to open the camera.

 
#### Using Ultra Snapshot

When this feature is enabled, you can open the camera or take a snapshot when the screen is off or locked.

- 1 Go to **Camera** >  > **Ultra Snapshot** and select **Open Camera** or **Take a snapshot**.
- 2 You can now double-press the Volume down button to open the camera or take a snapshot without unlocking or turning on your screen.

## Take Photos


### Take Photos

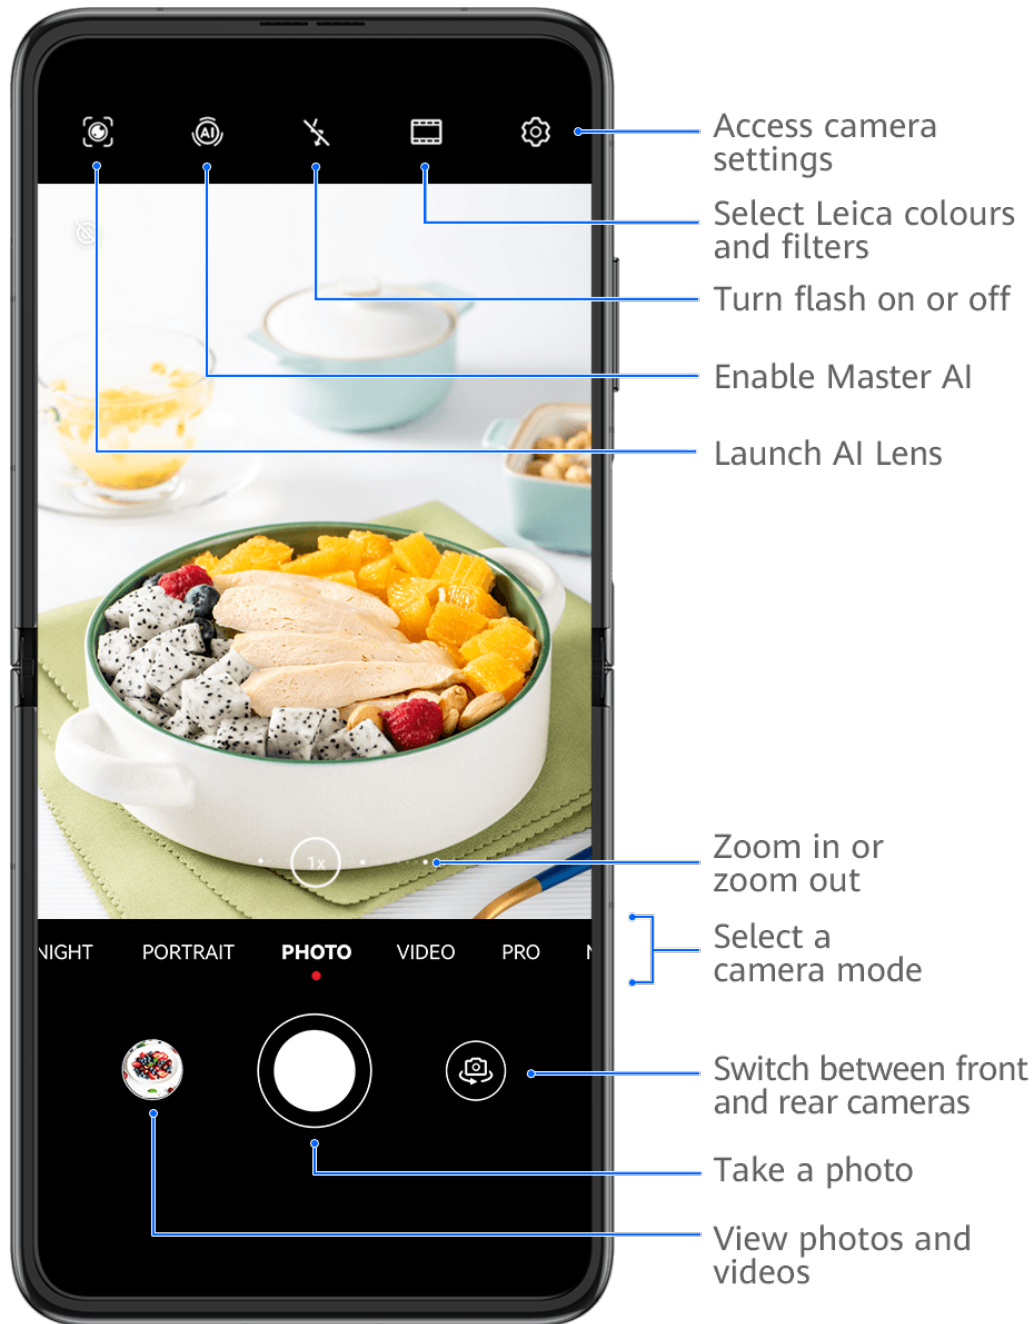







**i** The figures are for reference only.

## 1 Open **Camera**.

## 2 You can then:

- **Focus:** Touch the location you want to focus on.  
To adjust focus and metering separately, touch and hold the viewfinder and drag the respective frame or ring to the desired location.
- **Adjust brightness:** Touch the viewfinder. When the  symbol appears next to the focus frame, drag it up or down.
- **Zoom in or out:** On the viewfinder, pinch in or out, or drag the zoom slider.
- **Select a camera mode:** Swipe up, down, left, or right across the camera mode options.

- Turn the flash on or off: Touch  and select  (Auto),  (On),  (Off), or  (Always on).


If you select  (Auto) and the camera detects that you are in a dimly lit environment, a flash icon will appear in the viewfinder and the flash will be automatically turned on when you take a photo.

 These features may not be available in some camera modes.

**3** Touch the shutter button to take a photo.

### Use the Floating Shutter to Take Photos

You can enable the floating shutter to display it in the camera viewfinder, and drag it anywhere you like to take photos quickly.




- 1** Go to **Camera** >  and enable **Floating shutter**.
- 2** The floating shutter will then be displayed in the viewfinder. You can drag it anywhere you like.
- 3** Touch the floating shutter to take a photo.


### Take Burst Photos

Use Burst mode to take a sequence of photos in quick succession so you can choose the best one.

- 1** Open **Camera**, select **Photo** mode, and make sure the rear camera is in use.
- 2** Press and hold the shutter button or one of the Volume buttons to take burst photos. When shooting, you'll see a number in the viewfinder, which indicates how many photos you've taken so far.
- 3** Release your finger to stop shooting.

### Select the Burst Photos You Want to Keep

- 1** Open **Gallery**. Touch a burst photo (which is tagged with ) , then touch .
- 2** Swipe through the burst photos, select the ones you want to keep, then touch  and follow the onscreen instructions.

To delete the whole burst photo, touch and hold to select the photo, then touch .

### Take Timed Photos


The camera timer allows you to set a countdown so you can get into position after you have touched the shutter button.

- 1** Go to **Camera** >  > **Timer** and select a countdown.

- 2 Return to the viewfinder and touch the shutter button. Your device will take a photo when the countdown ends.

### Use Audio Control to Take Photos

You can use your voice to take photos without having to touch the shutter button.

- 1 Go to **Camera** >  > **Audio control**, and select an option.
- 2 Go back to the viewfinder, then say your command to take a photo.

### With Fluorescence Mode, Reimagine How You Take Photos

The back of your device comes with an ultra spectrum illuminator, which allows you to use **Fluorescence** mode to take fluorescent photos in extremely dark environments.


- 1 Go to **Camera** > **More** and select **Fluorescence**.
- 2 In an extremely dark environment, point the camera at the subject and touch the shutter.

## Shoot in Portrait, Night, and Wide Aperture Modes

### Use Portrait Mode to Shoot Portraits


Portrait mode lets you apply beauty and lighting effects to your photos to shoot stunning portraits.


- 1 Open **Camera** and select **Portrait** mode.
- 2 Frame your subject within the viewfinder.

To take a selfie, touch .


- 3 You can then:

- Enable beauty effects: Touch  and adjust the beauty settings.

To disable the beauty effects, drag the setting to its lowest value, or touch .

- Set lighting effects: Touch  and select your preferred effect.
- Light compensation: When you switch to the front camera and the ambient light is dim, touch the flash icon at the top of the screen to enable light compensation.


Touch the flash icon and select  (Auto) or  (Always on).

 Not all devices support these features.

- 4 Touch the shutter button to shoot a photo.

### Take Night Shots







Night mode gives your photos sharper details and brighter colours even when shooting in low light or at night.

- 1 Open **Camera** and select **Night** mode.
  - 2 When shooting with the rear camera, some devices allow you to adjust the ISO sensitivity and shutter speed by touching **ISO** or **S** in the viewfinder.
  - 3 Steady your device and touch the shutter button.
  - 4 Your device will adjust the exposure time based on the ambient brightness. Keep your device steady until the countdown finishes.  
You can also touch the shutter button to take a photo before the countdown finishes.
-  Some devices do not support ending a countdown before it is due to finish.

### Use the Front Camera to Take Night Portraits

To take a selfie at night or when there is not sufficient light around you, you can use the front camera in Night mode.


In a dim environment, you can turn on the flash to get an illuminated photo of your face.

- 1 Open **Camera** and select **Night** mode.
  - 2 Touch  to switch to the front camera and:
    - Touch the flash icon at the top of the screen and select  (auto) or  (steady on) to enable the flash. This allows you to capture an illuminated photo of your face when there is not sufficient light around you.
    - Touch  to adjust the beauty effect.
-  If the  icon cannot be found in the viewfinder of your device, it means that beauty mode is not supported.
- 3 Steady your device and touch the shutter button.

## Aperture

### Take Wide Aperture Photos





Wide aperture mode allows you to shoot photos and videos with a blurred background while your subject remains in sharp focus.

- 1 Open **Camera** and select **Aperture** mode.
- 2 Touch where you want to focus. For best results, your device needs to be within 2 m (about 7 ft.) of your subject.
- 3 Touch  in the viewfinder and drag the slider to adjust aperture settings. A smaller aperture value will create a more blurred background.
- 4 Touch the shutter button to shoot a photo.



## Edit Background Blur in Wide Aperture Photos

You can adjust the focus and background blur after you've taken a wide aperture photo.




- 1 Go to **Gallery** > **Albums** > **Camera**.
- 2 Touch a photo tagged with , then touch  at the top of the photo.
- 3 Touch the photo to adjust the focus. Drag the slider at the bottom to adjust the aperture.
- 4 Touch  to save the settings.
- 5 Touch  to save the edited photo as a new photo. The new photo does not allow background blur editing.

## Master AI

### Take Professional-Looking Photos

Master AI is a pre-installed camera feature that helps you take better photos by intelligently identifying objects and scenes (such as food, beaches, blue skies, and greenery, as well as text) and optimising the colour and brightness settings accordingly.

 Master AI is displayed as AI photography or AI camera on some devices.


- 1 Open **Camera** and select **Photo** mode.
- 2 Touch to turn on .
- 3 Frame the subject within the viewfinder. Once the camera identifies what you are shooting, it will automatically recommend a mode (such as portrait, greenery, or text).
- 4 To disable the recommended mode, touch  next to the mode text or turn off .

## Zoom to Take Photos

### Take Wide-Angle or Long-Focus Photos

The zoom capabilities of your device's camera allow you to capture more of a scene, or distant vistas.

#### Take Wide-Angle Photos


- 1 Open **Camera** and select **Photo** mode.
- 2 Ensure that  is enabled.
- 3 Aim the camera at the object you want to take a photo of. The camera will automatically recommend **Super wide angle** mode if it detects a building. Touch **Wide** to have a wider angle of view.

You can also drag the zoom slider in the viewfinder, or pinch in or out to adjust the zoom level. A smaller value will result in a wider angle of view.

- 4 Touch  to take a photo.

### Automatically Switch to Wide Angle When Taking Selfies with the Front Camera


When the front camera of your device detects multiple people in the frame, it will automatically switch to the wide angle to fit more people into your photo.


- 1 Open **Camera**, select **Photo** or **Portrait** mode, then touch  to switch to the front camera.
- 2 After you switch your device from portrait to landscape orientation, the camera will automatically switch to Wide-angle mode. When there are three or more people in the viewfinder, the camera will automatically switch to the widest angle in Wide-angle mode. You can also drag the zoom slider in the viewfinder to manually switch between zoom levels.

- 3 Touch  to take a photo.

### Take Photos from Far Away



- 1 Open **Camera** and select **Photo** mode.
- 2 Point the camera at a distant subject and zoom in or out using the side bar or by pinching or spreading two fingers on the screen.  
If your device supports zooming in more than 15X, a picture-in-picture preview frame will be displayed in the viewfinder to help you focus on your subject when you zoom in more than 15X.

 Some products do not support the picture-in-picture preview frame.

- 3 In the viewfinder, touch where you want to focus, and touch  to shoot when the subject is in focus.

## Macro

### Automatically Switch to Super Macro Mode

- 1 Open **Camera**. When the camera is close enough to the object you want to shoot, it will automatically focus on the object. If  is enabled, the screen will display **Super macro**.
- 2 Touch  to take a photo.




## Take Panoramic Photos

## Take Panoramic Photos




Add some width to your landscape or group photos with the Panorama feature. The camera takes multiple photos of objects within your field of view and stitches them together into a single panoramic photo.

### Use the Rear Camera to Take Panoramic Photos

**Panorama** mode combines multiple shots into a seamless panoramic photo. Simply move the camera as you shoot and the camera will take care of the rest.

- 1 Go to **Camera** > **More** and select **Panorama** mode.
- 2 Touch  and set the pan direction.
- 3 Point the camera at your starting point, then touch  to start shooting. Move the camera in the direction of the arrow displayed on the screen. Keep the arrow on the centre line when you are taking the photo.
- 4 Touch  when you are finished.

### Use the Front Camera to Take Panoramic Selfies



- 1 In **Panorama** mode, touch  to switch to the front camera.  
Touch  and drag the slider to adjust the beauty effect. A larger value will produce a more pronounced beauty effect.
  - 2 Point the camera at the centre of your shot, then touch  to take the first photo.
  - 3 Turn the camera to the left and right slowly as instructed. When the two frames on the viewfinder overlap, the camera will automatically take the second and last photos.
- After the three photos are taken, the camera will automatically combine them into a panoramic photo.

## Monochrome Photography

### Monochrome




#### Take Black and White Photos

Black and white photography removes distracting colors to help you focus more on form, shape, and texture.

- 1 Go to **Camera** > **More** and select  mode.
- 2 Touch  to take a photo.

## Take Monochrome Videos


Monochrome videos filter out colours and highlight the contrast and details.

- 1 Go to **Camera > More** and select  mode.
- 2 Touch  to switch to Video mode.
- 3 Touch the shutter button to begin recording. While shooting, you can touch  to take a photo.



## AR Lens

### AR lens

#### Use 3D CuteMoji to Create Your Own Emojis


- 1 Go to **Camera > More**, select **AR lens** mode, and touch **3D CuteMoji**.
- 2 Select your preferred CuteMoji for it to track and imitate your facial expressions and movements.
- 3 If the **GIF** icon is displayed at the top of the screen, touch **GIF** to enable GIF mode, then look straight at the front camera.
- 4 Touch and hold  to start recording.
- 5 After the recording is complete, add text or directly save the emoji. The emoji will be saved to Gallery in GIF format.

#### Use 3D CuteMoji to Record Videos

- 1 Go to **Camera > More**, select **AR lens** mode, and touch **3D CuteMoji**.
- 2 Select your preferred CuteMoji for it to track and imitate your facial expressions and movements.
- 3 If the **GIF** icon is displayed at the top of the screen, touch **GIF** to disable GIF mode, then look straight at the front camera.
- 4 Touch  to start recording
- 5 Touch  to finish recording.

#### Animate Your Photos with 3D CuteMoji

- 1 Go to **Camera > More**, touch **AR lens**, then touch **3D CuteMoji**.
- 2 Select your preferred CuteMoji for it to track and imitate your facial expressions and movements.
- 3 If **GIF** is displayed at the top of the screen, touch **GIF** to disable it.

- 4 Touch  to switch to Photo mode and position yourself in front of the front camera so your face is in view.
- 5 Touch the shutter button to take a photo.

### Enable or Disable Background



When in **3D CuteMoji** mode, touch  before you take a photo or video to turn the background on or off.

## Moving Pictures

### Take Moving Pictures to Bring Photos to Life


When you want to capture a photo-worthy moment, but do not feel sure about when to touch the shutter button, you can use the Moving picture feature.

#### Take Moving Pictures

- 1 Go to **Camera > Photo** and touch  to enable Moving picture.
- 2 Touch  to shoot.

#### Play Moving Pictures


Moving pictures are saved in JPG format in **Gallery**.



Go to **Gallery > Albums > Camera**, touch a moving picture, then touch  at the top of the picture to view it.


The moving picture will automatically stop after a complete playback. You can also touch the screen to stop the playback.



#### Edit Moving Pictures

After taking a moving picture, you can set the cover, edit the picture, or save any frame of the moving picture as a static photo.

- 1 Open **Gallery**, touch the moving picture that you want to edit, then touch .
- 2 Touch **Smart** to:
  - Set the cover: Your device recommends the best frames, which are indicated by crown icons. Select your desired frame and touch **Set as cover** to set it as the cover, which is indicated by a dot over the frame.
  - Edit the picture: After setting the frame to be edited as the cover frame, touch **Auto** or **De-mist** in **Smart**. Your device will then automatically optimise the picture for you.

 If you want to apply more than one of the aforementioned features to the photo, touch  each time you apply a feature.

**3** After you have finished editing the picture, touch  to save it as prompted. You can also save the picture as a new moving photo in the original photo album.


To save one of the frames in the moving picture as a static photo, touch , set the frame as the cover frame, edit the frame using features with the exception of **Smart** (such as filters), then touch . The cover frame will be saved as a static photo.

### Save a Moving Picture as a GIF File or Video

To save a moving picture as a GIF file or video, touch the moving picture in the album, touch   
 • •   
 • •, then select **Save as video** or **Save as GIF**.

### Share Moving Pictures

You can share moving pictures with Huawei or Honor devices using various methods, such as Wi-Fi Direct, Bluetooth, or Huawei Share.

Go to **Gallery > Albums > Camera**, touch and hold to select the moving pictures you want to share, then touch  to share them.

If you share moving pictures to third-party apps or incompatible devices, moving pictures will be displayed as static images.

## Add Stickers to Photos


### Add Stickers to Photos

Add a sticker, such as a time, weather, mood, or food sticker, to spice up your photos.

**1** Go to **Camera > More** and select **Stickers** mode.

If the **Stickers** option is not present in **More**, touch , then download **Stickers**.

**2** Select a sticker, which will then be displayed in the viewfinder.

Drag the sticker to change its position. Touch and hold the dot on the corner of the sticker and drag it to resize the sticker. Touch  to delete the sticker.

You can also edit the text in some types of stickers. Touch the editable area which is typically encircled with dash lines to enter the new text.

**3** Touch the shutter button to shoot a photo.

## Documents Mode

## Use Documents Mode to Straighten Photos

Images shot at an angle always suffer from the problem of perspective. If you aren't able to take a perfectly straight photo of a document, use Documents mode.

The camera will automatically adjust skewed images shot in Documents mode and remove shadows from them.


### Shoot Photos in Documents Mode

**1** Go to **Camera > More** and select **Documents** mode.

If the **Documents** option is not present in **More**, touch , then download **Documents**.

**2** Frame the document (such as a presentation slide or a poster) you want to shoot within the viewfinder, and touch the shutter button to take a photo.

**3** The camera will automatically identify the text area within the viewfinder, unskew the image, and remove any shadows.


 Some devices do not support the removal of document shadows.

### Adjust the Text Area

If you are not satisfied with the skew correction of a photo, you can also manually adjust the text area.

**1** Go to **Gallery > Albums > Camera**.

**2** Touch a document photo marked with  and then touch  at the top of the photo.

**3** Drag the four corners to customise the correction area. Then touch . Your device will reshape the photo as a flat, rectangular image.

## Take High-Resolution Photos

### Take High-Resolution Photos

Take high-resolution photos if you would like to print them or display them on a large screen.

**1** Go to **Camera > More** and select **High-res** mode.

**2** Frame your subject within the viewfinder, then touch where you want to focus.  
In **High-res** mode, you won't be able to zoom in or out, or adjust the aspect ratio.

**3** Touch the shutter button to shoot a photo.

## Pro Mode

## Use Pro Mode to Shoot Like a Pro

Pro mode lets you fine-tune photos and videos and gives you full control over ISO sensitivity, focus mode, and more when taking photos or recording videos.

### Use Pro Mode to Shoot Like a Pro






**i** The figures are for reference only.

**1** Open **Camera** and select **Pro** mode.

**2** You can then:

- Adjust the metering mode: Touch **M** and select a metering mode.






Metring mode	Application Scenarios
 <b>Matrix</b>	Measures the light in the whole frame. Applicable when shooting natural landscapes.
 <b>Centre</b>	Concentrates on the light at the centre of the screen. Applicable when shooting portraits.
 <b>Spot</b>	Concentrates on the light in a small area of the screen, such as the subject's eyes.

- Adjust the ISO sensitivity: Touch **ISO** and drag the slider.  
In low-light conditions, increase the ISO sensitivity. In well-lit environments, decrease the ISO sensitivity to avoid image noise.
- Adjust the shutter speed: Touch **S** and drag the slider.  
The shutter speed affects the amount of light allowed to enter the camera lens. When you are shooting stationary scenes or portraits, decrease the shutter speed. When you are shooting moving scenes or objects, increase the shutter speed.
- Adjust EV exposure compensation: Touch **EV** and drag the slider.  
Increase the EV value in low-light conditions and decrease the EV value in well-lit environments.
- Adjust the focus: Touch **AF** and select a focus mode.


Focus Mode	Application Scenarios
<b>AF-S (single)</b>	Applicable to stationary subjects
<b>AF-C (continuous)</b>	Applicable to moving subjects
<b>MF (manual)</b>	Touch the subject on which you want to focus, such as the subject's face.

- Adjust the colour cast: Touch **WB** and select a mode.


When shooting in bright daylight, select . When shooting in low-light environments, select .

Touch  to adjust the colour temperature.

- Select the storage format: **Pro** mode allows you to save the photo in JPG or RAW format. Touch **JPG** in the viewfinder to select different storage formats. Images in RAW format retain more details for post-processing but take up a relatively large storage space, whereas images in JPG format require less storage space. Choose between the two as required.  
If you select RAW format, photos that you take will be saved in DNG and standard formats. The DNG format photos will be saved to the RAW photo album in **Gallery**.

- Enable AF assist light: For better focus in low-light environments, touch  to enable AF assist light.




**3** Touch the shutter button to take a photo.

-  • Not all devices support these features.
- Changing a specific setting will sometimes cause other settings to change as well. Adjust them according to your actual requirements.

## Use Pro Mode to Record Videos

**1** In **Pro** mode, touch  to switch to Video mode. You can then:

- Adjust the metering mode: Touch **M** and select a metering mode.


Metering Mode	Description
 <b>Matrix</b>	Measures the light in the whole frame. Applicable when shooting natural landscapes.
 <b>Centre</b>	Concentrates on the light at the centre of the screen. Applicable when shooting portraits.
 <b>Spot</b>	Concentrates on the light in a small area of the screen, such as the subject's eyes.


- Adjust the ISO sensitivity: Touch **ISO** and drag the slider. In low-light conditions, increase the ISO sensitivity. In well-lit environments, decrease the ISO sensitivity to avoid image noise.
- Adjust the shutter speed: Touch **S** and drag the slider. The shutter speed affects the amount of light allowed to enter the camera lens. When you are shooting stationary scenes or portraits, decrease the shutter speed. When you are shooting moving scenes or objects, increase the shutter speed.
- Adjust EV exposure compensation: Touch **EV** and drag the slider. Increase the EV value in low-light conditions and decrease the EV value in well-lit environments.
- Adjust the focus: Touch **AF** and select a focus mode.


Focus Mode	Description
<b>AF-S (single)</b>	Applicable to stationary subjects
<b>AF-C (continuous)</b>	Applicable to moving subjects
<b>MF (manual)</b>	Touch the subject on which you want to focus, such as the subject's face.

- Adjust the colour cast: Touch **WB** and select a mode.

When shooting in bright sunlight, select . In dimly-lit environments, select .

Touch  to adjust the colour temperature.

**2** Touch  to start recording.









-  • Not all devices support these features.
- Changing a specific setting will sometimes cause other settings to change as well. Adjust them according to your actual requirements.

## Record Videos



### Capture Video


**1** Open **Camera** and select **Video** mode.



**2** Adjust the following settings:

- Zoom in or out: Pinch in or out on the viewfinder, or drag the zoom slider.
  - Focus: Touch the location you want to focus on. Touch and hold the viewfinder to lock the exposure and focus.
  - Turn the flash on or off: Touch  and select  (steady on) or  (off).  
When using the front camera to record videos in low-light conditions, you can set the flash to  (steady on). The camera will provide light compensation.
  - Adjust beauty effects: Touch  and drag to adjust the effects.
  - Adjust the video resolution and frame rate: Go to  > **Video resolution** and select the desired resolution. A higher resolution will result in a higher quality video with a larger file size.  
You can touch **Frame rate** to select your desired frame rate.
  - Select a space-saving video format: Touch  and toggle on the **Efficient video format** switch.  
When this feature is enabled, your device will use a video format that takes up less storage space. However, videos in this format may not play on other devices. Please exercise caution when selecting this option.
-  • Not all devices support these features.
  - Changing a specific setting will sometimes cause other settings to change as well. Adjust them according to your actual requirements.

**3** Touch  to shoot.

When recording videos with the rear camera, you can touch and hold  or  to zoom in or out.

Touch  to take a shot of the current frame.

**4** Touch  to pause and touch  to stop shooting.


### Enable Sound Volume to Adjust with the Zoom Level

When you are shooting a video, your device can focus on the sound of the subject you are shooting, so that the sound turns up as you zoom in.


For example, if you are recording a child singing onstage, the child's voice will become clearer as you zoom in on the child.

**1** Open **Camera** and select **Video** mode.

**2** When using the rear camera, aim the camera at the subject you want to record.

**3** Touch  to start recording. Zoom in on the subject by pinching out on the viewfinder or dragging the zoom slider up.


As the camera zooms in, the recorded sound will become clearer.


**4** Touch  to end the recording.



### Steady Your Shooting


When shooting and moving at the same time, you can enable Steady shot to reduce camera shake.

**1** Open **Camera** and select **Video** mode.

**2** Touch  to enable Steady shot.

**3** Touch  to start the recording.



**4** Touch  to pause and touch  to end the recording.


 When Steady shot is enabled, some features (such as zooming and video resolution adjustment) may be unavailable.


### Use AI Movie Effects to Record Videos




Use AI Movie effects to add an artistic element to your videos without the need for post-processing.

**1** Open **Camera** and select **Video** mode.

**2** Switch to the rear camera, touch  or , and select **AI colour**, **Background blur**, or other movie effects.




**3** Go to  > **Video resolution** and select the 21:9 aspect ratio (which most movies are shot in).

 Some products do not support the 21:9 aspect ratio.

- 4 Touch  to shoot.  
Touch  to add filter effects during shooting.
- 5 Touch  to end shooting.

### Shoot 4K UHD Videos



 
Your device supports 4K Ultra HD (UHD) video recording, allowing you to record in even greater clarity.





- 1 Open **Camera** and select **Video** mode.
  - 2 Go to  > **Video resolution** and select the 4K resolution. Beauty mode, filters, and special effects are not supported at 4K, and will be automatically disabled when you select the 4K resolution.
  - 3 Return to the **Video** screen and touch  to start recording.
-  A higher resolution will result in a higher quality video, but will also take up more storage space.

## Tracking Shot

### Take Tracking Shots

Tracking shots allow the camera to follow the subjects being recorded so that they always remain in the centre of the viewfinder.


- 1 Open **Camera** and select **Video** mode.
- 2 Touch  to confirm that Tracking shot is enabled.
- 3 Frame the subject in the viewfinder. Your device will automatically identify the trackable subjects and display the  icon around them. Touch one of the  icons to start tracking the subject.
 

 Tracking shots support people, cats, and dogs. A maximum of three subjects can be tracked in the same viewfinder.
- 4 Touch  to start recording. During the recording, the camera automatically zooms in or out along with the tracked subject so that the subject remains in the centre of the viewfinder.  
You can also touch other trackable subjects in the viewfinder to start tracking them.
- 5 Touch  to pause and  to end the recording.

## Slow-Mo Recording

### Shoot Slow-Mo Videos



Use Slow-mo mode to capture fleeting moments in detail. Adjust the slow motion speed based on how slow you want your footage to appear. With a higher speed you'll get slower playback.

 The available slow motion speeds vary by device.

- 256x: suitable for recording shooting, explosion, or other extreme fast-paced action scenes.
- 128x or 64x: suitable for recording balls being hit and racing.
- 32x or 16x: suitable for recording bubbles popping and water splashing.
- 8x or 4x: suitable for recording breakdowns of fast movements, such as diving into water and a football being kicked. You can customise the overall shooting length and the length of the slow-mo portion.





For best results, shoot the slow-mo videos in bright and natural lighting.



### Shoot Slow-Mo Videos

- 1 Go to **Camera** > **More** and select **Slow-mo** mode.
- 2 Touch  and select a slow motion speed.
- 3 Frame your subject within the viewfinder, then touch  to start recording.

### Automatically Capture Slow-Mo





Some high-speed slow-mo modes support motion detection. Your camera will automatically track and take snapshots of moving objects in the frame when you touch the shutter button.

- 1 In **Slow-mo**, touch  and select a speed.
- 2 If the speed you select supports motion detection,  will appear on the screen. Touch  to ensure that motion detection is enabled. A detection frame will then be displayed in the viewfinder. Move the frame to the desired position.
- 3 Frame the object in the viewfinder and ensure that it is also in the detection frame. Touch  to start shooting. The camera will track the object in the frame and automatically take snapshots when it is moving.

To record a video manually, touch  to disable motion detection, then touch  to start recording.





## Shoot Slow-Mo Videos with the Front Camera

You can use the front camera to take slow-mo selfie videos such as of your hair blowing in the wind.

- 1 Go to **Camera** > **More**, select **Slow-mo** mode, then touch  to switch to the front camera.
- 2 If your device allows, touch  and select a slow motion speed.
- 3 Touch  to start recording.
- 4 Touch  to end the recording.

## Adjust the Slow-Mo Part in Slow-Mo Videos



For a slow-mo video, you can change which part of it you want to play in slow motion.

-  This feature is only available for slow-mo videos recorded at 4x or 8x. The 8x option is not available on certain devices.
- 1 Go to **Gallery** > **Albums** > **Camera** and select a slow-mo video.
  - 2 Touch  to play the video. During playback, touch the video to display the editing area.
  - 3 Drag the sliders to adjust the part you want to be played in slow motion. Other parts of the video will be played at a normal speed.
  - 4 Go to  > **Save slow-mo file** to save your edits.
-  For the best results when sharing, share the slow-mo videos in which your edits have been saved.

## Time-Lapse Photography

### Use Time-Lapse to Create a Short Video

You can use Time-lapse to capture images slowly over several minutes or even hours, then condense them into a short video. This allows you to capture the beauty of change – blooming flowers, drifting clouds, and more.





- 1 Go to **Camera** > **More** and select **Time-lapse** mode.
- 2 Place your device in position. To reduce camera shake, use a tripod to steady your device.
- 3 Touch  to start recording, then touch  to end the recording.

The recorded video is automatically saved to Gallery.

### Shoot Time-Lapse Videos in Manual Mode

**Time-lapse** mode is set to automatic by default when you take videos with the rear camera.

To shoot in manual mode and adjust shooting parameters such as the recording speed, duration, ISO, and more, touch **Auto**. You can then:

- Touch  to adjust the recording speed. For instance, record traffic trails at 15x or blooming flowers at 1800x.  
A video recorded at a higher speed will play faster.
- Touch  to set the recording time. The video recording will automatically stop when it reaches this limit.
- Touch **PRO** to adjust the metering mode, shutter speed, ISO, and more to ensure a better shooting result.
- Touch  to start recording. If you haven't set the recording duration, touch  to stop recording.

## Dual-View Mode


### Record Dual-View Videos


In Dual-view mode, you can capture two different perspectives at once by independently filming on two cameras – using both the front and rear cameras or just the rear camera setup – instead of one. When using the front and rear cameras, the dual view shows what's captured by the front camera and rear camera side by side. When using just the rear camera setup, the dual view shows a panorama and a close-up of the centre of what is being filmed.


 Please make sure your device has been updated to the latest system version.


**1** Go to **Camera > More** and select **Dual-view**.

**2** Frame your subject in the viewfinder.

- To capture images from both the front and rear cameras, touch  to have the dual view show what's captured by the front camera and rear camera. You can pinch in or out on the viewfinder to adjust the zoom level of the view from the rear camera. Touch the screen twice to swap the positions of the dual view images.



Touch  to enable Picture in Picture mode. You can then tap the small window twice to swap the positions of the images, or drag the window to any other position. Touch

 to return to split-screen mode.

- To use just the rear camera setup for dual-view recording, touch  to switch to the rear camera. A panoramic view and a close-up of the centre of the panorama will be displayed in split-screen mode in the viewfinder.



You can adjust the zoom level of the close-up view by pinching in or out on the viewfinder. Touch the screen twice to swap the positions of the panorama and close-up views.


**3** Touch  to start recording and  to stop recording.

### Choose the Sound Source You Want to Pick Up in Dual-view Mode

You can decide which direction you want to pick up sound from in Dual-view mode. For instance, when using the dual-rear Dual-view mode, you can pick up sound from either the panoramic or close-up view. When using the front and rear Dual-view mode, you can pick up sound from the front or rear.

 Some devices do not support front and rear Dual-view mode.

**1** Go to **Camera > More** and select **Dual-view**.

**2** Point your device at the scene you want to record, touch  in the viewfinder, and choose which view you want to pick up sound from as prompted.

- When using the dual-rear Dual-view mode, you can pick up sound from either the panoramic or close-up view. If you choose to pick up sound from the close-up view, your device can focus on the sound of the subject you are shooting, and the sound turns up as you zoom in. For instance, you can zoom in on the subject by pinching out on the viewfinder or dragging the zoom slider up. In doing so, the recorded sound of the subject will become clearer.
- When using the front and rear Dual-view mode, you can pick up sound from either the front or rear. For instance, when you are filming different subjects with the front and rear cameras, you can choose which subject you want to focus on.


**3** Touch the shutter button to start recording.


## Story Creator



### Tell Your Story in Story Creator Mode

In **Story creator** mode, you can choose a template and follow the instructions to create an engaging story with the camera and without having to focus or zoom manually.


**1** Go to **Camera > More**, and select **Story creator** mode.

**2** Touch a template to preview what it looks like. Touch  to start.

**3** Your device will instruct you to take several shots. Before shooting, the viewfinder will show the preview of each shot. Touch  to close the preview.

Touch  to start recording. Your device will take care of the focusing, rotating, and zooming in the viewfinder. When the preset time has elapsed, your device will stop recording. You can touch  and record the next shot until all shots are recorded.

**4** To shoot a different scene, exit the camera. Your device will automatically save your shots. When you enter **Story creator** mode again, you can continue with the saved shots (only the shots recorded from the last time are saved).

**5** When you are finished, your device will automatically splice the shots and create a video clip with music. If you are unsatisfied with any of the shots, touch the preview frame of the shot, then touch  and follow the onscreen instructions to retake the shot.

If you are unsatisfied with all shots, touch  to remove them all and shoot again.

**6** When you are finished, touch  to export the video to the **Videos** album.

## Leica Colors

### Use Leica Colours

**1** Open **Camera** and make sure the rear camera is in use.

**2** Touch , then select **Leica standard**, **Leica vivid**, or **Leica smooth**.


**3** Touch the shutter button to take a photo or start recording a video.



 Not all camera modes support Leica colours.

## Filters

### Apply a Filter to Photos or Videos

**1** Open **Camera** and select **Photo** or **Video** mode.

**2** Touch  or  to select a filter and preview the effect.


 Some devices do not have the  icon.

**3** Touch the shutter button to take a photo or start recording a video.

## Adjust Camera Settings

### Adjust Camera Settings

You can adjust the camera settings to take photos and videos more quickly.


 The following features may not be available in some camera modes.

## Adjust the Aspect Ratio

Go to **Camera** >  > **Aspect ratio** and select an aspect ratio.


 This feature is not available in some modes.

## Enable Location Tags

To enable **Location tag**, enable Location Services for your device first, then go to **Camera** > . Your photos and videos will then be tagged with location information.

You can touch and swipe up on a photo or video in Gallery to view its shooting location.

To enable Location Services on your device:

- Swipe down from the upper right edge of the device to display **Control Panel**, touch  to expand the shortcut switches panel, and enable **Location**.
- Go to **Settings** > **Location** and enable **Access my location**.

## Add Device Watermarks

Enable **Add watermark**. Photos and videos shot with the rear camera will have a device watermark added.

 Adding a device watermark to videos is not supported on certain devices.

## Use the Assistive Grid to Compose Your Photos

Use the assistive grid to help you line up the perfect shot.

- 1 Enable **Assistive grid**. Grid lines will then appear in the viewfinder.
- 2 Place the subject of your photo at one of the intersecting points, then touch the shutter button.

## Use Mirror Reflection


When using the front camera, touch , then enable or disable **Mirror reflection**.

When **Mirror reflection** is enabled, the image will appear as you see yourself in the viewfinder, instead of flipped.

When **Mirror reflection** is disabled, the image will be flipped, so it's the opposite of what you see in the viewfinder.

## Mute the Shutter Sound

Enable **Mute** to mute the camera shutter sound.

 This feature is only available in some countries and regions.

## Capture Smiles

Enable **Capture smiles**. The camera will take a photo automatically when it detects a smile in the viewfinder.

## Use the Horizontal Level for Better Compositions


Enable **Horizontal level** to display a horizontal guiding line on the viewfinder.

When the dotted line overlaps with the solid line, it indicates that the camera is parallel with the horizontal level.


## Customise Camera Mode Layout

You can customise the layout of the Camera mode screen based on your preferences by moving the frequently used modes to the camera home screen, or change the order of modes.

 **Photo, Portrait, and Video** modes cannot be moved to **More**.

- 1 Go to **Camera** > **More**, and touch  to enter the mode editing screen.
- 2 Touch and hold a mode and drag it to the desired position. You can move a mode on the **More** screen to the camera home screen, move the mode on the camera home screen to **More**, or adjust the layout of the mode screen based on how often you use certain modes.

Modes with a  icon can be deleted by simply touching this icon.

 
- 3 Touch  to save the layout.


To restore a deleted mode, go to **Camera** > **More**, touch , and then touch **ADD**.

## Manage Gallery

### View Photos and Videos

In Gallery, you can view, edit, and share your photos and videos, as well as browse the clips automatically generated from them.

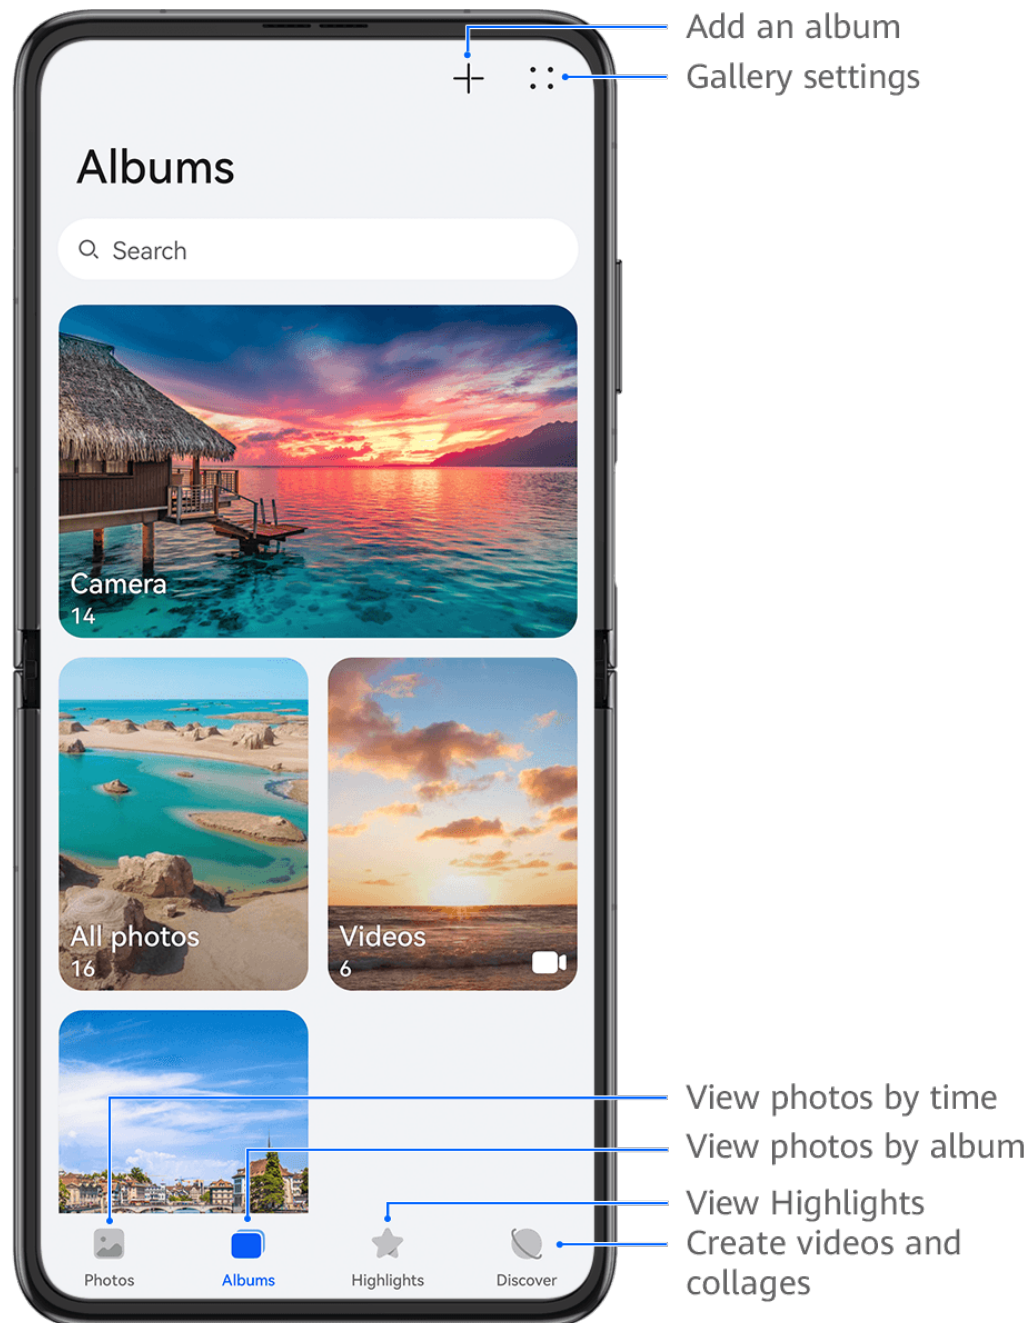

 The figures are for reference only.

### View by Shooting Time

Open **Gallery**. On the **Photos** tab, pinch in on the screen to switch to the monthly view and pinch out to switch to the daily view.

You can also drag the track ball on the edge to view the time.

### View by Album

You can view photos and videos by album on the **Albums** tab.


Some photos and videos are stored in default albums. For example, videos recorded with the camera are saved in the **Camera** album. Screenshots and screen recordings are saved in the **Screenshots** album.

## View by Category


Gallery intelligently sorts photos into categories, allowing you to quickly sift through large albums by category.

Touch a category album on the **Discover** tab (such as food, portrait, or scenery) to view photos in that album.


## View Details About Photos and Videos

- 1 In Gallery, touch a photo or video to view it in Full screen mode. Touch the screen again to hide the menu.
- 2 When in Full screen mode, touch  to view details about the photo or video, such as the storage path, resolution, and size.

## Change the Sorting Mode of Albums



- 1 Go to **Gallery > Albums** and touch the album you want to set.
- 2 Go to  > **Sort** and select your desired sorting mode.

## Show Images and Videos in Albums by Date


- 1 Go to **Gallery > Albums** and touch the album you want to set.
- 2 Go to  > **Show date**. The images and videos in the album will then be displayed by date.

## View Images or Videos on Other Devices from Your Device

With Multi-device browsing, you can browse and search for photos and videos saved on a connected phone or tablet.

-  This feature is only available in some countries and regions.
    - Before using this feature, ensure that your devices have sufficient power and that the device being connected is near the device.
- 1 Enable the following functions on this device and the connected device:  
Go to **Settings > Device+ > More settings > Multi-Device Gallery** and ensure that **Multi-Device Gallery** is enabled.  
If **Multi-Device Gallery** is not displayed in the above path on the phone or tablet, search for and enable **Multi-Device Collaboration** in **Settings**. If neither of the two switches can be found on your device, it indicates that this feature is not supported.
  - 2 Enable Wi-Fi and Bluetooth and log in to the same **HUAWEI ID** on your device and the device you want to connect to.  
After the connection is set up, the **Other devices** tab will be displayed under **Gallery > Albums**.
    -  If your device cannot connect to the target device, connect them to the same router or personal hotspot, log in to the same **HUAWEI ID**, and enable Bluetooth on both devices.

**3** Touch the **Other devices** tab to view connected devices. If the device you want to browse from is not connected, touch the device name and initiate a connection as prompted. You can then:

- Browse images or videos: Touch a connected device to view the albums stored on that device.
- Search for images: On the **Albums** tab, enter a keyword (such as "food" or "landscapes") in the search bar. The search results will be displayed by device.
- Save items from other devices to your device: Touch the target device, touch and hold to select images or videos, then touch .

The saved items will be displayed in **Gallery > Albums > From other devices**.

To disable this feature, disable **Multi-Device Gallery**.

## Make Quick Searches in Gallery

### Quickly Search for Photos in Gallery

Quickly locate a photo by searching with keywords, such as a date, food, or category, in Gallery.

- 1** Go to **Gallery**, touch the search bar at the top of the screen, then type in a keyword (such as "food" or "scenery") or touch a suggested word to start searching.
- 2** Thumbnails of photos related to that keyword will be displayed, and more keywords will be suggested. Touch a suggested keyword or enter more keywords for more precise results.

### Quickly Search for Videos in Gallery

Your device automatically analyses and categorises videos in Gallery when charging and with the screen off. Suggested keywords will be displayed in the search bar for quick results on related topics.


- 1** Go to **Gallery**, touch the search bar at the top of the screen, then type in a keyword (such as "food" or "scenery") or touch a suggested word to start searching.
- 2** Thumbnails of videos related to that keyword will be displayed, and more keywords will be suggested. Touch a suggested keyword or enter more keywords for more precise results.  
Key moments of videos in the search results will automatically be played in sequence for you to see a preview.

 **Screenshots** will not be analysed.

## Edit Images



Gallery offers a wide range of editing features for images.

### Basic Editing

- 1** Open **Gallery**, touch the photo you want to edit, and then touch . You can then:

- Crop and rotate: Touch **Crop**, select a frame, then drag the grid or its corners to select which part you want to keep. You can drag the photo in the frame, or use two fingers to zoom in or out to adjust the displayed part of the photo.

To rotate the photo, touch **Crop** and drag the angle wheel to the desired orientation.



To rotate the photo by a certain degree or mirror flip the photo, touch  or .



- Add a filter effect: Touch **Filter** to select a filter.
- Adjust photo effects: Touch **Adjust** to adjust the brightness, contrast, saturation, and other aspects of the photo.
- Other: Touch **More** to edit the photo in other ways, such as by adding a colour splash, blur, doodle, or text element.

When using the **Adjust** or **Filter** feature, you can touch **Compare** to compare the photo before and after editing. Comparison is not supported in some editing modes.




- 2 Touch  or  to save the edits.

### Add Stickers to Photos


- 1 In Gallery, touch a photo, then go to  > **More** > **Stickers**.
- 2 Select a sticker and drag it anywhere you like. Touch and hold the dot on the corner of the sticker and drag it to resize the sticker. Touch  to delete the sticker. You can also edit the text in some types of stickers. Touch the editable area which is typically encircled with dash lines to enter the new text.

- 3 Touch  to save your edits and touch  to save the photo.


### Pixelate Photos

- 1 In Gallery, touch a photo, then go to  > **More** > **Mosaic**.
- 2 Select a mosaic style and size to cover parts of the photo.
- 3 To remove the mosaic, touch **Eraser** and wipe it off the photo.
- 4 Touch  to save your edits and touch  to save the photo.

### Rename Photos


- 1 In Gallery, touch the photo thumbnail you want to rename.
- 2 Go to  > **Rename** and enter a new name.
- 3 Touch **OK**.



### Remove Unwanted Objects from Images

- 1 In Gallery, touch the image you want to edit, then go to  > **More** > **Remove**.



**2** Choose the size of the rubber that best meets your needs and swipe on the part of the image you want to remove.  
It is recommended that you use a smaller rubber to remove finer details (such as power cables).


**3** To undo the changes you have made, touch  in the upper right corner.

**4** Touch  to save the changes and touch  to save the edited image.



## Collage


You can use the collage feature in Gallery to quickly combine multiple photos into one for easier sharing.

**1** You can access the collage feature in the following ways :

- On the **Discover** tab, touch **Create collage**, select some photos, then touch **Create**.
- On the **Photos** or **Albums** tab, touch and hold to select some photos, then go to  > **Collage**.



**2** Select a template. You can then:

- Relocate a photo: Touch and hold the photo and drag it to a different position.
- Adjust the displayed portion of a photo: Slide on the photo, or pinch in or out on it so that only the part you want to see is displayed in the grid.
- Rotate a photo: Touch the photo, then touch  to rotate it or  to flip it.
- Add or remove borders: By default, borders are displayed between photos and along the grid edges. To remove them, touch **Frame**.

**3** Touch  to save the collage.  
To view the saved collage, go to **Albums** > **Collages**.

## Share Photos and Videos


Open **Gallery** and share a photo or video in the following ways:

- Share a single photo or video: Touch the photo or video, then touch .
- Share multiple photos or videos: In an album or on the **Photos** tab, touch and hold to select multiple photos and videos, then touch .

## Share Your Photos Securely

Before sending a photo, you can choose to delete sensitive information like the location, time, and camera specs.

**1** Open **Gallery**.

**2** Select one or more photos and touch .

**3** Touch the privacy switch in the upper left corner of the screen. In the displayed **Privacy options** dialog box, turn on the **Remove photo info** and **Remove location info** switches, then touch **OK**.


**i** If **Location tag** was disabled when a photo was taken, the **Remove location info** switch will not be displayed in the **Privacy options** dialog box when you share the photo.

## Organise Albums

Organise photos and videos into albums to easily sift through them.


### Add Albums


**1** Go to **Gallery > Albums**.

**2** Touch , name the album, then touch **OK**.

**3** Select the photos or videos you want to add, and then move or copy them to the album.

### Sort Albums

**1** Go to **Gallery > Albums >**  and touch **Sort albums**.

**2** Hold and drag  next to the albums to adjust the order.

Touch **Reset** or go to  **> Reset** to restore the default order.

### Adjust the Album Display Style

Go to **Gallery > Albums >** , touch **Switch view**, and select an album display style.

### Move Photos and Videos

**1** Open an album, then touch and hold to select the photos and videos you want to move.


**2** Touch  **> Move to album** to select the desired album.

**3** Once the items are moved, they will no longer be in their original album.

**i** The **All photos** and **Videos** albums show all photos and videos stored on your device. Moving items across albums will not affect the view in these albums.


### Change Album Covers

**1** Go to **Gallery > Albums** and touch the album you want to set.

**2** Go to  **> Change album cover** and select the image you want to set as the album cover.

### Delete Photos and Videos


Touch and hold to select photos, videos, or albums and go to **Delete > Delete**.

-  Some preset albums cannot be deleted, including **All photos**, **My favourites**, **Videos**, and **Camera**.

Deleted photos and videos will be temporarily moved to the **Recently deleted** album for a period of time, after which they will be permanently deleted.

To permanently delete photos and videos before the retention period expires, touch and hold to select photos or videos in the **Recently deleted** album and go to **Delete > Delete**.

### Recover Deleted Photos and Videos

In the **Recently deleted** album, touch and hold to select the items you want to recover, then touch  to restore them to their original albums.

If the original album has been deleted, a new one will be created.

### Add Photos and Videos to Favorites


Open a photo or video, then touch .

The item will appear in both its original album and the **My favourites** album.

### Block Albums

Block third-party app albums to prevent them from being displayed in Gallery.

**1** In the **Others** list, touch the album you want to block.


**2** Go to  **> Block this album?**.  
Blocked albums can only be viewed in **Files**.

**3** To unblock an album, open the **Others** list, touch **View blocked albums**, then touch **Unblock** next to the album.


-  Only some albums in **Others** can be blocked.

### Hide Albums

You can hide photos and videos in Gallery to keep them private.

On the **Albums** tab, touch an album, touch and hold to select the photos and videos you want to hide, then go to  **> Hide > OK**.


The selected photos and videos will then be hidden. You can then:



- On the **Albums** tab, go to  **> Hidden items** to view the hidden photos and videos.
- In **Hidden items**, touch and hold to select photos and videos, then touch **Unhide**.  
These photos and videos will be restored to their original albums.

## Golden Snap

## Spruce Up Photos with Golden Snap



### Enhance Your Photos with Functions Such As Brighten and De-mist

- 1 Open **Gallery**, touch the photo that you want to edit, then touch .
- 2 Touch **Smart** to access the smart editing screen. You can then:
  - Perform one-touch automatic optimisation: Touch **Auto** for your device to intelligently optimise the photo.
  - Brighten the photo: Touch **Brighten** to brighten the photo.
  - Remove blurriness: Touch **De-mist** for your device to automatically detect and remove blurriness from the photo.
  - Straighten the photo: Touch **Straighten** for your device to automatically check whether the photo is tilted (for example, whether the background horizon line is tilted) and straighten it.

 If you want to apply more than one of the aforementioned features to the photo, save the photo each time you apply a feature.
- 3 After you have finished editing the photo, touch  to save the photo to the same album as the original photo.




### Retouch Photos of Documents

If there are shadows in a photo of a document, you can use the **Retouch document** function in Gallery to remove them.

- 1 Open **Gallery**, touch a photo of a document, then touch .
- 2 Go to **Smart > Retouch document**. Your device will then remove the shadows.
- 3 Touch  and follow the onscreen instructions to save the photo to the same album as the original photo.

### Adjust document

If an image of a document is skewed, you can use the **Adjust document** function in Gallery to straighten the image.



- 1 Open **Gallery**, touch an image of a document, then touch .
- 2 Go to **Smart > Adjust document** and drag the four corners to select the area to be straightened.
- 3 Touch . Your device will then straighten the selected area.
- 4 Touch  and follow the onscreen instructions to save the image to the same album as the original image.

## Smart Photo Categorisation

### Smart Photo Categorisation

Gallery automatically sorts your photos into categories such as portraits, food, and scenery, so you can quickly find what you're looking for.

Go to **Gallery** > **Discover** to view your photos organised into categories.

To remove a photo from an album, touch and hold to select the photo, then touch  (or  for portraits).


 Not all photos can be removed from the category albums.

### View and Set People Albums

Once you have a sufficient number of images with faces, Gallery will automatically create People albums of individuals or groups by identifying faces in your images. This will happen when your device is charging and the screen is off.


You can name your People albums and set the relationship of individuals with you to search for images more easily.

**1** Go to **Gallery** > **Discover** to view **People** albums.

**2** Touch an album, go to  > **Edit** and name the album or set the relationship of the individuals with you (such as **Baby** and **Mum**).

**3** Touch  to save your settings.

Once you have finished, you can find a People album by entering the name in the search bar.

 Group photo albums require a specific number of group photos with faces that have already been named in People albums.


## Huawei Vlogs

### People Album Videos

Gallery automatically creates **People** albums by identifying faces in images.

#### View People Album Videos


**1** Go to **Gallery** > **Discover** and touch a People album.

**2** Touch  on the album cover.

## Highlights

## Introduction to Highlights

Gallery automatically creates **Highlights** albums from your best photos and videos based on time, location, and theme information, and even generates a short video clip so you can walk down memory lane and instantly relive the good times.

- To start using **Highlights**, go to **Camera** >  and enable **Location tag**.
- **Highlights** albums are created automatically when your device is charging and connected to a Wi-Fi network, the screen is turned off, and the battery has sufficient power. It may take a while for the albums to be created.  
**Highlights** albums will not be automatically generated if there are not enough relevant photos.



### View Highlights Videos

**1** Go to **Gallery** > **Highlights** and touch an album.

**2** Touch  to play the video.

### Change the Highlights Album Cover

**1** On the **Highlights** tab, touch an album.

**2** Go to  > **Change cover**, select a photo, then touch .

### Share Highlights


You can share **Highlights** as videos or images with friends.

#### Share Highlights videos as videos

**1** If you have edited and exported a **Highlights** video, the exported video can be found in **Gallery** > **Albums** > **Video Editor**.

**2** You can touch and hold to select the video in **Video Editor** and touch  to share it.

#### Share Highlights videos as images



Touch the **Highlights** video you want to share, then go to  > **Share**. Your device will automatically generate an image for the video and you can follow the onscreen instructions to share it with others.

You can also share the photo under **Gallery** > **Albums** > **Collages**, where the images created for **Highlights** videos are saved by default.


### Add or Remove Images or Videos from a Highlights Album

**1** In the **Highlights** tab, select a **Highlights** album.



**2** You can then:

- Add images or videos: Touch  and follow the onscreen instructions to select images or videos to be added to the album.
- Remove images or videos: Touch and hold to select the images or videos you want to remove from the album, touch , then touch **Remove**.

### Rename Highlights Albums

- 1 On the **Highlights** tab, touch an album.
- 2 Go to  > **Rename** and enter a new name.

### Delete Highlights Albums

- 1 On the **Highlights** tab, select a **Highlights** album.
  - 2 Go to  > **Delete** and then touch **Delete**.
-  After you delete a **Highlights** album, it cannot be restored, and the photos and videos in the **Highlights** album will remain in Gallery.



# Apps

## Contacts



### Create and Edit Contact Information

You can create contacts in multiple ways, as well as view and manage your contacts list.





#### Create Contacts

- 1 Open **Phone**, touch the **Contacts** tab, and touch .  
If you are creating a contact for the first time, touch **Create new contact** to start adding a contact.
- 2 Set a profile picture for the contact, enter information such as the name, organisation, and phone number of the contact, then touch .

#### Import Contacts

- 1 On the **Contacts** screen, go to   > **Settings** > **Import/Export**.
- 2 Select **Import via Bluetooth**, **Import via Wi-Fi Direct**, or **Import from storage**, then follow the onscreen instructions to import contacts.



#### Scan Business Cards to Add Contacts

- 1 On the **Contacts** screen, go to   > **Scan** or **Business cards** > **Scan**.
- 2 Place the business card on a tabletop, hold your phone so that the card appears fully in the viewfinder, select **Single** or **Multiple**, then touch .
- 3 After capturing the image, your device will automatically identify information on the card.  
Touch  to save the contact.

You can view the scanned business cards in **Business cards**.


#### Scan a QR Code to Add a Contact

If a QR code contains contact information, you can scan the QR code to quickly add a contact.


- 1 On the **Contacts** screen, go to   > **Scan** or go to **Business cards** > **Scan**.
- 2 Take a photo of a QR code or select a photo of a QR card from Gallery, and contact information contained in the QR code can be identified and added.




## Merge Duplicate Contacts

- 1 On the **Contacts** screen, go to  > **Settings** > **Organise contacts** > **Merge duplicate contacts**.
- 2 Select duplicate contacts you want to merge and touch **Merge**.


## Search for Contacts

- 1 Open **Contacts**, go to  > **Settings** > **Display preferences**, and touch **All contacts** to display all your contacts. Ensure that the corresponding icon at the bottom is enabled.
- 2 On the top of the **Contacts** screen, enter keywords for the contact you want to find in the search box.

## Share Contacts




- 1 On the **Contacts** screen:
  - Touch and hold the contact you want to share, then touch **Share contact**.
  - Touch the contact you want to share, then go to  > **Share contact**.
- 2 Select a sharing method, then follow the onscreen instructions to share the contact.



## Export Contacts

- 1 On the **Contacts** screen, go to  > **Settings** > **Import/Export**.
- 2 Touch **Export to storage** and follow the onscreen instructions to export contacts. The contacts will be exported into **.vcf** files. You can search for and view these **.vcf** files in **Files**.

## Delete Contacts

Delete contacts using the following methods:




- Touch and hold the contact you want to delete, then touch **Delete**.
- Touch the contact you want to delete, then go to  > **Delete contact**.
- On the **Contacts** screen, go to  > **Settings** > **Organise contacts** > **Delete multiple contacts**, select the contacts you want to delete, then touch .

To restore a contact, go to  > **Settings** > **Organise contacts** > **Recently deleted** on the **Contacts** screen, touch and hold to select the contact you want to restore, then touch .



## Manage Contact Groups

You can conveniently send emails or messages to multiple contacts by creating and managing contact groups. Your device automatically groups contacts by company, city, and last contact time, but you can also create new groups based on your preferences.

### New Group



- 1 Open **Phone**, touch the **Contacts** tab, and touch **Groups**.
- 2 Touch , enter the group name, such as "Family" or "Friends", then touch **OK**.
- 3 In a chat group, touch , follow the onscreen instructions to add contacts to the group, then touch .

### Edit a Contact Group

- 1 On the **Groups** screen, select the group you want to edit and touch  to add a new contact.
- 2 Touch  for **Remove members**, **Group ringtone**, **Delete group**, or **Rename**.



### Send Group Messages or Emails

On the **Groups** screen, open a group. You can then:

- Touch  to send a group message.
- Touch  to send a group email.

### Delete Contact Groups

On the **Groups** screen, do either of the following to delete a contact group from your device:


- Touch and hold the group and select **Delete**.
- Touch , select the groups you want to delete, and touch .

## Create Personal Information


You can create a business card containing your personal information to share with others. You can also add personal emergency information so you can call for help quickly in an emergency.

### Create a Personal Business Card

- 1 Open **Phone**, touch the **Contacts** tab, and touch **My card**.
- 2 Set your profile picture and enter personal information, such as your name, work address, and phone number.


- 3 Touch  to automatically create a QR code business card. You can share your business card using the QR code.

### Add Emergency Information

- 1 From the **Contacts** screen, go to **My card > Emergency information**.
- 2 Touch **ADD** and set your personal, medical, and emergency contact information.
- 3 To modify the information, touch  on the **Emergency** screen.

Once you have added emergency contacts and you find yourself in an emergency, access the lock screen for inputting your password, go to **Emergency > Emergency information > Emergency contacts**, and select an emergency contact to make a call.

### Erase Contact Traces

- 1 Open **Phone**, touch the **Contacts** tab, then touch a contact to erase your contact traces.
- 2 Go to  > **Erase history > Erase** to delete all call and message records for that contact.

## Phone

### Make a Call

#### Dial a Number or Select a Contact to Make a Call


Use either of the following methods to make a call:

- Open **Phone**, enter part of a phone number, the first letter of a contact's name, or a contact's initials to find a contact, then touch to make a call.
- Open **Phone**, touch the **Contacts** tab, then search for a contact or select a contact in the contact list to make a call.

Touch  to end the call.


### Use Speed Dial

Once you've set up speed dialling for a contact, you can quickly call that contact with the assigned number key.

- 1 Go to **Phone >  > Settings > Speed dial**, select a number key, then set a contact for this speed dial number.
- 2 Then you can press and hold this speed dial number to call this contact directly.

### Press the Power Button to End a Call

During a call, press the Power button to end the call.



Go to **Phone >  > Settings > More**, and enable **Power button ends call**.

## Set a Call Background


To set a wallpaper as the call background, do the following:

- 1 Go to **Settings** > **Home/Exterior screen & wallpaper** > **Wallpaper**.
- 2 Select a picture and set it as the wallpaper.

You can also set a profile picture for a contact to be shown on the call background.

- 1 Open **Phone**, touch the **Contacts** tab, then select a contact.
- 2 Touch  and then  to set a profile picture for the selected contact.


## Make an International Call

- 1 Contact your mobile carrier to activate and inquire about the international calling service.
- 2 Open **Phone**, touch the **Contacts** tab, then select a contact to make a call.
- 3 For numbers that are not in the contacts list, open the dialler and hold the **0** number key until the **+** icon is displayed. Enter the country code and phone number, then touch  to make an international call.


## Manage Call Logs

You can merge the call logs of the same contact or number for a tidier and more concise interface, or delete call logs as required.

### Merge Call Logs


- 1 Go to **Phone** >  > **Settings** > **Merge call log**.
- 2 Select **By contact** and your device will automatically merge the call logs of the same number or contact.


### View Missed Calls

- 1 To display all missed calls, open **Phone**, swipe down on the call log list, then touch the **Missed** tab.  
All missed calls are displayed in red in the call log list for you to quickly identify them. You can also find them on the **All** screen.
- 2 Touch  next to a call log entry to call back or send a message.

### Delete Call Logs

Delete call logs using any of the following methods:


- On the **Phone** screen, touch and hold an entry, then touch **Delete entry**.
- On the **Phone** screen, go to  > **Delete entries**, select the entries you want to delete, then touch **Delete**.

- On the **Phone** screen, swipe left on the entry you want to delete, then touch .



## Set a Ringtone

You can set a personalised ringtone for incoming calls depending on your preferences.

If you are carrying your device in your pocket, the ringtone volume will gradually increase to prevent you from missing important calls.


-  If your phone has two SIM cards installed, configure the settings for SIM 1 and SIM 2 respectively.

## Set a Music Ringtone

- 1 Go to **Phone** >  > **Settings** > **Ringtone**.  
Or go to **Settings** > **Sounds & vibration** > **Phone ringtone**.
  - 2 Select a system ringtone, or touch **Music on device** to set a local song as the ringtone.
  - 3 If you select a system ringtone, touch **Vibration** on the same screen, and select **Synchronised (default)**. When there is an incoming call, your device will vibrate with rhythm while the system ringtone is playing.
-  Not all products support a synchronised vibration and ringtone.

## Set a Video Ringtone

Set a video as the ringtone for incoming calls on your device.

- 1 Go to **Phone** >  > **Settings** > **Ringtone**.  
Or go to **Settings** > **Sounds & vibration** > **Phone ringtone**.
- 2 Touch **Video ringtones** and select a video. You can then preview what it looks like for incoming calls.
- 3 Touch **Set** to set the video as the ringtone.

## Set a Ringtone for a Contact


Set a different ringtone for a particular contact to distinguish more easily when that contact is calling you.

- 1 Open **Phone**, touch the **Contacts** tab, then select the contact you want to set a ringtone for.
- 2 On the contact details screen, touch **Ringtone** and select a ringtone.

## Dial VoLTE HD Calls

Voice over LTE (VoLTE) is an IP-based data transmission technology. With VoLTE enabled, you can enjoy high-quality voice and video calls with fast call connection times.


## Enable VoLTE


- 1 Contact your network provider to activate the VoLTE service for your SIM card. If both the primary and secondary SIM card trays of a dual-SIM device support VoLTE, it can be enabled for both SIM cards.
- 2 Go to **Settings > Mobile network > Mobile data** and enable **VoLTE calls** for SIM 1 or 2.
  -  5G services are only available in some countries and regions.


## Make HD Voice or Video Calls

Before making HD voice or video calls, make sure that both parties are using VoLTE-activated devices.

- 1 Open **Phone**, go to the **Contacts** tab, and select the person you want to dial.


- 2 Touch  to make a VoLTE HD voice call.

- 3 Touch  to make a VoLTE HD video call.

During a voice call, you can touch  on the screen to switch to the video call.

## Use VoWiFi for a Brand New Calling Experience

The VoWiFi function enables you to make calls on a Wi-Fi network. You can even make VoWiFi calls in Airplane mode.





- 1 This function requires support from your mobile carrier. Contact your carrier to activate the VoWiFi function.
- 2 Go to **Phone >  > Settings > Wi-Fi Calling**, then enable **Wi-Fi Calling**.

## Manage Incoming Calls





You can use the call waiting feature to answer incoming calls when you are already engaged in a previous call. If you cannot answer a call because your device is faulty or the network signal is poor, you can also set call forwarding to forward calls to another number or device.

### Answer or Reject an Incoming Call

If you receive a call when the screen is locked:

- Drag  right to answer the call.
- Drag  left to reject the call.
- Touch  to reject the call and reply with a message.
- Touch  to set a reminder for calling back.

If you receive a call when the screen is unlocked:


- Touch  to answer the call.
- Touch  to reject the call.
- Touch  to reject the call and reply with a message.
- Touch  to set a reminder for calling back.

### Quickly Answer Calls

When a call comes in, you can quickly answer it by raising the device to your ear. If you're in speaker mode or using Bluetooth earphones, raising the device will switch to earpiece mode. Go to **Settings > Accessibility features > Shortcuts & gestures > Answer calls** and make sure that **Answer calls** is enabled.


### Unfold to Answer Voice Calls on Your Device


Simply unfold your device to answer voice calls.

Go to **Phone >  > Settings** and make sure that **Unfold to answer voice calls** is enabled. If you don't want calls to be answered when you unfold your device, disable **Unfold to answer voice calls**. Alternatively, press the Power button or volume button as a call comes in to quickly stop your device from answering the call when you unfold it.

### Enable Call Waiting



The Call waiting feature lets you answer an incoming call when a call is already in progress by placing the first call on hold. This feature requires the support of your carrier. For details, contact your carrier.

Go to **Phone >  > Settings** and then go to **More > Call waiting**.

 If your phone has two SIM cards installed, configure the settings for SIM 1 and SIM 2 respectively.




This feature may vary depending on your network provider.

### Answer a New Incoming Call During a Call

- 1 When you receive an incoming call when you are already engaged in a previous call, touch  to answer it.
- 2 Touch  or touch a held call in the call list to switch between the two calls.

### Enable Call Forwarding




After the Call forwarding feature is enabled, calls that meet your pre-set conditions will be automatically forwarded to a specified phone number. This feature requires the support of your network provider. For details, contact your network provider.


- 1 Open **Phone**, go to   > **Settings**, and touch **Call forwarding**.
  - 2 Select and enable a forwarding method, then enter and confirm the target number. You can cancel call forwarding in the same path.
-  If your phone has two SIM cards installed, configure the settings for SIM 1 and SIM 2 respectively.
- This feature may vary depending on your network provider.

## Filter and Block Spam Calls

Set different block rules to block sales, fraud, and other kinds of spam calls.







### Filter Spam Calls

- 1 Go to **Phone** >   > **Blocked** > .
 




Alternatively, go to **Optimiser** > **Blocked** > .
- 2 Touch **Call block rules** and toggle on the switches of corresponding block rules.

### Block Incoming Calls from Specific Numbers

You can block incoming calls from specific numbers using either of the following methods:



- Go to **Phone** >   > **Blocked** >  > **Blocklist**, touch , then add the phone numbers you want to block.
- Open **Phone**, touch the **Contacts** tab, touch the contact you want to block, then choose   > **Block contact**.

### Set Whether to Receive Notifications for Blocked Calls

Go to **Phone** >   > **Blocked** >  > **Receive notifications** and set whether to receive notifications when calls are blocked.

### Manage Blocked Calls

On the Blocked screen, you can manage blocked calls, such as by calling back numbers, deleting records, or submitting appeals if a number has been incorrectly marked.

- Go to **Phone** >   > **Blocked**. You can then:
- Touch a record and select **Call** to call back numbers, select **Add to trustlist** or **Add contact**, or touch **Delete** to delete call records.
  - Touch **Clear** to delete blocked calls in batches.
  - Touch **Block rules** to change the block rules.

## Emergency SOS and Calls



## Use Emergency SOS

If you are in an emergency situation, you can quickly and secretly send an SOS message or make an SOS call to your emergency contacts.

**1** Go to **Settings > Security > Emergency SOS**, and touch **Emergency contacts** to add an emergency contact.


**2** Enable **Auto-SOS message** and **Auto-SOS call**, and set related permissions as prompted.

Once you have enabled the Emergency SOS feature and you are in an emergency situation, press the Power button five times in quick succession and your device will automatically send a message with your current location to your emergency contacts. It will also automatically call your emergency contacts one by one and play a pre-recorded SOS message, then end the call automatically.


If **Auto-SOS call** is disabled, after the message is sent, your device will bring up the emergency call screen, from which you can quickly call an emergency service or one of your emergency contacts.

## Make Emergency Calls

In the event of an emergency, you can make emergency calls directly from the lock screen of your device even if there is no signal.





 The emergency call feature is subject to local regulations and individual mobile carriers. Network issues or other types of interference may lead to emergency calls not working.

**1** From the lock screen, access the screen for entering your password, and touch **Emergency**. If you are in an area with a good signal and your device has an Internet connection, it will automatically obtain your location and display it on the screen.

**2** Enter your local emergency number and touch  to call the number. Alternatively, touch **Emergency information** and select an emergency contact to call.

## Perform In-call Operations

During a call, an in-call menu will be displayed.






- Touch  to switch the audio channel to the speaker.
- Touch  to start another call. This feature requires the support of your carrier. For details, contact your carrier.
- Touch  to use the dialler.
- During a call, you can hide the call screen and access other apps by returning to the previous screen or home screen using the current navigation mode on your device. To return to the call screen, touch the green icon in the status bar.
- Touch  to end a call.

# Messaging


## Send and Manage Messages

You can send and receive messages that include text, emojis, pictures, audio files, and more. You can also manage your messages in the message list.


### Send Messages

- 1 Open **Messaging** and touch .
- 2 On the **New message** screen, enter your message content. Touch  to add other types of content such as pictures and audio files.
- 3 In the recipient box, touch , select contacts or contact groups, then touch . To send a group message to those not included in your contacts list, touch anywhere blank in the recipient box and enter the recipients' phone number. Touch the return key in the keyboard when you finish entering each of the phone numbers.
- 4 After finishing editing, touch  to send the message.


### Save a Draft Message

From the **New message** screen, touch  (depending on your device model) or go back to the previous screen while editing a message to save a draft.

### Cancel Sending a Message

On the **Messaging** screen, go to  > **Settings** > **Advanced**, and enable **Recall messages**. Within six seconds after a message is sent, you can double-tap the message to cancel sending it.



### View and Reply to Messages

- 1 On the **Messaging** screen, select a contact to view your conversations.
- 2 To reply to a message, enter your message content in the text box, then touch . Notifications for new messages will be displayed as banners in the notification panel, and you can touch them to reply to messages.

### Mark Messages as Read

You can use any of the following methods to mark messages as read:

- New messages will be displayed in the notification panel in the form of a banner and you can mark them as read there.


- On the **Messaging** screen, swipe left on the message that you want to mark as read, then touch .
- On the **Messaging** screen, go to  > **Mark all as read**.

### Favourite Important Messages

You can favourite an important message for future use.



Touch and hold a message, select messages to be favourited in a message thread, and go to

 > **Favourite** or  > **More** > **Favourite**.

To view the messages you have favourited, open **Messaging** and go to  > **Favourites**.

### Delete a Message



You can delete messages using either of the following methods:

- On the **Messaging** screen, swipe left the message to be deleted, then touch .
- Touch and hold a message, select multiple messages you wish to delete, then touch . Deleted messages cannot be recovered.

### Filter and Block Spam Messages

Set different block rules, such as your blocklist, to block sales, fraud, and other kinds of spam messages.

#### Block Spam Messages


**1** Go to **Messaging** >  > **Blocked** > .

Alternatively, go to **Optimiser** > **Blocked** > .

**2** Touch **Message block rules** and enable **Block unknown numbers**. Your device will then block all messages from unknown numbers.

#### Block Messages from Specific Numbers

**1** Go to **Messaging** >  > **Blocked** >  > **Blocklist**.

**2** Touch  and add the numbers you want to block. SMS and MMS messages sent by these numbers will all be blocked.

#### Block Messages Containing Specific Keywords

**1** Go to **Messaging** >  > **Blocked** >  > **Keyword blocklist**.

**2** Touch  and add the keywords to be filtered. All messages containing these keywords will be blocked.


To unblock messages that contain a specific keyword, touch and hold the keyword in the **Keyword blocklist** and touch **Remove**.

### Set Whether to Receive Notifications for Blocked Messages

Go to **Messaging** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when messages are blocked.

### Manage Blocked Messages

On the Blocked screen, you can manage blocked message, such as by deleting records, restoring messages, or submitting appeals if a number has been incorrectly marked.


Go to **Messaging** >  > **Blocked**. You can then:

- Touch a record and select **Restore to messages** to restore this message to the Messaging app. Touch **Add to trustlist** to add the number corresponding to this message to the trustlist. Touch **Delete** to delete the message record.
- Touch **Clear** to delete blocked messages in batches.
- Touch **Block rules** to change the block rules.


### Use Chat Messages

Chat Messages is a mobile data-based instant messaging service. Integrating the functions of both SMS and MMS messages, it provides you with a new and convenient way of communicating.

Chat Messages supports sending a variety of content, such as text, pictures, voice and video clips, and location information.



-  This feature may vary depending on your network provider.
  - This feature is only available in some countries and regions.






























### Enable Chat Messages


- 1 To use Chat messages, enable the VoLTE service first. For details, contact your network provider.
- 2 Switch to mobile data on your device, then go to **Messaging** >  > **Settings** > **Chat**, and enable **Chat**.

Enabling Chat messages requires mobile data. You can then chat either over mobile data or Wi-Fi after the feature is enabled.

### Send Various Types of Content via Chat Messages



- 1 After you have enabled the Chat message service, access **Messaging** again.
- 2 Touch , then touch  to select one or more contacts. You can then use Chat messages to perform the following:

- Send a voice message: Go to  > **Touch and hold to record** and start recording a voice message. Release the button to send the message or swipe up to cancel.
- Send an emoji: Touch , select an emoji, then touch .
- Send a photo: Go to  >  to take a photo, or go to  >  to select an existing photo.
- Send a video: Go to  >  >  to record a video, or go to  >  to select an existing video.
- Send a location: Go to  > , follow the onscreen instructions to select a location, then touch .
- Send a business card: Go to  > , touch , select the contact whose business card you want to send, then touch .
- Send an event: Go to  >  >  and select an event.
- Send music: Go to  >  >  and select the music you want to send.
- Send a file: Go to  > , touch , select the file you want to send, then touch .

To switch from Chat messages back to normal messages, go to  > **Switch to SMS/MMS** on the chat thread screen.

## Create a Group Chat



Create a group chat in the following ways:

- On the **Messaging** screen, go to  > **New group chat**, then follow the onscreen instructions to create a group chat.
- On a chat screen with a contact, go to  > **New group chat**, then follow the onscreen instructions to create a group chat.

In addition to sending instant voice messages, pictures, videos, emojis, locations, business cards, and files, you can also forward and share content from chat logs. Voice messages can be shared, but cannot be forwarded.

## Manage a Chat Group

You can view and manage chat groups according to your preferences.

- 1 On the **Messaging** screen, go to  > **Chat groups**.
- 2 Select a chat group and go to  > **Group details**. On the **Group details** screen, you can:
  - Manage contacts in the group.
  - Set your nickname in the group.
  - Turn message notifications off for the group.
  - Exit the group.










## MeeTime


### Charges for MeeTime

- MeeTime only uses Wi-Fi or mobile data and will not be charged as calls by your network provider. It is recommended that you use this feature over a Wi-Fi network.
- If you need to make a video call using mobile data, you can perform the following to save on the amount of mobile data you use: On the **MeeTime** screen, touch your profile picture in the upper right corner to access the **Settings** screen, then turn on the **Data saver** switch.

### Make a High-quality Video or Voice Call

 
Use MeeTime to make smooth and high-quality calls between Huawei devices such as phones and tablets. You can enjoy clear video calls even in dark environments and adjust the beauty level during video calls.


- 1 Open **MeeTime** and follow the onscreen instructions to activate and enable it.
- 2 In the **MeeTime** app, go to **Contacts** > **MeeTime**, and touch  or  next to a contact who has enabled **MeeTime** on their devices to make a high-quality video or voice call.
- 3 During a video call, touch the screen and then touch  to access the **Soften** function. Drag the slider left or right to adjust the beauty level.
  -  For better video calls, keep your device within 1 metre (3.3 feet) of you and ensure that you are in a bright environment.
  - The beauty level adjustment feature is only supported by some products.
- 4 You can touch  and then perform the following:
  - Touch  to mute MeeTime.
  - Touch  to use the speaker.
  - Touch  to switch to a voice call.
  - Touch  to share the screen.

 To view or manage your call logs, touch **Calls**.


## Share Your Device Screen During a MeeTime Call

During a MeeTime video call, you can share your screen with the other party and doodle on the screen. The other party will then be able to view your screen and your doodles on it.

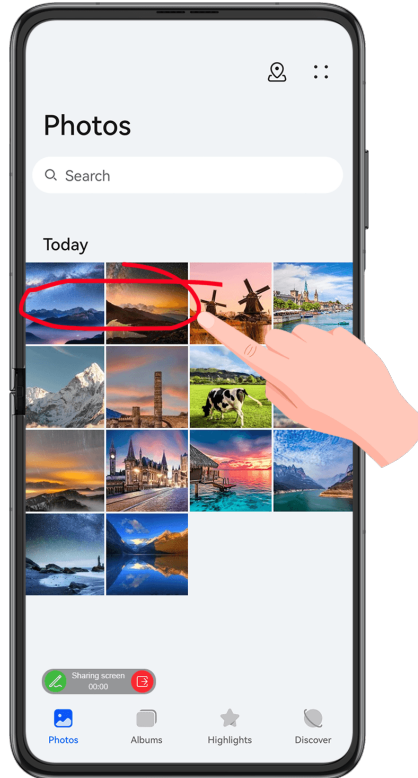

**1** During a video call, touch the screen, go to , and follow the onscreen instructions to share your screen.

While sharing your screen, touch  to start doodling on your screen.



**2** Touch  to exit screen sharing.

## Set MeeTime Phone Numbers

You can use MeeTime with more than one of your phone numbers.

**1** On the **MeeTime** screen, touch your profile picture icon in the upper right corner to access the **Settings** screen.

**2** Touch **Number settings**. You can then:



- Touch  to add another phone number if only one phone number has been linked.
- Touch  to delete any numbers or add new ones if multiple phone numbers have been linked.
- In the list of **Outgoing number (this device)**, select one of the added phone numbers to set it as the default number.

# Calendar


## Use Events

Events help you schedule activities in your daily and work life, such as attending company meetings, arranging social get-togethers, and making credit card repayments. You can add events and set reminders to help you arrange your schedule in advance.


## Add an Event

- 1 Open **Calendar** and touch .
- 2 Enter the details of the event, such as the title, location, and start and end times.
- 3 Touch **Add reminder** to set a time for the event reminder.
- 4 When you are finished, touch .

## Search for an Event

- 1 On the **Calendar** screen, touch .
- 2 Enter keywords of your event in the search box, such as the title and location.

## Share an Event

- 1 Open **Calendar**, then touch an event on a calendar screen or under the schedule tab.
- 2 Touch  to share the event however you prefer when prompted.

## Delete an Event

On the **Calendar** screen, touch the event you want to delete, then touch .

## Set a Calendar Notification

Set the calendar notification type according to your requirements. You can set status bar notifications, banner notifications, and ringtone notifications. After setting the default reminder time, your device will send a notification at the specified time.


Go to **Calendar** >  > **Settings**.

- Touch **Default reminder time** or **Reminder time for all-day events** to set a reminder time.
- Touch **Notifications** and enable **Allow notifications**. Then follow the onscreen instructions to set a notification type.




## Customise Calendar View Settings

You can customise calendar view settings, such as by specifying the start day of the week, and whether to show week numbers.

- 1 Go to **Calendar** >  > **Settings**.
- 2 Select the start day of the week, or enable the switch to show week numbers.

## Set Alternate Calendars

You can switch to other calendars, such as the Chinese lunar calendar or the Islamic calendar.



Go to **Calendar** >  > **Settings** > **Alternate calendars**, and select a calendar you want to use.

# Clock

## Set Alarms

You can set alarms to play a sound or vibrate at specific times.

### Add an Alarm

- 1 Go to **Clock** > **Alarm**, then touch  to add an alarm.
- 2 Follow the onscreen instructions to set the alarm ringtone, repeat cycle, ring duration, and snooze duration.
- 3 Touch  to save the settings.

### Modify or Delete an Alarm

Touch an existing alarm to modify or delete it.

### Snooze an Alarm

If you don't want to get up when an alarm rings, simply touch the snooze button or press the Power button.

The snooze length is set when creating the alarm.



### Turn Off an Alarm

When an alarm rings, swipe left or right on the button that appears at the bottom of the screen to turn it off.

## Use the Timer or Stopwatch

You can use the timer to count down from a specified time. You can also use the stopwatch to measure the duration of an event.

## Timer


Go to **Clock** > **Timer**, set the duration of time, and touch  to start the timer. To stop it, touch .

## Stopwatch

Go to **Clock** > **Stopwatch**, and touch  to start the stopwatch. To stop it, touch .

## View the Time in Cities Worldwide


Use **Clock** to see the local time in different time zones around the world.

Go to **Clock** > **World clock**, touch , and enter the name of a city or select one from the list of cities.

## Display Dual Clocks on the Lock Screen

When you are away from your home time zone, use **Dual clocks** to display the time of both your home city and current location on the lock screen.

Go to **Settings** > **System & updates** > **Date & time**, enable **Dual clocks**, and set a **Home city**. The time of your home city and current location will now both display on the lock screen.




-  Only one clock will display on the lock screen if your current location is in the same time zone as your home city.


# Notepad


## Create a Note

To help you quickly keep a track of your thoughts and inspirations, you can create notes using the Handwrite (to write or draw the content) and Scan document modes, or in conjunction with Multi-Screen Collaboration.


## Add Content to a Note


- 1 Go to **Notepad** > **Notes** and touch .
- 2 Enter the title and content of the note. You can then perform the following:
  - Touch  to add a checklist.
  - Touch  to change the text style, paragraph alignment, and background.

- Touch  to insert a picture. Touch and hold the picture, then drag it to the desired position in the note.
- To organise your notes for easier access and viewing, categorise a note after finishing it.


**3** Touch  to save the note.

### Add a Note by Scanning Documents

**1** Open **Notepad** and go to **Notes** >  >  > **Scan document**.

**2** Align your device camera with the picture or file you want to scan and touch  to start scanning. The scanned pages are saved in Notepad.



**3** Go to **Extract text** > **Save** > **Save images and text** >  to save the note.

 If your device does not have this option, it indicates that this feature is not supported.

### Create Notes by Scanning Certificates or Cards


You can scan certificates or bank cards for future use and add watermarks to prevent theft.


**1** Open **Notepad** and go to **Notes** >  >  > **Add card**.

**2** Point the camera to the certificate or bank card you want to scan, and touch  to scan it one by one or consecutively. Touch  to preview the scanned copies.

**3** (Optional) If you manually unskew the scanned copies, touch  to preview them again.


**4** To add a watermark to the scanned copies, touch **Full-screen watermark** or **Single watermark**.


**5** Touch  to insert the modified scanned copy into the note.


**6** Touch  to save the note.

### Add a Handwritten Note

You can add a handwritten note to write down thoughts and inspirations that would be difficult to convey through text.

**1** Go to **Notepad** > **Notes** and touch .

**2** Touch  to write or draw the content you want to note down in the selected colour.

**3** Touch  to save the note.

## Create Notes by Sharing

You can share web pages, images, text, and other content from other apps to Notepad.

 Not all apps support this feature.

- 1 Open the content you want to share (such as a web page, image, or text) in an app that supports the sharing feature.
- 2 Touch the Share button and select **Notepad**.
- 3 Follow the onscreen instructions to save the shared content to an existing note or create a new note.




## Create To-dos

You can create to-dos to keep a track of day-to-day essentials, such as daily shopping lists, tasks at work, and household chores.

### Add a To-do Item and Set a Reminder for It

You can add a to-do item and set a time reminder for it.

If you have marked the to-do item as important, you will be prompted with a full-screen reminder when the screen is locked.

- 1 Go to **Notepad > To-dos** and touch .
- 2 Enter your to-do item.
- 3 Touch , set a reminder time, then touch **OK**.
- 4 Touch  to mark the to-do item as important.
- 5 Touch **Save** to save your settings.

### Set Repeated Reminders for a To-do Item

If you specify a time for a to-do item, you can select a repeat mode for it (for example, **Never**, **Every day**, **Every week**, **Every month**, or **Every year**), and your device will repeatedly prompt you to complete the to-do item at the specified time.

## Manage Your Notepad





You can sort your Notepad items by category and put them into different folders, delete unwanted items, and share items with other people.

When viewing a list of items or an individual item in Notepad, touch the status bar at the top of the screen to quickly return to the first item or the beginning of the item you are viewing.

### Use App Lock for Notepad or Lock a Note

You can apply App Lock to Notepad or set a password for a note to protect your privacy.

**Enable the app lock for Notepad:** Go to **Settings > Security > App Lock**, enter the lock screen password or customise the app lock password as prompted, and then turn on the switch next to Notepad.

**Lock a note:** Open the note you need to lock in Notepad, go to   > **Add lock**, and follow the onscreen instructions. To unlock your note, go to   > **Remove lock**.





If your device supports fingerprint or face unlock, you can use fast authentication by


performing the following: Go to **Notepad >   > Settings > Note lock**, then enable **Unlock with Fingerprint ID** and **Unlock with Face Recognition**.

### Sort Notepad Items by Category

You can sort the Notepad items into different folders by category and add labels in different colours.

Sort Notepad items using the following methods:

- On the **All notes** screen, swipe left on a note, select  or  to move this note to the top, or add a star icon to it.
- On the **All notes** or **All to-dos** screen, swipe left on an item, touch , and select a category for it.
- Touch and hold a note or to-do item, select the ones you want to classify under the same category, then touch  to move them to the target category.

 Items in an Exchange account cannot be moved.


### Sync Notepad Items


**Sync Exchange email data:** You can sync the data in your Exchange account to Notepad to record important events anytime and anywhere.


- 1 Log in to Exchange on your device.
- 2 Swipe down from the Exchange mail list to sync the notes and tasks from your Exchange account to Notepad. The corresponding notes and to-do items will then be generated automatically.  
A folder named after the Exchange account will also be automatically generated for easy management.

### Share Notepad Items


You can share Notepad items in the following ways:

- To share a single note or to-do item, open the one you want to share from the **All notes** or **All to-dos** screen, then touch  and share it as prompted.  
Notes can be shared by touching **As image**, **As text**, **Export as document**, or **To another device**.

 Handwritten notes do not support **Export as document**, and other types of notes can be exported into TXT or HTML files when using **Export as document**. You can view saved notes as follows: Open **Files**, search for and touch **Documents**, then touch **Notepad**.



- To share multiple notes, access the **All notes** screen, touch and hold a note, select the ones you want to share, then touch  and share them as prompted.


### Print Notepad Items

- 1 On the **All notes** screen, open the item you want to print.
- 2 Go to  > **Print**, then select a printer and configure printing settings as prompted.

### Delete Notepad Items



You can delete Notepad items using either of the following methods:

- On the **All notes** or **All to-dos** screen, swipe left on an item, and touch  to delete it.
- Touch and hold a note or to-do item you want to delete, select or drag over the check boxes of any other notes or to-do items you want to delete as well, then touch .

To restore a deleted Notepad item, touch **All notes** or **All to-dos**, select the item you want to restore in **Recently deleted**, then touch .

## Recorder

### Recorder


- 1 Open **Recorder** and touch  to start recording.
- 2 When recording, you can touch **Tag** to add a tag.
- 3 When you are finished, touch  to stop recording.
- 4 You can touch and hold a recording to share, rename, or delete it.
- 5 You can also swipe left on a recording to share, edit, or delete it.



To view your recordings, open **Files**, then search for and access the **Sounds** folder.

### Play a Recording

Recording files are listed on the **Recorder** home screen. Touch a recording to play it.

On the recording playback screen, you can:


- Touch  to skip the muted parts.

- Touch  to adjust the playback speed.
- Touch  to add a tag.
- Touch a tag to rename it.

### Edit a Recording

- 1 On the **Recorder** home screen, touch a recording.
- 2 Touch **Edit** to display the waveform of the recording.
- 3 Drag the start and end bars to adjust the clip length. Pinch your fingers on the waveform to zoom in or out to adjust the clip length more precisely.
- 4 Touch **Trim** and select **Keep selected part** or **Delete selected part**.

### Share Recordings

- 1 On the **Recorder** home screen, touch the recording you want to share.
- 2 Go to  > **Share**.
- 3 Select your preferred sharing method and follow the onscreen instructions to share the recording.

## Email

### Add Email Accounts




Add your email account in the **Email** app to start using your device for convenient email access.



- 1 Open **Email** on your device, then select the default email or select from the available mailbox providers.
- 2 Enter your email address and password (or a separate password or authentication code), touch **Log in**, and follow the onscreen instructions to complete configuration. The system will automatically connect to the server and check the server settings.

### Use Emails


Select an email account, then write an email and send it to the recipient's email addresses.

### Edit and Send Emails

- 1 Open **Email** and touch .
- 2 Enter the recipient's email address, or touch  to select a contact or group, then touch .




- 3 Touch  and add the addresses of any recipients to whom you wish to CC or BCC the email.  
If you have more than one email account, you will also need to select the email address you wish to send the email from.
- 4 Write the email, enter the subject, then touch .

### Save an Email as a Draft

On the **Compose** screen, enter the recipient's email address, subject, or email content, and touch  to save the email as a draft.




To view draft emails, go to **Inbox > Show all folders > Drafts**.

### Reply to an Email

- 1 On the **Inbox** screen, open the email you wish to reply to.
- 2 Touch  to reply to the email sender, or touch  to reply to everyone in the thread.
- 3 After writing your reply, touch .



### Set Encryption for Outgoing Emails

You can encrypt outgoing emails to protect your confidential information. Encrypted emails can only be viewed by recipients who have the required digital certificates, thereby ensuring information security.

- 1 Apply for and install a digital certificate.
  -  You need to apply for a digital certificate from a trusted third-party certificate authority (CA) before installing it. The processing procedure varies between different CAs. For details, refer to the relevant CA website.
- 2 From the **Inbox** screen, go to   **> Settings**.
- 3 Touch the account you want to set encryption for, touch **Email encryption**, then enable **Encrypt outgoing emails**.
- 4 If the certificate has been installed, select **Encryption certificate** and set **Encryption algorithm** according to your preferences.  
If no certificate has been installed, enable **Send encrypted emails without installing certificates**.

### Set Email Notifications

Set a notification mode for your emails as needed.


- 1 Go to **Email >   > Settings > General > Notifications**, and enable **Allow notifications**.
- 2 Select the email account you want to set notifications for, turn on the **Allow notifications** switch, then select a notification mode.



## View and Manage Emails



Receive, view, and manage your emails in the inbox.

### View Emails

- 1 Open **Email**, then swipe down on the **Inbox** screen to refresh the email list.  
If you have multiple email accounts, touch **Inbox** and select the email account you want to view. You can also view files in the **Unread** or **Sent** folder on the **Folders** list.
- 2 Open an email, then view, reply to, forward, or delete the email.  
If you are notified about an important event in an email, go to  **> Add to calendar** to import the event into your calendar.
- 3 Swipe left or right on the email screen to view the previous or next email.

### Add an Email Contact to a Group


You can create email groups to communicate more efficiently.

- 1 On the **Inbox** screen, open an email and go to  **> Add to group**.
- 2 Add the email sender or recipient to the group and touch **OK**.
- 3 On the group selection screen, select an existing group, then touch  to save the contact in the group.  
Alternatively, touch **Create group**, enter the group name, then touch **Save**.

Once you have created a group, you can select the group from the recipient drop-down list to send emails to group members.

### Sync Emails Automatically

After automatic email syncing is enabled, the emails on your device will be automatically synced with those on the email server.

- 1 From the **Inbox** screen, go to  **> Settings**.
- 2 Touch the account you wish to sync emails for, then turn on the **Sync Email** switch.
- 3 Touch **Sync frequency** to set the automatic syncing period.


### Search for Emails

On the **Inbox** screen, touch the search box, then enter keywords such as the subject or content of the email.

### Mark Important Emails


Mark an email as important for further actions or future reference with a star.


Open **Email** and touch the  icon next to any email to mark it as important.

Touch an email box, such as **Inbox**, and find the **Starred** folder in the **Folders** list to check starred emails. Touch  next to an email to unmark it.


## Switch Email Display Mode

You can switch between two email display modes based on your preference.

On the **Inbox** screen, touch  and select **Conversation view** or **List view**.

 Emails are displayed in **List view** by default. Some operations may not be supported after switching to **Conversation view**.


## Delete Emails

On the **Inbox** screen, touch and hold the email you want to delete, touch any other emails you want to delete as well, then touch .

## Manage Multiple Email Accounts

You can add and manage multiple email accounts.


### Add Multiple Email Accounts

- 1 Go to **Email** >  > **Settings** > **Add account**.
- 2 Select an existing email service provider or enter a new email address and password to add an email account.

### Switch Between Email Accounts

On the **Inbox** screen, touch **Inbox** and select the email account you wish to use.

### Change Account Name and Signature

On the **Inbox** screen, go to  > **Settings**, select an account, and set the corresponding **Account name**, **Signature**, and **Default account**.

### Log Out of an Email Account


On the **Inbox** screen, go to  > **Settings**, select an account, and touch **Remove account**.

## Manage VIP Contacts




Important email contacts can be added as VIP contacts. Emails from VIP contacts will be automatically stored in the VIP inbox.

### Add a VIP Contact

You can add VIP contacts using either of the following methods:

- Go to **Email** >  > **Settings** > **VIP contacts**. On the **VIP list** screen, choose **Add** > **Create**, or touch **Add from contacts**.
- Open an email, touch the receiver or sender, then touch **Add to VIP list** in the pop-up dialog.

### Delete a VIP Contact

- 1 Go to **Email** >  > **Settings** > **VIP contacts**.
- 2 On the **VIP list** screen, touch .
- 3 Select the VIP contact you want to delete, then touch .




## Calculator

### Calculator





Use the calculator on your device to perform basic mathematical calculations and for calculating exponential, logarithmic, and trigonometric functions.

### Use Calculator

You can open Calculator in the following ways :

- Swipe down from the middle of the home screen to display the search box and search for **Calculator**. The first result will be the pre-installed **Calculator** app.
- Swipe up from the bottom of the lock screen to display the shortcut panel, then touch .
- To use the scientific calculator, go to  > **Scientific**.  
 The scientific calculator is only supported on certain device models.



### Copy, Delete, or Clear Numbers


- Copy a calculation result: Touch and hold the calculation result, touch **Copy**, then paste the result somewhere else, such as in a note or message.
- Delete the last digit: Touch .
- Clear the display: Touch . You can also touch  to clear the display after touching  to complete the calculation.

## Torch

## Torch

You can turn on or turn off the torch in the following ways:

- Swipe down from the upper right edge of the screen to display **Control Panel**, touch  to expand the shortcut switches panel, and touch **Torch** to turn on or turn off the torch.
- Swipe up from the bottom edge of the lock screen to display the shortcut panel, and touch  to turn on or turn off the torch.

When the torch is turned on, a notification indicating that it is turned on will be displayed on the lock screen. Touch  to turn off the torch.

## Compass

### Compass

#### View Directions and Coordinates Using Compass

Compass shows you the direction your device is pointing, as well as your current longitude and latitude.

**1** You can open Compass in the following ways:

- Swipe down from the middle of the home screen to display the search box and search for **Compass**. The first result will be the preinstalled **Compass** app.
- Find **Compass** in the **Tools** folder.

**2** You can view directions and coordinates in the following ways:

- If you hold your device flat, the Compass screen will display a dial together with the direction your device is pointing and your current coordinates.
- If you hold your device upright, the Compass screen will display the viewfinder of the rear camera on your device, together with the direction your device is pointing and your current coordinates.

To lock your current direction, touch the compass dial. The dial marks will turn blue if you go off course.

For more accurate bearings, hold your device flat or upright when using Compass.

#### View Atmospheric Pressure and Altitude Using Compass

In Compass, you can view the atmospheric pressure and altitude in the following ways:

- If you hold your device flat, the Compass screen will display a dial together with the atmospheric pressure and altitude of your current location.

- If you hold your device upright, the Compass screen will display the viewfinder of the rear camera on your device, together with the atmospheric pressure and altitude of your current location.

For more precise altitude data, touch  and enable **Online altitude calibration**.

## Calibrate the Compass


If the direction displayed on a compass or map app is different from the actual direction, you need to calibrate the Compass.

- 1 In an environment with magnetic field interference (such as from magnets or microwave ovens), the calibration screen will automatically be displayed when **Compass** is opened.
- 2 Move to an area away from magnetic interference, hold your device, and follow the onscreen instructions to calibrate the device.

## App Twin

### Enable App Twin

App Twin enables you to log in to two WhatsApp or Facebook accounts simultaneously, allowing you to keep your work and private life separate.

 **App Twin** is only supported by some apps.

Go to **Settings > Apps > App Twin** and turn on or off the switch for the app you want to apply the feature.

The twin app will then be displayed on the home screen.

## Optimizer

### Clean Up Device Storage

You can use **Cleanup** in **Optimiser** to scan for redundant or large files, such as app residue, unwanted installation packages, WeChat data, and more. Once detected, you can choose whether or not to delete files as suggested.

- 1 Open **Optimiser**, then touch **Cleanup**.
- 2 When the scan is complete, touch **Clean up** after each item and delete any files you don't need.

### Manually Clean Up System Trash

In addition to automatic cleanup, your device will also detect and recommend trash files for you to clean up manually.

On the **Cleanup** screen, touch **Clean up** next to a category, select the items you want to clean up, then touch **DELETE**.

## Clean Up Duplicate Files

**Optimiser** can identify duplicate files on your device.

On the **Cleanup** screen, touch **Duplicate files**, then select unwanted files to delete them.

## Manage Data Usage

Open **Optimiser**, then touch **Data usage** to view data usage and manage network access.

### View and Manage High Data Consumption Apps


- 1 You can find out how much data your apps are using in comparison to each other by going to **Data usage this month** on the Data usage screen.
- 2 Touch a high data consumption app to set mobile data, roaming data, or background data usage limits for it.

### View and Set the Network Access Permission of an App

On the Data usage screen, touch **Network access**, then change the settings for apps that consume a large amount of data (such as video streaming apps) so they can only be used when you are connected to a Wi-Fi network.

### Enable or Disable Smart Data Saver

Enable Smart data saver to prevent apps from using mobile data in the background.

- 1 On the Data usage screen, touch **Smart Data Saver**, then enable it. The  icon will then display on the status bar.
- 2 If you want to allow unrestricted access to data for some apps even when they are running in the background, toggle on the switches for these apps.

### Add Mobile Data Usage Reminders

Add data plans for your SIM cards and usage reminders in **Optimiser** to keep you informed of your data consumption.

- 1 On the **Data usage** screen, go to **More data settings** > **Monthly data limit** and follow the onscreen instructions to add a data plan.
- 2 On the **More data settings** screen, touch **Usage reminders**. From there, you can set whether a notification will be sent or if mobile data will be disabled once the monthly data limit or roaming data limit has been topped.
- 3 On the **More data settings** screen, you can set whether to **Show data used when the screen is locked**.

## Filter and Block Spam Calls

Set different block rules to block sales, fraud, and other kinds of spam calls.

### Filter Spam Calls





- 1 Go to **Phone** >  > **Blocked** > .

Alternatively, go to **Optimiser** > **Blocked** > .

**2** Touch **Call block rules** and toggle on the switches of corresponding block rules.

### Block Incoming Calls from Specific Numbers

You can block incoming calls from specific numbers using either of the following methods:

- Go to **Phone** >  > **Blocked** >  > **Blocklist**, touch , then add the phone numbers you want to block.
- Open **Phone**, touch the **Contacts** tab, touch the contact you want to block, then choose  > **Block contact**.

### Set Whether to Receive Notifications for Blocked Calls

Go to **Phone** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when calls are blocked.

### Manage Blocked Calls

On the Blocked screen, you can manage blocked calls, such as by calling back numbers, deleting records, or submitting appeals if a number has been incorrectly marked.



Go to **Phone** >  > **Blocked**. You can then:

- Touch a record and select **Call** to call back numbers, select **Add to trustlist** or **Add contact**, or touch **Delete** to delete call records.
- Touch **Clear** to delete blocked calls in batches.
- Touch **Block rules** to change the block rules.

### Filter and Block Spam Messages

Set different block rules, such as your blocklist, to block sales, fraud, and other kinds of spam messages.

#### Block Spam Messages


**1** Go to **Messaging** >  > **Blocked** > .

Alternatively, go to **Optimiser** > **Blocked** > .




**2** Touch **Message block rules** and enable **Block unknown numbers**. Your device will then block all messages from unknown numbers.

#### Block Messages from Specific Numbers

**1** Go to **Messaging** >  > **Blocked** >  > **Blocklist**.

- 2 Touch  and add the numbers you want to block. SMS and MMS messages sent by these numbers will all be blocked.

### Block Messages Containing Specific Keywords

- 1 Go to **Messaging** >  > **Blocked** >  > **Keyword blocklist**.
- 2 Touch  and add the keywords to be filtered. All messages containing these keywords will be blocked.


To unblock messages that contain a specific keyword, touch and hold the keyword in the **Keyword blocklist** and touch **Remove**.

### Set Whether to Receive Notifications for Blocked Messages

Go to **Messaging** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when messages are blocked.

### Manage Blocked Messages

On the Blocked screen, you can manage blocked message, such as by deleting records, restoring messages, or submitting appeals if a number has been incorrectly marked.

- Go to **Messaging** >  > **Blocked**. You can then:
- Touch a record and select **Restore to messages** to restore this message to the Messaging app. Touch **Add to trustlist** to add the number corresponding to this message to the trustlist. Touch **Delete** to delete the message record.
  - Touch **Clear** to delete blocked messages in batches.
  - Touch **Block rules** to change the block rules.

### One-Touch Optimisation

Use the **OPTIMISE** feature of **Optimiser** to keep your device in an optimal state.

- 1 Open **Optimiser**, and touch **OPTIMISE**.
- 2 Wait until **Optimiser** finishes checking your device and provides you with the optimisation results.


## Phone Clone

### Use Phone Clone to Move Data to Your New Device


**Phone Clone** lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.



## Migrate Data from a Huawei or Other Android Device

- 1 On your new device, open the **Phone Clone** app, or go to **Settings > System & updates > Phone Clone**, touch **This is the new device**, and select **Huawei** or **Other Android**.
  - 2 On your old device, follow the onscreen instructions to download and install **Phone Clone**.
  - 3 On the old device, open the **Phone Clone** app, touch **This is the old device**, and follow the onscreen instructions to connect the old device with your new device by scanning a code or connecting manually.
  - 4 On your old device, select the data you want to clone, then touch **Next > Transfer** to start cloning.
-  You can search for Android versions that support **Phone Clone** in **AppGallery** and view more information on the app details screen.

## Migrate Data from an iPhone or iPad

- 1 On the new device, open the **Phone Clone** app, or go to **Settings > System & updates > Phone Clone**, touch **This is the new device**, and select **iPhone/iPad**.
  - 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
  - 3 On the old device, open the **Phone Clone** app, touch **This is the old device**, and follow the onscreen instructions to connect the old device with your new device by scanning a code or connecting manually.
  - 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.
-  You can search for iOS versions that support **Phone Clone** in **App Store** and view more information on the app details screen.

# Settings

## Search for Items in Settings

### Quickly Find What You are Looking For

Tired of trudging through layers of settings? Just search for them using the search box.


- Swipe down from the middle of the screen to display the search box. Enter the name of a setting to obtain search results.
- Open **Settings** and enter the name of a setting in the search box at the top of the screen to obtain search results.

## Wi-Fi

### Introduction to Wi-Fi

Connecting to the Internet over Wi-Fi is an effective way to save mobile data. You can also enable Wi-Fi security monitoring to avoid risky hotspots and ensure safe Internet access.

### Connect to a Wi-Fi Network


 Be extra careful when connecting to a free public Wi-Fi hotspot to avoid security risks and economic loss resulting from the leakage of your personal data.


- 1 Go to **Settings** > **Wi-Fi**, and enable **Wi-Fi**.
- 2 Connect to a Wi-Fi network on the **Wi-Fi** screen using either of the following methods:
  - Select a Wi-Fi network to connect to under **Available**. A password is required for encrypted networks.
  - To manually add a Wi-Fi network, scroll down to the bottom of the screen, touch **Add network**, and enter the SSID and password as prompted to complete the connection.

The  icon displayed on the status bar indicates that the device is connected to Wi-Fi.

### Transfer Data Using Wi-Fi Direct

You can use Wi-Fi Direct to transfer data between Huawei devices. Wi-Fi Direct allows you to transfer large files to a nearby device more quickly than Bluetooth and without having to pair the devices.

- 1 On the receiving device, go to **Settings** > **Wi-Fi** and enable **Wi-Fi**.
- 2 Then go to **More settings** > **Wi-Fi Direct** to start searching for nearby devices that have enabled Wi-Fi Direct.
- 3 On the sending device, touch and hold to select the files you want to share, touch , and select **Wi-Fi Direct**.

 These steps may be different if you are sharing files directly from an app.

- 4 Touch the icon of the receiving device to establish a connection, then share the files.
- 5 On the receiving device, accept the Wi-Fi Direct transfer request.

Then search for and access the **Wi-Fi Direct** folder in **Files** to view the received files.

## Select a Network Using Wi-Fi+

When Wi-Fi+ is enabled, if your device detects a Wi-Fi network that it has previously connected to or is free, it will automatically enable Wi-Fi and connect to the network. Your device will also evaluate the quality of the current Wi-Fi network and switch to mobile data if the Wi-Fi signal is poor.


- 1 Go to **Settings** > **Wi-Fi**.
- 2 Touch **More settings** > **Wi-Fi+** and enable or disable **Wi-Fi+**.

## Mobile Data

### Connect to Mobile Data

Connect to a mobile network to enjoy smooth Internet access anytime and anywhere.



### Enable Mobile Data

- 1 Subscribe to mobile data services for your SIM card first.
- 2 Connect to the mobile network using the following methods:
  - Swipe down from the upper right edge of the screen to display **Control Panel**, touch  to expand the shortcut switches panel, then enable **Mobile data**.
  - Go to **Settings** > **Mobile network** > **Mobile data** and enable **Mobile data**.

To save battery power and mobile data, disable the mobile data service when you don't need it.


### Switch Between Dual SIMS

After inserting two SIM cards in your device, you can use a shortcut switch to quickly switch between the two SIMs.

- 1 Swipe down from the upper right edge of the screen to display **Control Panel**, touch  to expand the shortcut switches panel, then enable **Mobile data**.
- 2 Touch the text under , select the target SIM in the displayed window, and touch **OK**.

### Configure Dual SIM Settings

If your device has two SIM cards inserted, you can set the default mobile data SIM and the default calling SIM, and enable call forwarding between the two SIM cards.


 This feature applies to dual-SIM devices only.

### Set the Default Mobile Data and Default Calling SIM Cards

Go to **Settings** > **Mobile network** > **SIM management** and set SIM 1 or SIM 2 as the default mobile data or default calling SIM card.

### Enable Call Forwarding Between SIM Cards

After enabling call forwarding for both SIM cards, if incoming calls cannot reach one of the SIM cards, they will be forwarded to the other one.


 This feature requires the support of your carrier. For details, contact your carrier.

- 1** Go to **Settings** > **Mobile network** > **SIM management** > **Call forwarding between SIMs**.
- 2** Select a call forwarding mode and turn on the corresponding switch.  
Call forwarding between two SIM cards will be enabled when it is configured for both SIM cards.

### Share Your Network Connection with Other Devices

Once **Personal hotspot** has been enabled, you can share your mobile data or the Wi-Fi network your device is currently connected to with other devices.

#### Share Your Network via Personal Hotspot

-  • The settings items vary by device. If your device does not provide a specific item, it indicates that the corresponding feature is not supported.
- Some Wi-Fi networks that require authentication cannot be shared.


Go to **Settings** > **Mobile network** > **Personal hotspot**, and enable **Personal hotspot**. The mobile data or Wi-Fi network connection of your device will then be shared with other devices.

You can also perform the following for the personal hotspot:

- Set **Device name**.
- Set **Password**.
- Touch **Connected devices** to view the connected devices list and blocklist. Touch a device in the **Connected devices** list to move it to the **Blocklist** list as prompted. You can also remove a device from the list.
- If you are sharing a mobile data network, you can also touch **More** to set **Data limit** and **AP band**.

#### Share Your Network via Bluetooth

- 1** Go to **Settings** > **Bluetooth**, and enable **Bluetooth**. Select a device, then follow the onscreen instructions to complete pairing.

- 2 Go to **Settings > Mobile network > Personal hotspot > More**, and enable **Bluetooth tethering**.
- 3 On the **Bluetooth** settings screen of the paired device, touch  next to the name of your device, then enable **Internet access** to share your network.


### Share Your Network via USB

- 1 Use a USB cable to connect your device to your computer.
- 2 On your device, go to **Settings > Mobile network > Personal hotspot > More**, and enable **USB tethering** to share your mobile data or the currently connected Wi-Fi network.

### Dial VoLTE HD Calls



Voice over LTE (VoLTE) is an IP-based data transmission technology. With VoLTE enabled, you can enjoy high-quality voice and video calls with fast call connection times.

#### Enable VoLTE

- 1 Contact your network provider to activate the VoLTE service for your SIM card. If both the primary and secondary SIM card trays of a dual-SIM device support VoLTE, it can be enabled for both SIM cards.
  - 2 Go to **Settings > Mobile network > Mobile data** and enable **VoLTE calls** for SIM 1 or 2.
-  5G services are only available in some countries and regions.

#### Make HD Voice or Video Calls

Before making HD voice or video calls, make sure that both parties are using VoLTE-activated devices.

- 1 Open **Phone**, go to the **Contacts** tab, and select the person you want to dial.
- 2 Touch  to make a VoLTE HD voice call.
- 3 Touch  to make a VoLTE HD video call.

During a voice call, you can touch  on the screen to switch to the video call.

### Manage Data Usage

Open **Optimiser**, then touch **Data usage** to view data usage and manage network access.

#### View and Manage High Data Consumption Apps


- 1 You can find out how much data your apps are using in comparison to each other by going to **Data usage this month** on the Data usage screen.
- 2 Touch a high data consumption app to set mobile data, roaming data, or background data usage limits for it.

## View and Set the Network Access Permission of an App

On the Data usage screen, touch **Network access**, then change the settings for apps that consume a large amount of data (such as video streaming apps) so they can only be used when you are connected to a Wi-Fi network.

## Enable or Disable Smart Data Saver

Enable Smart data saver to prevent apps from using mobile data in the background.

- 1 On the Data usage screen, touch **Smart Data Saver**, then enable it. The  icon will then display on the status bar.
- 2 If you want to allow unrestricted access to data for some apps even when they are running in the background, toggle on the switches for these apps.


## Add Mobile Data Usage Reminders

Add data plans for your SIM cards and usage reminders in **Optimiser** to keep you informed of your data consumption.

- 1 On the **Data usage** screen, go to **More data settings** > **Monthly data limit** and follow the onscreen instructions to add a data plan.
- 2 On the **More data settings** screen, touch **Usage reminders**. From there, you can set whether a notification will be sent or if mobile data will be disabled once the monthly data limit or roaming data limit has been topped.
- 3 On the **More data settings** screen, you can set whether to **Show data used when the screen is locked**.

## Enable Data Roaming

Once you have activated the international roaming service, you can enable this feature to use mobile data when travelling abroad.

-  . This feature requires the support of your carrier. For details, contact your carrier.
  - Charges may apply when using the international roaming service. For details about how data roaming fees are charged, contact your carrier.

Go to **Settings** > **Mobile network** > **Mobile data**, and enable **Data roaming**.


If your phone has two SIM cards installed, configure the settings for SIM 1 and SIM 2 respectively.

## More Connections

### Enable or Disable Airplane Mode

When taking a flight, you can enable Airplane mode to comply with airline requirements. In Airplane mode, your device will not be able to make or answer calls, send or receive SMS messages, or use mobile data, but all other functions will be available.

You can enable or disable Airplane mode using the following methods:

- Swipe down from the upper right edge of the screen to display **Control Panel** and touch  to expand the shortcut switches panel. Enable or disable **Airplane mode**.
- Go to **Settings > Mobile network** and enable or disable **Airplane mode**.





When Airplane mode is enabled for the first time, Wi-Fi and Bluetooth will be disabled automatically.


You can re-enable Wi-Fi or Bluetooth if allowed to do so by the airline. The settings will be saved and take effect the next time you enable Airplane mode on your device.

## Project Your Device Screen Wirelessly

Project your device wirelessly to stream films and work on a bigger screen (such as a TV).

Different display devices support different projection protocols. Therefore, the projection method may vary. Choose a suitable method based on the protocol supported by your device.

-  For details about the supported projection protocols, refer to the product manual or contact the product manufacturer.
- 1 Ensure that the DVKit/Cast+/Miracast switch or the projection switch is enabled on the display device. For details about how to turn on the switch, refer to the product manual or contact the product manufacturer.
  - 2 Swipe down from the upper right edge of your device to display **Control Panel** and touch  .
  - 3 In **Control Panel**, touch  to expand the shortcut switches panel, then touch **Wireless Projection**. Your device will then start searching for available external displays. You can also go to **Settings > More connections > Easy Projection** to enable **Wireless Projection**.
  - 4 Touch the device that you want to project your device to from the detected devices. By default, after the connection is successful, banner notifications for incoming calls, messages, and alarms, and Multi-Window are only displayed on your phone instead of the external display. To show notifications on the external display, touch  and turn off the switch for **Hide notifications**.

To exit wireless projection, go to  > **Disconnect**.

 
## Device Projection Using a Wired Connection

You can project your device screen on a large display (for example, a TV) using a wired connection.

It is recommended that you purchase the accessories from authorised channels.

## Projection Using a Type-C Cable

- 1 Prepare a Type-C cable.  
Use a Type-C to HDMI, Type-C to DP, or Type-C to MiniDP cable depending on your large display.

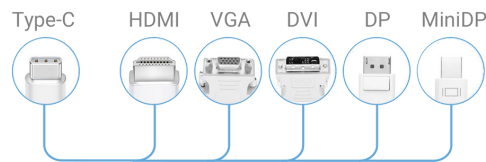

- 2 Connect the Type-C end to your device and the other end to the large display.



- 3 On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

## Projection Using a Docking Station

You can use a docking station to connect your device with a large display, and connect them with a wired keyboard and mouse.

- 1 Prepare a docking station.  
Multiple types of ports are available on a docking station. If the large display supports HDMI and you need to use a wired mouse and keyboard, use a docking station with at least one HDMI port and two USB ports.





- 2 Connect your device and the large display to the docking station, then connect the wired mouse and keyboard to the docking station.





- 3 On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

## Share Files Between Devices with Huawei Share

You can use Huawei Share to easily share files wirelessly between Huawei devices.

 
### Share Online Files Between Devices


Share videos, websites, and other content in apps (such as **Video**, HUAWEI Browser, and Dianping) as links via Huawei Share. The content will be displayed directly on the receiving device once received.

- 1 On the receiving device, enable **Huawei Share**.
- 2 On the sending device, open the app or website you want to share the content from, go to  > **More**, touch **Huawei Share**, wait for the system to scan for available devices, and touch the name of the device you want to send the content to.
- 3 On the receiving device, touch **Accept** to accept the transfer. The content will be opened upon completion of the transfer.
  -  The operations may vary depending on the app you share from.
  - Please make sure both devices have been updated to the latest system version.

### Share Local Files Between Devices

If both devices support ultra-fast transmission, you can share a 2 GB film or a series of albums with a lot of photos between the devices within 30 seconds via **Huawei Share** (for the list of devices that support ultra-fast transmission, please visit the official website). You can preview the content on the receiving device before the transfer. Upon receiving the file, the content will be displayed directly on the receiving device. For example, the recipient will be automatically directed to Gallery to view received pictures and videos.

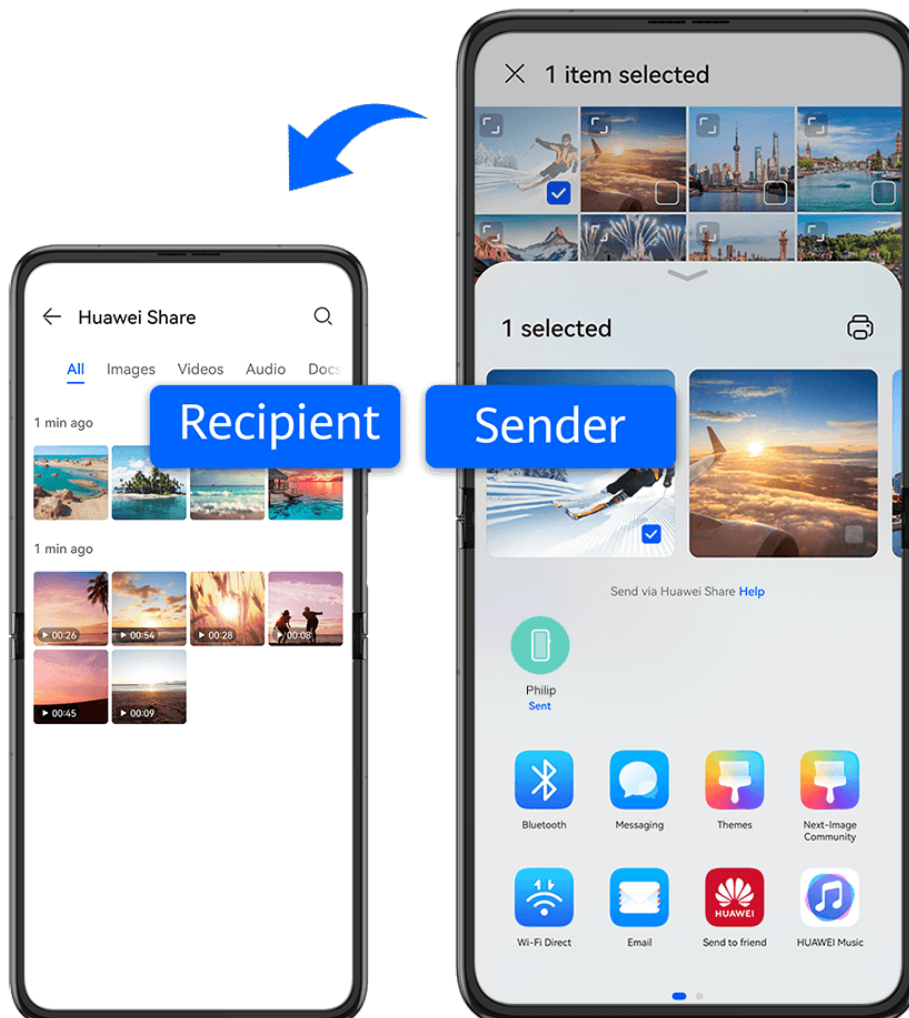

 The figures are for reference only.

- 1 On the receiving device, enable **Huawei Share**.
- 2 On the sending device, touch and hold the file to be shared, and touch . Then touch **Huawei Share**, wait for the system to scan for available devices, and touch the name of the device you want to send the file to.
  -  These steps may be different if you are sharing files directly from an app.
- 3 On the receiving device, touch **Accept** to accept the transfer.

Then open **Files** to view the received file.


You can also view the received images or videos by going to **Gallery > Albums**.


## Share Files Between Your Device and Computer with Huawei Share

 You can use Huawei Share to easily share files wirelessly between your device and a computer (Windows or macOS).

### Share Files from Your Device to Your Computer

Share files from your device to your computer using Huawei Share. You can then easily access the shared folders on your device from your computer.

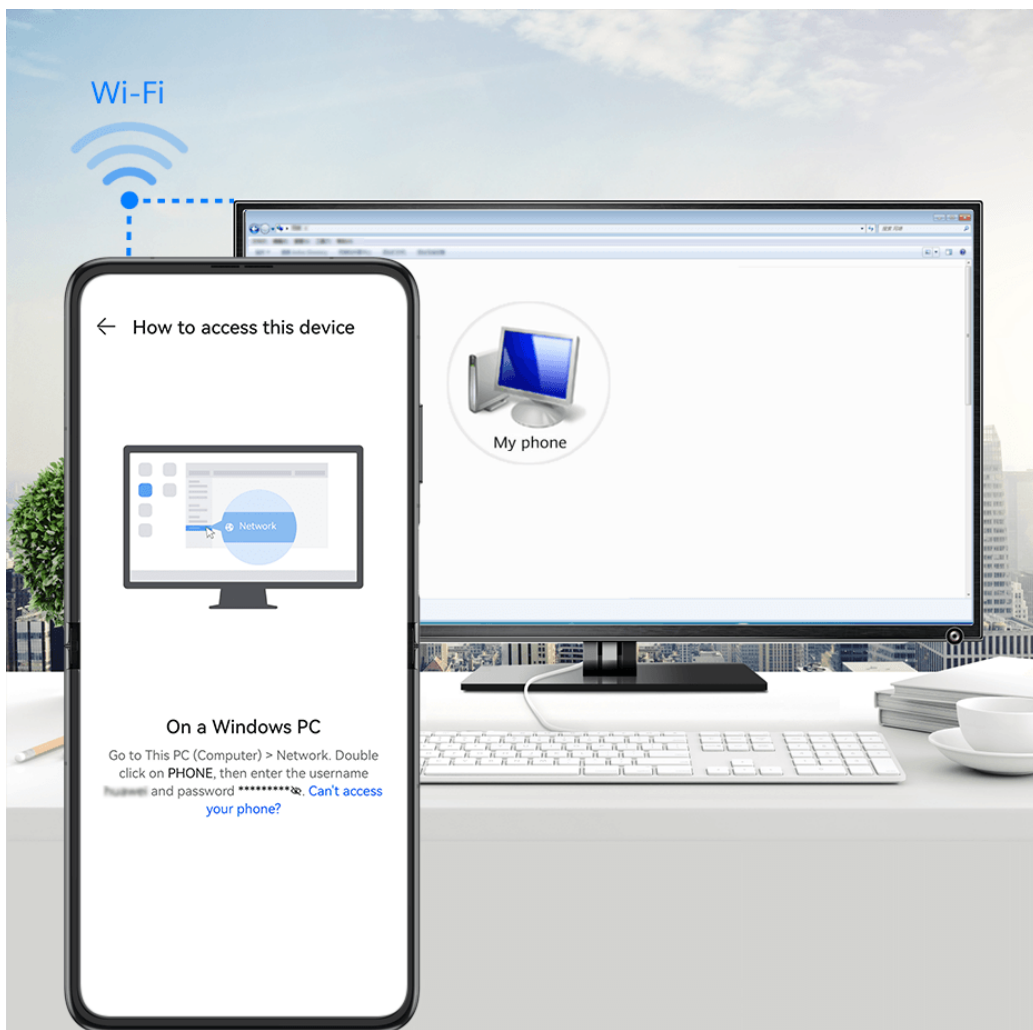

 The figures are for reference only.

- 1 Make sure your device and computer are connected to the same Wi-Fi network.
- 2 On your device, access the **Huawei Share** settings, then enable **Huawei Share** and **Computer Share**.
- 3 Make a note of the name displayed next to **Name shown on computers** as well as the user name and password under **Verification**.
- 4 Perform the following operations on a Windows-based computer (desktop or laptop) or a macOS-based computer (laptop):
  - Windows: Go to **This PC (Computer) > Network**.
  - macOS: Go to **Finder > Go > Network**.
    - ⓘ Currently, this feature is only available on Macs running macOS 10.8 to 10.14.
- 5 On your computer, double-click the name of your device and enter the user name and password that you made a note of.
- 6 Open a shared folder, such as the **Internal storage** or **Album** folder, to view, edit, or copy files from your device to your computer or vice versa.  
Changes made to files in the shared folders on your computer will be automatically synced to your device and vice versa.

### Share Files Between Your Device and Computer

You can use Huawei Share to share files between your device and Huawei computer.

- 1 Swipe down from the upper right edge of your device to display **Control Panel**, touch to expand the shortcut switches panel, then enable **Huawei Share**.
- 2 Open PC Manager on your computer and enable **Huawei Share**.


You can transfer files in the following ways:

#### From your device to your computer:

- 1 On your device, touch and hold to select files to be transferred, then touch **Share**.
- 2 From the device list, select the name of the target computer.
- 3 In the displayed dialog box on your computer, click **Accept**.
- 4 After the transfer is successful, the folder where the transferred files are saved will be automatically opened on your computer for your easy access.

#### From your computer to your device:

- Transfer by sharing
  - 1 On the computer, right-click the files to be transferred and select **Huawei Share**.
  - 2 From the device list that pops up, select your device.
  - 3 In the displayed dialog box on your device, touch **Accept**.
- Transfer by dragging
  - 1 Select the file to be transferred and drag it to the corresponding device on the Huawei Share screen.
  - 2 In the displayed dialog box on your device, touch **Accept**.

 Ensure that PC Manager is running version 11.1 or later.

## Print Images and Documents



Connect your device to a Mopria-certified printer via Wi-Fi, and then you will be able to print images and documents from your device.

### Connect Your Device to a Printer

- 1 Check the printer manual or consult with its manufacturer to verify that it is Mopria-certified.  
If it is not, consult with its manufacturer to install the corresponding app or plug-in for it on your device.
- 2 Connect your device and the printer to the same Wi-Fi network using any of the following methods:
  - Connect to a Wi-Fi router: Enable Wi-Fi on the printer and connect it to the Wi-Fi router. On your device, go to **Settings > Wi-Fi**, enable **Wi-Fi**, touch the same Wi-Fi router, and follow the onscreen instructions to complete the settings.
  - Connect with Wi-Fi Direct: If your printer supports Wi-Fi Direct, follow the instructions in the printer manual to enable this feature. On your device, go to **Settings > Wi-Fi**, enable **Wi-Fi**, go to **More settings > Wi-Fi Direct**, then touch the printer to establish the connection.
  - Connect to your printer's hotspot: If your printer can double as a wireless hotspot, follow the instructions in the printer manual to enable the hotspot and set a password. On your device, go to **Settings > Wi-Fi**, enable **Wi-Fi**, touch the printer's hotspot, then follow the onscreen instructions to complete the settings.
- 3 Go to **Settings > More connections > Printing > Default Print Service**, and enable **Default Print Service**.
- 4 Select the printer from the search results and follow the onscreen instructions to add the printer.

### Print Files

To print files in **Gallery** and **Notepad**, do the following:

- Print an image: Open **Gallery**. Open the image you want to print, go to  **> Print or export to PDF**, select the printer, then follow the onscreen instructions to complete the printing.
- Print a note: Open **Notepad**. Open the note you want to print, touch  **> Print**, then follow the onscreen instructions to complete the printing.

### Connect to a VPN Network

A virtual private network (VPN) is a temporary connection that extends a private network across a public network, encrypting data transmission to provide security.

When working outside the office, you can use a VPN to securely access your company's Intranet.

The following types of servers are supported:

- PPTP: It stands for Point-to-Point Tunneling Protocol, offering MPPE encryption.
- L2TP: It stands for Layer 2 (Data Link Layer) Tunneling Protocol, offering IPsec PSK and IPsec RSA encryption.
- IPsec Xauth: Offering PSK, RSA, and Hybrid RSA encryption.

### Connect to a PPTP Server

- 1** Obtain the required data such as the VPN server name and address from your VPN server administrator.
- 2** Go to **Settings > More connections > VPN > Add VPN network**, enter the VPN name, set the server type to **PPTP**, then enter the server address.
- 3** If the VPN server does not have a DNS address, touch **Show advanced options** and enter the DNS domain, DNS server address, and forwarding route.
- 4** Touch **Save**.
- 5** Touch the VPN you have just set up, enter your VPN user name and password, then touch **Connect**.

### Connect to an L2TP/IPsec PSK Server

- 1** Obtain the VPN server name, server address, L2TP key (optional), IPsec identifier (optional), and IPsec pre-shared key from your VPN server administrator.
- 2** Go to **Settings > More connections > VPN > Add VPN network**, enter the VPN name, set the server type to **L2TP/IPsec PSK**, then enter the server address, L2TP key, IPsec identifier, and IPsec pre-shared key.
- 3** If the VPN server does not have a DNS address, touch **Show advanced options** and enter the DNS domain, DNS server address, and forwarding route.
- 4** Touch **Save**.
- 5** Touch the VPN you have just set up, enter your VPN user name and password, then touch **Connect**.

## Home Screen & Wallpaper

### Manage the Home Screen Layout

You can customise the home screen layout to suit your device usage habits.

### Move an App Icon on the Home Screen

Touch and hold an app icon and drag it to the desired position on the home screen.

## Keep Home Screen Icons Aligned

Pinch two fingers together on the home screen to access **Home screen settings** mode, then enable **Auto-align**. With this feature enabled, empty spaces will automatically be filled when apps are removed.

## Lock Home Screen Icon Positions

Pinch two fingers together on the home screen to access **Home screen settings** mode, then enable **Lock layout**.

## Select the Home Screen Layout Pattern

Pinch two fingers together on the home screen, go to **Home screen settings > Layout**, then select a layout pattern you prefer.

## Set Your Home Screen in Settings


You can also go to **Settings > Home/Exterior screen & wallpaper > Home screen settings**, then enable **Auto-align** and more.

## Put App Icons in Folders

For easy management of your app icons on the home screen, you can put similar apps in a folder and name the folder.

- 1 Touch and hold an app icon and drag it over another icon to create a new folder.
- 2 Open a folder, touch its name, then enter a new name for it.

## Add App Icons to a Folder or Remove Them

Open a folder, then touch .

You can then perform the following operations:

- Select one or more apps, and touch **OK** to add them to the folder.
- Deselect one or more apps, and touch **OK** to remove them from the folder. If you deselect all apps, the folder will be deleted.

## Use App Drawer to Store Apps

You can put your apps in a drawer and display only frequently used apps on your home screen to streamline your home screen.

### Enable App Drawer

Go to **Settings > Home/Exterior screen & wallpaper > Home screen style**, and select **Drawer**.

Once enabled, you can swipe up on the home screen to access all of your apps in the drawer.

## Add Apps in the Drawer to the Home Screen

In Drawer mode, you can swipe up on the home screen to display the Drawer. You can then touch and hold an app to drag it to the desired position on the home screen.

## Move Apps Back to the Drawer

In Drawer mode, you can move an app from the home screen back to the Drawer by touching and holding this app, then touching **Remove**. This operation will only remove the app icon from your home screen but will not uninstall it.

You can still find it in the Drawer.

## Disable the Drawer Style

To disable the drawer style, set **Home screen style** to **Standard**.

# Display & Brightness

## Adjust the Screen Brightness, Colour Mode, and Colour Temperature

You can set the screen brightness, colour mode, and colour temperature according to your preferences.



### Automatically Adjust the Screen Brightness

Go to **Settings > Display & brightness**, and enable **Automatic**.

Your device will automatically adjust the screen brightness according to the ambient lighting conditions.

### Manually Adjust the Screen Brightness

You can manually adjust the screen brightness using the following methods:

- Swipe down from the upper right edge of the screen to display **Control Panel**. In the  section, drag the slider to adjust the screen brightness.
- Go to **Settings > Display & brightness**. In the  section, drag the slider to adjust the screen brightness.

### Adjust the Colour Mode

Go to **Settings > Display & brightness > Colour mode & temperature**, and select the colour mode that you prefer. **Normal** mode will be easier on your eyes and is therefore recommended.

- **Normal**: natural colour tones
- **Vivid**: vivid colour tones



## Adjust Colour Temperature


Go to **Settings > Display & brightness > Colour mode & temperature** and adjust the colour temperature as required. It is recommended that you select **Default** or **Warm**, as they are more soothing to the eye.


- **Default:** Displays a natural tint
- **Warm:** Displays a yellowish tint
- **Cool:** Displays a whitish tint
- You can touch anywhere on the colour circle or drag the spot to adjust the colour temperature.

## Use Eye Comfort Mode

Eye comfort mode can effectively reduce harmful blue light and adjust the screen to display warmer colours, relieving eye fatigue and protecting your eyesight.

### Enable or Disable Eye Comfort Mode

- Swipe down from the upper right edge of the screen to display **Control Panel** and touch  to expand the shortcut switches panel. Enable or disable **Eye Comfort**. Touch and hold **Eye Comfort** to access the settings screen.
- Go to **Settings > Display & brightness > Eye Comfort** and enable or disable **Enable all day**.

Once Eye Comfort mode is enabled,  will be displayed in the status bar, and the screen will take on a yellow tint since less blue light is being emitted.

### Set a Schedule for Eye Comfort Mode

Go to **Settings > Display & brightness > Eye Comfort**, enable **Scheduled**, then set **Start** and **End** according to your preferences.

### Adjust the Blue Light Filter in Eye Comfort Mode

Go to **Settings > Display & brightness > Eye Comfort**, enable **Enable all day** or set up **Scheduled**, and adjust the slider under **Filter level** to customise how much blue light you would like to be filtered.

## Enable Dark Mode

You can enable Dark mode to apply a darker colour scheme, which helps prevent excessive screen light from irritating your eyes and saves battery power.


Go to **Settings > Display & brightness > Dark mode**, and follow the onscreen instructions to set the related configurations.

## Adjust Text Style Settings

You can adjust the system text size and app display size, as well as the text style.

### Text Size and Weight

Go to **Settings > Display & brightness > Text size and weight** and drag the sliders to adjust the **Text size** or **Text weight**.

-  The text size and weight adjustment feature is unavailable in certain countries and regions.

### Enlarge or Reduce Display Size

**Display size** determines the size of content (including text and images) displayed within apps.

Go to **Settings > Display & brightness > Display size**, and drag the slider for **Display size**.

### Use Smart Screen Resolution

Go to **Settings > Display & brightness**, and enable **Smart Resolution**. Your device will automatically adjust the screen resolution according to the current running status.

### Adjust the Screen Refresh Rate

Go to **Settings > Display & brightness > Screen refresh rate**, and select a screen refresh rate that you would like to use.

A high screen refresh rate will help deliver a smoother visual experience.

## Full Screen Display

### Apply Full Screen Display

- Most apps installed on your device will automatically adapt to display correctly in full screen.
- For apps that don't, go to **Settings > Display & brightness > More display settings > Full-Screen Display**, and toggle on their switches. Enabling **Full-Screen Display** may cause some apps to display incorrectly, for instance, by being improperly stretched.

### Show the Notch

- 1 Go to **Settings > Display & brightness > More display settings > Cutout**, and select **Auto**.
- 2 If you want to show or hide the notch for a specific app, touch **Custom**, select the app, then select one of the following options:
  - **Auto**
  - **Show cutout**
  - **Hide cutout**

## Hide the Notch

You can darken the surrounding area at the top of the screen to hide the notch.


Go to **Settings > Display & brightness > More display settings > Cutout** and select **Hide cutout**.

## Display Carrier Name and Network Speed in the Status Bar

You can check the carrier name and network speed with a single glance at the status bar.

Go to **Settings > Display & brightness > More display settings**, and enable or disable **Display carrier name** and **Display network speed** according to your preferences.

## Switch Between Portrait and Landscape Orientation

Swipe down from the upper right edge of the screen to display **Control Panel** and touch  to expand the shortcut switches panel. Then enable **Auto-rotate**.


# Sounds & Vibration


## Set Do Not Disturb Mode


**Do Not Disturb** helps you prevent interruptions when you need to focus. When this mode is enabled, calls and messages will be muted and banner notifications will not be displayed.

### Enable or Disable Do Not Disturb

You can enable or disable Do Not Disturb using the following methods:

- Swipe down from the upper right edge of the screen to display **Control Panel** and touch  to expand the shortcut switches panel. Enable or disable **Do Not Disturb**. You can touch and hold **Do Not Disturb** to access the settings screen.
- Go to **Settings > Sounds & vibration > Do Not Disturb** and enable or disable **Do Not Disturb**.

Once Do Not Disturb is enabled, a moon icon (  ) will be displayed in the status bar. To check for notifications, swipe down from the status bar to open the notification panel, or go

to the lock screen. Swipe left on a notification and touch  to snooze the notification.

When receiving incoming calls, notifications, and messages, your device will be muted and will not automatically turn on its screen or display banner notifications.

### Set a Schedule for Do Not Disturb

**1** Go to **Settings > Sounds & vibration > Do Not Disturb** and disable **Do Not Disturb**.

- 2 In the **Scheduled** list, enable the switch next to a time period for when you want to enable Do Not Disturb. Your device will then enter Do Not Disturb mode at the specified time.
- 3 You can touch the time segment to customise the parameters, such as changing the time range and adjusting the repeat frequency.
- 4 Touch **Add** to add a new time period.

### Make Exceptions in Do Not Disturb Mode

While in **Do Not Disturb** mode, you can enable your device to ring for calls and messages from certain sources so you don't miss anything important.


Go to **Settings > Sounds & vibration > Do Not Disturb**, and enable **Do Not Disturb** or **Scheduled**. Then you can:

- Touch **Calls** or **Messages** and select one of the options. If you set an exception, your device will ring for calls or messages from the selected source.
- Once **Repeated calls** is enabled, a second call from the same number within 15 minutes will not be silenced.



### Set a Ringtone

You can set a personalised ringtone for incoming calls depending on your preferences.

If you are carrying your device in your pocket, the ringtone volume will gradually increase to prevent you from missing important calls.


-  If your phone has two SIM cards installed, configure the settings for SIM 1 and SIM 2 respectively.

### Set a Music Ringtone

- 1 Go to **Phone >  > Settings > Ringtone**.  
Or go to **Settings > Sounds & vibration > Phone ringtone**.
  - 2 Select a system ringtone, or touch **Music on device** to set a local song as the ringtone.
  - 3 If you select a system ringtone, touch **Vibration** on the same screen, and select **Synchronised (default)**. When there is an incoming call, your device will vibrate with rhythm while the system ringtone is playing.
-  Not all products support a synchronised vibration and ringtone.

### Set a Video Ringtone

Set a video as the ringtone for incoming calls on your device.

- 1 Go to **Phone >  > Settings > Ringtone**.  
Or go to **Settings > Sounds & vibration > Phone ringtone**.
- 2 Touch **Video ringtones** and select a video. You can then preview what it looks like for incoming calls.
- 3 Touch **Set** to set the video as the ringtone.

## Set a Ringtone for a Contact

Set a different ringtone for a particular contact to distinguish more easily when that contact is calling you.

- 1 Open **Phone**, touch the **Contacts** tab, then select the contact you want to set a ringtone for.
- 2 On the contact details screen, touch **Ringtone** and select a ringtone.

## Set a Notification Tone for a Specific App

You can set a notification tone for certain apps by doing the following:

- 1 Go to **Settings** > **Apps** > **Apps**.
- 2 Select an app (such as **Notepad**).
- 3 Go to **Notifications** > **To-do notifications** > **Notification sound**.
- 4 You can then:
  - Set a tone.  
Select a preset tone, or touch **Music on device** to select a locally saved song.
  - Set a vibration pattern.  
Touch **Vibration** and select your preferred type of vibration.

## Sound Booster

Sound Booster uses the microphone on your device to pick up sound and then wirelessly transmit it to a Bluetooth headset, or to a Bluetooth speaker to amplify the sound.


For example:

- When your family are watching TV, you can use Sound Booster on your device to transmit the audio playback to a Bluetooth headset to help someone with a hearing impairment to hear more clearly. To transmit the sound to the headset, simply place your device underneath your TV.
- In a noisy environment, your device can be used as a microphone and connected to a Bluetooth speaker for sound amplification.

- 1 Connect your device to a Bluetooth headset or a Bluetooth speaker.
- 2 Go to **Settings** > **Sounds & vibration** > **Sound Booster** on your device and enable **Sound Booster**. Touch the headset or speaker name that you want to connect to on the displayed paired device list on your device and follow the onscreen instructions to finish connecting.
- 3 Place your device near the sound source when using a Bluetooth headset. When connected to a Bluetooth speaker, keep the microphone of your device near the sound source.
- 4 Wear the headset or place the speaker in a suitable position. Keep the speaker or headset within 10 metres of your device.

## Enable Huawei Histen Sound Effects


Huawei Histen sound effects, with 3D surround sound support, deliver vibrant and crisp sound to create an immersive audio experience.

 Huawei Histen sound effects are only available when a headset is plugged in.

Go to **Settings > Sounds & vibration > Huawei Histen sound effects** and select an option:

- **Auto:** Automatically identifies what you are playing and intelligently applies sound effects to optimise your experience.
- **3D audio:** Delivers 3D spatial sounds.
- **Natural:** Faithfully reproduces the original sounds.
- **Standard:** Requires less power for audio playback. You can also customise equaliser settings yourself to achieve the exact sound you are looking for.

**Auto**, **3D audio**, and **Standard** modes allow you to select a headset type so you can match the sound effects to your headset.

 Selecting a headset type is available only when a 3.5 mm-jack headset is plugged in. If your device does not have a 3.5 mm jack, use an original Huawei headset adapter.

## Notifications

### App Badges

When new notifications arrive for an app, a numbered badge will appear on the app icon. You can also set a dot as the badge, or hide the badge for some or all apps.

### Turn Off App Badges

- 1 Go to **Settings > Notifications**, and touch **App icon badges**.
- 2 Turn off the switch for some or all apps.


### Change the Badge Display Mode

On the **App icon badges** screen, touch **Badge display mode**, and select **Numbers** or **Dots** according to your preference.

### Disable App Notifications

#### Disable Notifications from a Specific App

If you do not want to be disturbed by notifications from an app, perform either of the following:

- After you receive a notification from the app, swipe left on it in the notification panel, and go to  > **Disable notifications**.

- Go to **Settings > Notifications**, locate and touch the app for which you want to disable notifications, then disable **Allow notifications**.

### Disable Notifications from Apps in Batches

To disable notifications from multiple apps at a time, go to **Settings > Notifications > Manage all**, and turn off the switch next to each app.

### Hide Content of Notifications on the Lock Screen

To enable this feature:


Go to **Settings > Notifications**, and enable **Hide notification content**.

## More App Notification Settings

### Set the App Notification Mode

Go to **Settings > Notifications** and select an app. You can then set its notification mode.

- Enable **Gentle notifications**: Notifications will only be displayed in the notification panel. There will be no banners, lock screen notifications, or status bar icons, and your device will not ring or vibrate.
- Enable **Lock screen** and **Banners**.
- Set **Notification sound**: You can change the notification tone, set the vibration pattern, or select **None**.
- Enable **Allow interruptions**: You can still receive notifications from this app even if Do not disturb is enabled.

 This feature may vary by device.

### Notifications Turn on Screen

Go to **Settings > Notifications > More notification settings**, and enable **Wake screen**. Your device will then automatically turn on the lock screen when it receives a notification.

### Show Notification Icons in the Status Bar

Go to **Settings > Notifications > More notification settings**, and enable **Show notification icons in the status bar**.

## Biometrics & Password

### Set Fingerprints

You can enrol a fingerprint and then use it to unlock the screen and access your Safe, App lock, and more.

## Enrol a Fingerprint

- 1 Go to **Settings > Biometrics & password > Fingerprint ID** and follow the instructions to set or enter the lock screen password.
- 2 Touch **New fingerprint** to begin enrolling your fingerprint.
- 3 Place your fingertip on the fingerprint sensor. When you feel a vibration, lift your finger then press again. Move your finger around to enrol different parts of it.
- 4 When the enrolment has been completed, touch **OK**.

You can now place your finger on the fingerprint sensor to unlock the screen.

## Rename or Delete a Fingerprint

- 1 Go to **Settings > Biometrics & password > Fingerprint ID** and enter your lock screen password.
- 2 In the **Fingerprint list** section, touch an enrolled fingerprint to rename or delete it.

## Fingerprint Identification

Fingerprint identification allows you to match your fingers with the enrolled fingerprints.

- 1 Go to **Settings > Biometrics & password > Fingerprint ID** and enter the lock screen password.
- 2 In the **Fingerprint list** section, touch **Identify fingerprint**.
- 3 Touch the fingerprint sensor with your finger. The recognised fingerprint will be highlighted.

## Use Your Fingerprint to Access Your Safe

- 1 Go to **Settings > Biometrics & password > Fingerprint ID** and enter your lock screen password.
- 2 Turn on the switch for **Access Safe** and follow the onscreen instructions to link your fingerprint with the Safe.

Now you can go to **Files > Me**, touch **Safe**, then use your fingerprint to access it.

 Please make sure your device has been updated to the latest system version.

## Use Your Fingerprint to Access a Locked App

- 1 Go to **Settings > Biometrics & password > Fingerprint ID** and enter the lock screen password.
- 2 Turn on the **Access App Lock** switch and follow the onscreen instructions to link your fingerprint with App Lock.

You can then touch a locked app on your home screen and use your fingerprint to access it.

## Enable and Use Fingerprint Payment

You can use your fingerprint to verify your payments in a payment app.


Go to the payment app and follow the onscreen instructions to enable this feature.



## Face Recognition

Face Recognition allows you to unlock your device or access locked apps with your facial data.

### Set up Face Recognition

- 1 Go to **Settings > Biometrics & password > Face Recognition** and enter your lock screen password.
- 2 Select **Enable raise to wake**.
  -  The settings items vary by device. If your device does not provide a specific item, it indicates that the corresponding feature is not supported.
- 3 Touch **Get started** and follow the onscreen instructions to enrol your facial data.


### Set an Alternate Look

You can add an alternate look for more accurate and convenient face recognition.

On the **Face Recognition** screen, touch **Set an alternate look**, and follow the onscreen instructions to enrol the alternate facial data.

### Set Face Unlock

On the **Face Recognition** screen, touch **Unlock device** and select an unlock method.

-  If you have enabled PrivateSpace or added multiple users to your device, you can use Face unlock only in MainSpace or with the Owner account.

### Access App Lock with Face Recognition

On the **Face Recognition** screen, enable **Access App Lock**, and follow the onscreen instructions to add your facial data to App lock.

You can then touch a locked app on your home screen and use face recognition to access the app.

### Link Your Face with Password Vault


Access the **Face Recognition** screen and enable **Autofill usernames and passwords**.

When logging in to an app, you can use Face Recognition to automatically fill in the account name and password saved in Password Vault.

### Face Recognition for Security Enhancement

For greater security, enable **Require trusted device** when using Face unlock so your device will only be unlocked when it recognises your face and is connected to a trusted device.

This feature is disabled by default. To enable it, go to the **Face Recognition** settings screen, touch **Require trusted device**, enable the **Require trusted device** switch, and follow the onscreen instructions to complete the settings.


-  A trusted device can be any Bluetooth device that can be used for unlocking purposes, such as earphones, a watch, or a band.

### Set Accessibility Mode for Face Recognition

Once Accessibility mode for Face Recognition has been enabled, your face will be identified even with your eyes closed if you are in ScreenReader mode.

To enable **Accessibility mode**, perform the following steps:

- 1 Go to **Settings > Accessibility features > Accessibility > ScreenReader**, and enable **ScreenReader**.
- 2 Access the **Face Recognition** screen and enable **Accessibility mode**.

-  If you have not enrolled a face, **Accessibility mode** will be automatically enabled when you are enrolling the facial data once ScreenReader is turned on.

### Disable or Delete Facial Data

On the **Face Recognition** screen, you can do the following:

- Disable facial data for certain features: Disable **Unlock device**, or **Access App Lock** as required. This will not delete your facial data.
- Delete facial data: Touch **Delete facial data** and follow the onscreen instructions to delete your facial data.

### Lock Screen Password

You can set a numeric, pattern, or hybrid password as your lock screen password.

#### Set a Lock Screen Password

You can set a PIN, pattern, or password for unlocking your device.

- 1 Go to **Settings > Biometrics & password** and touch **Lock screen password**.
- 2 Follow the onscreen instructions to enter a PIN or touch **Change unlock method** to select your preferred password type.

#### Change the Lock Screen Password

- 1 On the **Biometrics & password** screen, go to **Change lock screen password**.
- 2 Enter the original lock screen password.
- 3 Enter a new password, or touch **Change unlock method** to select a password type, then follow the onscreen instructions to input a new password.

#### Disable Lock Screen Password

On the **Biometrics & password** screen, go to **Disable lock screen password**.

### Enable Lockdown

There are many ways your device can be unlocked. In some cases (such as if you are asleep while taking public transport), password unlock is more secure than other unlock methods.

When Lockdown mode is enabled, you will only be able to unlock your device using your lock screen password. Other unlock methods will be temporarily disabled.

You must set a lock screen password to use this feature.

- 1** Go to **Settings > Biometrics & password > Secure lock settings**, and enable **Show Lockdown option**.
- 2** Press and hold the Power button until the **Lockdown** option is displayed on the screen.
- 3** Touch **Lockdown** and follow the onscreen instructions to enable Lockdown mode. Once Lockdown mode is enabled, your device can only be unlocked using the lock screen password.
- 4** Lockdown mode is automatically disabled when you unlock your device. You can use other unlock methods as usual the next time you unlock your device.  
If you need to re-enable Lockdown mode, press and hold the Power button and touch the **Lockdown** option again.

## Apps

### Enable App Twin

App Twin enables you to log in to two WhatsApp or Facebook accounts simultaneously, allowing you to keep your work and private life separate.

 **App Twin** is only supported by some apps.

Go to **Settings > Apps > App Twin** and turn on or off the switch for the app you want to apply the feature.

The twin app will then be displayed on the home screen.

### View or Change App Settings

Go to **Settings > Apps > Apps** and touch an app. You can force stop it, uninstall it, view and change the app permissions, set notification modes, and more.

 Some apps cannot be uninstalled.


### Check the App Version or Change the App Settings

Go to **Settings > Apps > Apps** and touch the app you are interested in to go to its details screen. The version of the app is displayed next to the app icon.

## Battery



### Check the Power Consumption of Your Device

Go to **Settings > Battery** (or **Optimiser > **), and you can:

- View **Power consumption details** to learn about the power consumption and the power usage ranking of apps.
  - Touch a time slot in the Battery level chart to learn about the power consumption for the corresponding period.
  - Touch an app and view its **Battery usage details**, or touch **Force stop** to close the app.
-  Some pre-installed apps cannot be closed.

## Enable Power Saving mode

You are advised to enable **Power Saving mode** when the battery level is low but you cannot charge your device straight away.


Go to **Settings > Battery** (or **Optimiser > **) and enable **Power Saving mode**. After that,  will be displayed in the status bar.


You can touch **Learn more** to view details about power saving measures.

## Enable Performance Mode

**Performance mode** adjusts power settings to deliver maximum performance. This will cause the battery to drain more quickly, especially when graphic-intensive apps are used.

When the battery level is sufficient, go to **Settings > Battery** (or **Optimiser > **) and enable **Performance mode**.


The  icon will then be displayed in the status bar.

-  **Performance mode** is not available on some devices. If this option is not displayed in **Optimiser**, it indicates that your device does not support the feature.

## Enable Smart Charge

Smart Charge learns from your charging habits and manages the charging process intelligently. This feature reduces the battery wear level and prolongs the battery life by reducing the time your device spends fully charged. It is advised that you keep this feature enabled.

For example, if you are used to charging your device overnight or for an extended period of time, Smart Charge will pause the charging when the battery capacity reaches a certain level. Before you get up in the morning, Smart Charge will resume charging until your device is fully charged. This reduces the time your device spends fully charged to slow down battery wear and prolong the battery life.

-  Data about your charging habits will only be used on your device and will not be backed up or uploaded to the cloud.


To enable this feature, go to **Settings > Battery > More battery settings** and enable **Smart Charge**.

## Enable Custom Limit

To prolong the battery's lifespan, it's recommended that you avoid keeping the battery fully charged at all times.

Custom limit mode lets you set up the maximum charging level based on your personal preferences (70%–90% is recommended for daily use). The battery will automatically stop charging at this level.


Go to **Settings > Battery > More battery settings**, toggle on the **Custom limit** switch, and set the maximum charging level.

-  You can only set either Custom limit or Smart charge mode at a time. By default, Smart charge is enabled and Custom limit is disabled. Select one from the two options as required. For instance, if your device is always connected to a charger for a long time, it's recommended that you choose Custom limit and set it to the maximum charging level of 70%.

## Set the Battery Level Display Mode

You can also set whether or not to display the battery percentage in the status bar, and whether to maintain a network connection when the device screen is turned off.

### Display Battery Percentage on the Status Bar

Go to **Settings > Battery** (or **Optimiser > **), touch **Battery percentage**, and choose to display the battery percentage, either inside or outside of the battery icon on the status bar.

### Stay Connected while Your Device is Sleeping

If you would like your device to continue to receive messages or download data while it is in sleep mode, set to keep your device connected when it sleeps. Please note that this may increase power consumption.

On the **Battery** screen, touch **More battery settings**, then enable or disable **Stay connected while asleep** as required.

## Storage

### Check Storage Usage

Go to **Settings > Storage** to check storage usage and optimise it when you feel necessary.

### Clean Up Device Storage

You can use **Cleanup** in **Optimiser** to scan for redundant or large files, such as app residue, unwanted installation packages, WeChat data, and more. Once detected, you can choose whether or not to delete files as suggested.

- 1 Open **Optimiser**, then touch **Cleanup**.

- 2 When the scan is complete, touch **Clean up** after each item and delete any files you don't need.

### Manually Clean Up System Trash

In addition to automatic cleanup, your device will also detect and recommend trash files for you to clean up manually.

On the **Cleanup** screen, touch **Clean up** next to a category, select the items you want to clean up, then touch **DELETE** .

### Clean Up Duplicate Files


**Optimiser** can identify duplicate files on your device.

On the **Cleanup** screen, touch **Duplicate files** , then select unwanted files to delete them.


## Security

### Use the Password Vault to Automatically Fill in the Password

Password Vault saves your usernames and passwords and autofills them for you each time you log in to an app. This data is hardware encrypted and stored only on your device. Huawei does not have access to it, and will not upload it to the network or server.

-  Before using Password Vault, set a lock screen password for your device.
- Password Vault is only compatible with certain apps.

### Log In Faster with Password Vault

- 1 When you log in to an app for the first time, your device will automatically prompt you to save the password. Touch **SAVE** when prompted.  
If you accidentally touch **Never save**, you can still enable the autofill feature for this app by going to **Settings > Security > Password Vault > Manage autofill settings**, and toggling on the switch next to this app. When the switch is toggled off, the autofill feature will be disabled.
- 2 If you log out of the app, the next time you log in, your device will autofill the username and password once you have verified your identity with your lock screen password, fingerprint, or face ID.  
 Not all devices support fingerprint features.

When you switch to a new Huawei device, you can use **Phone Clone** to transfer data in Password Vault to your new device.

### View or Delete Stored Usernames and Passwords

You can view or delete the usernames and passwords stored in Password Vault at any time.

Go to **Settings > Security > Password Vault > ACCOUNTS** to view or delete the stored usernames and passwords.

## Disable Password Vault

Password Vault is enabled by default, but can be disabled if required.

Go to **Settings > Security > Password Vault**, and disable **Save and autofill usernames and passwords**.

## Use App Lock to Protect Your Privacy


You can lock apps containing private data, such as chat and payment apps, to prevent unauthorised access.

### Enable App Lock

Go to **Settings > Security > App Lock > Enable**, follow the onscreen instructions to set an App Lock password, and select an app to be locked.

If you have enabled face or fingerprint unlock, you can link App Lock with a face ID or fingerprint ID as prompted.


### Change the App Lock Password or Security Questions

Enter the **App Lock** settings screen, go to  > **Password type**, and select **Lock screen password** or **Custom PIN** as the App Lock password.

If you select **Custom PIN**, you can go on to set a new password and security questions.

### Cancel or Disable App Lock

On the **App Lock** settings screen, you can perform the following:


- **Cancel App Lock:** On the list of locked apps, toggle off the switches besides the apps for which you want to cancel App Lock.
- **Disable App Lock:** Go to  > **Disable App Lock** and follow the onscreen instructions to touch **DISABLE**. This will cancel all locks and clear all app lock settings.

## Encrypt Content on the Memory Card

You can encrypt files stored on the memory card. Encrypted files can only be viewed and used on your device.

- 1** Insert a memory card into your device and ensure that the memory card has sufficient storage space.
- 2** Go to **Settings > Security > More settings > Encryption and credentials**.
- 3** Touch **Encrypt memory card** and follow the onscreen instructions to encrypt the memory card.  
During the encryption, do not restart your device or forcibly remove the memory card. Otherwise, the encryption may fail or data may be lost.

To decrypt a memory card, touch **Decrypt memory card** and follow the onscreen instructions to decrypt files on the memory card. Formatting a memory card can also decrypt the memory card, but will erase all data on the memory card.

-  Encrypting and decrypting the memory card will not be supported if you are not logged in as the Owner.

## Set a SIM PIN Lock

A PIN is the identity code of a SIM card, and can be set as the SIM card lock. After you set it up, you will be required to enter the correct PIN to unlock the SIM card every time you power on your device or switch to a new device to prevent unauthorised access.

If you have entered a wrong PIN and exceeded the maximum number of attempts allowed to unlock the PIN, you will need to enter the PIN Unlocking Key (PUK) then reset the PIN. If you exceed the maximum number of attempts allowed to unlock the PUK, your SIM card will be permanently blocked.





The PIN and PUK of your SIM card are provided by your network provider. The number of digits and maximum number of attempts allowed to unlock your PIN and PUK are subject to your network provider.

- 1 Go to **Settings > Security > SIM PIN** to enter the SIM PIN screen.
- 2 Enable **SIM PIN**, enter the PIN, then touch **OK**.  
To change the PIN, touch **Change SIM PIN**, and follow the onscreen instructions.

## Pin a Screen

You can pin the screen of an app so you can stay focused on it. Try this feature when playing games, watching videos, and more.

Go to **Settings > Security > More settings > Screen pinning**, and enable **Screen pinning**.

- When using gesture navigation, swipe up from the bottom of the screen and hold to access the recent tasks screen, then touch  on an app preview. To unpin, swipe up twice from the bottom of the screen.
- When using three-key navigation, touch  to access the recent tasks screen, and touch  on an app preview. To unpin, touch and hold .

## Privacy

### Manage App Access Permissions

Apps may require certain permissions, such as the Location permissions, in order to provide you with corresponding services.



However, some apps may obtain too many unnecessary permissions, posing potential risks to your privacy and information security. You can monitor the permissions granted to each app and deny those you deem unnecessary.

### Manage the Location Permission

After being granted the Location permission, an app can obtain your location information. For example, if a map app is granted the Location permission, it can provide you with location and navigation services. You can revoke the permission if you do not need these services.

- 1 Go to **Settings > Apps > Permission manager**.
- 2 On the **Permission manager** screen, touch **Location**, then touch the icon of the app you want to change the permission for to manage the Location access.

### Manage Permissions to Access Other Private Data

You can also manage permissions to access your personal data, such as Contacts, Messaging, Call logs, Body sensors, Calendar, and Camera, to enjoy better services and protect your privacy.


On the **Permission manager** screen, touch the permission you want to manage, and toggle the switch for each app on or off as required.

### Use Location Services

Some apps need to obtain your location information to provide better services. You can enable or disable location services, and grant or deny the permission to access location information for particular apps as required.

### Enable or Disable Location Services

You can enable or disable Location Services in the following ways:

- Swipe down from the upper right edge of the screen to display **Control Panel**, touch  to expand the shortcut switches panel, and enable or disable **Location**. You can touch and hold **Location** to access the settings screen of **Location**.
- Go to **Settings > Location** and enable or disable **Access my location**.

After Location Services is disabled, your device will prevent all apps and services from collecting and using the location information, with the exception of some built-in apps. When apps or services need to use the location information, your device will remind you to enable Location Services again.

### Increase the Accuracy of Location Services

You can improve the positioning accuracy of your device by allowing apps and services to scan for nearby Wi-Fi networks and Bluetooth devices or access supplementary data from global navigation satellite systems (GNSS).

**i** **High-accuracy positioning** is only supported on certain products.

Go to **Settings > Location > Advanced settings**, then set them up as required.

### **Allow or Deny Access to Location Information**

You can grant or deny the Location permission to an app, as well as grant permanent access or access only while in use or deny access to the location information.

- 1** Go to **Settings > Privacy > Permission manager**, touch **Location**, and check apps to be granted access to the location information.
- 2** Touch the corresponding app and follow the onscreen instructions to grant or deny the Location permission.

### **Create a PrivateSpace for Your Private Data**

Create your PrivateSpace that is completely independent of MainSpace (the original space) on your device, which can be accessed using your fingerprint or a password.

**i** Not all devices support fingerprint features.

You can move private photos, videos, and other files to your PrivateSpace to prevent unauthorised access. You can also move your payment and gaming apps to PrivateSpace to prevent them from being accessed by your child.

### **Enable and Access PrivateSpace**

- 1** Go to **Settings > Privacy > PrivateSpace > Enable**, and follow the onscreen instructions to create a PrivateSpace.
- 2** You can enter your PrivateSpace using either of the following methods:
  - On the lock screen, access PrivateSpace using the fingerprint or password set for the space.
  - Alternatively, in MainSpace, go to **Settings > Privacy > PrivateSpace**, and touch **Log in**.

**i** If you restart your device, you have to enter the password to access the MainSpace first, then switch to the PrivateSpace.

### **Hide or Unhide the Entrance to PrivateSpace**

You can hide the entrance to PrivateSpace in the MainSpace settings, so that you can only access PrivateSpace using the fingerprint or password set for the space.

- To hide the entrance to PrivateSpace: In PrivateSpace, go to **Settings > Privacy > PrivateSpace**, and enable **Hide PrivateSpace**.
- To unhide the entrance to PrivateSpace: In MainSpace, go to **Settings > Security > More settings**, then go to **Show all settings > OK**.

## Transfer Files Between MainSpace and PrivateSpace

- 1 In PrivateSpace, go to **Settings > Privacy > PrivateSpace**, and touch **MainSpace to PrivateSpace** or **PrivateSpace to MainSpace**.
- 2 Select the files (such as photos, videos, and audio files) you want to transfer, touch **Move**, and follow the onscreen instructions to transfer the files.

In the target space, go to **Gallery > Albums > Others > SharedImages**, or **Gallery > Albums > Others > SharedVideos** to view photos and videos.

## Reset Password for PrivateSpace

You can set a security question when creating the password for PrivateSpace, which will help you to reset the password if you happen to forget it.

- 1 In PrivateSpace, go to **Settings > Privacy > PrivateSpace**, then touch **Password protection**.
- 2 Follow the onscreen instructions to complete the verification, select and answer the security question, then touch **Finish**.
- 3 In MainSpace, go to **Settings > Privacy > PrivateSpace**, then go to **• • > Reset password**, and follow the onscreen instructions to complete the verification and reset the password.

## Transfer Data in PrivateSpace to Your New Device

You can quickly transfer your PrivateSpace data, such as contacts, photos, and files, from the old device to the new one.

- 1 On your new device, create and enter your PrivateSpace, go to **Settings > Privacy > PrivateSpace > Space Clone**, and select **This is the new device**.
- 2 In your old device, enter your PrivateSpace, go to **Settings > Privacy > PrivateSpace > Space Clone**, and select **This is the old device**.
- 3 Follow the onscreen instructions to scan the QR code or manually connect the old device to the new one.
- 4 On your old device, select the data to be transferred. You can cancel the data transfer during the process, and then continue it once you have connected your old device with the new one again.

## Delete PrivateSpace

If you delete PrivateSpace, all apps and data stored in the space will be deleted and cannot be restored. Please exercise caution when deleting PrivateSpace.


You can delete PrivateSpace in either of the following ways:

- In MainSpace, go to **Settings > Privacy > PrivateSpace**, then go to **• • > Delete PrivateSpace**.
- Alternatively, in PrivateSpace, go to **Settings > Privacy > PrivateSpace**, then touch **Delete**.

## Super Privacy Mode

When Super Privacy mode is enabled and your device is folded, apps will not be able to gain access to the microphone, camera, and location data of your device. This helps to ensure your privacy. For instance, you can enable this mode and fold your device while holding confidential meetings.

By default, Super Privacy mode is disabled. To enable it, go to **Settings > Privacy > Super Privacy mode** and enable **Always on** or **Turn on when folded** as needed.

- **Always on:** When enabled, Super Privacy mode takes effect immediately.
- **Turn on when folded:** When enabled, Super Privacy mode takes effect when your device is folded.
-  When Super Privacy mode is enabled, features such as facial recognition, camera, voice assistant, and map will be unavailable.
  - When Super Privacy mode is enabled, features that contain location information may not be available. For instance, third-party apps may not be able to scan for nearby Bluetooth devices or Wi-Fi hotspots.

## Accessibility Features

### Use a Screen Reader App

Screen reader apps are designed to assist visually impaired users to use a device.

### Enable Colour Correction to Customise the Screen Colour

Colour correction helps people with poor eyesight see the screen content more easily.

- 1 Go to **Settings > Accessibility features > Accessibility > Colour correction** and enable **Colour correction**.
- 2 Touch **Correction mode** to select a colour correction mode.

### Use Magnification Gestures

Use magnification gestures to zoom in on the screen.

On the **Accessibility > Magnification** screen, touch **Magnification**, then enable it.

Zoom in or out by touching the screen three times in a row.

- While zoomed in, spread two or more fingers to further zoom in, then pinch two or more fingers together to zoom back out.
- Drag the screen with two or more fingers to view other parts of the screen.

### Enable Colour Inversion

Colour inversion allows you to invert the colour of the text and the background. When Colour inversion is enabled, your device will display text in white and the background black.

On the **Accessibility** screen, enable **Colour inversion**.

### Use a Shortcut to Activate an Accessibility Feature

You can use Volume buttons to quickly activate an accessibility feature.

- 1 On the **Accessibility** screen, touch **Accessibility shortcut**.
- 2 Touch **Select feature** to select the feature you want to activate with the shortcut.
- 3 Enable **Accessibility shortcut**. You can now press and hold the Volume up and down buttons simultaneously for 3 seconds to activate the feature.

### Adjust the Screen Touch Duration

You can adjust the touch duration and long touch duration, and set the time within which repeated touches will be ignored.

On the **Accessibility** settings screen, you can perform the following:


- Touch **Touchscreen settings** and set the touch duration and long touch duration as required.
- Enable **Ignore repeated touches** and drag the slider to set the time interval as required.

### Operate Your Device with One Hand

You can switch to a mini screen view so you can use your device with one hand.

- 1 Go to **Settings > Accessibility features > One-Handed mode**, and enable **One-Handed mode**.
- 2 You can access **One-Handed mode** using any of the following methods:
  - If you are using **Gestures** and **Slide across bottom to switch apps** is enabled, swipe across the bottom of the screen and hold.
  - If you are using **Gestures** and **Slide across bottom to switch apps** is disabled, swipe across the bottom of the screen in an arc and hold.
  - If you are using **Three-key navigation**, swipe across the bottom of the screen.
  - If you are using **Gestures** and there is no **Slide across bottom to switch apps** switch, swipe across the bottom of the screen.
- 3 Touch anywhere outside the mini screen view to exit one-handed mode.

One-handed mode will not work if magnification gestures are enabled on your device.

-  If you hold your device with your left hand, it is recommended that you swipe from right to left across the bottom of the screen and hold. The mini screen view will be displayed on the left side of the screen.

If you hold your device with your right hand, it is recommended that you swipe from left to right across the bottom of the screen and hold. The mini screen view will be displayed on the right side of the screen.

## Enable or Disable Mistouch Prevention

Enable **Mistouch prevention** to prevent unintended operations caused by accidental touches on the screen, such as when your device is placed in your pocket or backpack.

Go to **Settings > Accessibility features**, and enable or disable **Mistouch prevention**.

## Set Scheduled Power On/Off

Use the **Scheduled power on/off** feature to power your device on and off at set times, to save power and prevent interruptions while resting.

- 1 Go to **Settings > Accessibility features > Scheduled power on/off**, and enable **Scheduled power on/off**.
- 2 Set the power on and off times, as well as the repeat cycle. Your device will power on and off automatically at the specified times.

To stop using this feature, disable **Scheduled power on/off**.

# Users & Accounts

## Add a User or Guest Account

- 1 Go to **Settings > Users & accounts > Signed in as**, touch **Add user** or **Add guest**, then follow the onscreen instructions to add an account.
- 2 Touch **Switch** to switch to the user or guest account. Configure the settings for the new account as prompted.
- 3 Install apps as needed. Note that if a newer version of an app has been installed by another user, the app installation will fail.


## Authorise a User or Guest Account to Make Calls

You can set whether to allow a user or guest account to make calls or use other functions on your device.

- 1 Access your device as the administrator and go to **Settings > Users & accounts > Signed in as**.
- 2 Touch the related account, and select the permissions you want to authorise.


## Switch Between Owner, User, and Guest Accounts

You can switch to a different account in the following ways:

- Swipe down from the upper right edge of the screen to display **Control Panel**, touch , and touch the profile picture of the account you wish to switch to.
- Go to **Settings > Users & accounts > Signed in as** and touch the name of the account you wish to switch to.

## Delete a User or Guest Account

Deleting a user or guest account will delete all of its related data. Please exercise caution. After accessing your device as the owner, use the following ways to delete a user or guest account:

- Go to **Settings > Users & accounts > Signed in as**, touch the account you wish to delete, and follow the onscreen instructions to delete it.
- Swipe down from the upper right edge of the screen to display **Control Panel**, go to  **> More settings**, touch the account you want to delete, and follow the onscreen instructions to delete it.

## System & Updates

### Change the System Language and Region

- 1 Go to **Settings > System & updates > Language & input > Language and region** and choose the language you want to use.  
If the language you want is not listed, touch **Add language**, then find and touch it to add it to the list.  
To delete a language from the list, touch **Edit** and follow the onscreen instructions.
- 2 Touch **Current region** to select countries and regions.

### Set the System Date and Time

Your device is able to sync to the local date, time, and time zone over a mobile network. You can also manually set the date, time, and time zone for your device.

Go to **Settings > System & updates > Date & time**, then set the options according to your requirements.

### Set the Date and Time Automatically or Manually

- Enable **Set automatically**, and your device will sync to the local date and time over a mobile network.
- To manually set the date and time, disable **Set automatically**.

### Change the Time Zone

- Enable **Set automatically**, and your device will sync to the local time zone over a mobile network.
- To manually set the time zone, disable **Set automatically**.


### Change the Time Format

- Enable **24-hour time** and your device will display time in the 24-hour format.
- Disable **24-hour time** and your device will display time in the 12-hour format.


## Use Phone Clone to Move Data to Your New Device

**Phone Clone** lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.

### Migrate Data from a Huawei or Other Android Device

- 1 On your new device, open the **Phone Clone** app, or go to **Settings > System & updates > Phone Clone**, touch **This is the new device**, and select **Huawei** or **Other Android**.
  - 2 On your old device, follow the onscreen instructions to download and install **Phone Clone**.
  - 3 On the old device, open the **Phone Clone** app, touch **This is the old device**, and follow the onscreen instructions to connect the old device with your new device by scanning a code or connecting manually.
  - 4 On your old device, select the data you want to clone, then touch **Next > Transfer** to start cloning.
-  You can search for Android versions that support **Phone Clone** in **AppGallery** and view more information on the app details screen.

### Migrate Data from an iPhone or iPad

- 1 On the new device, open the **Phone Clone** app, or go to **Settings > System & updates > Phone Clone**, touch **This is the new device**, and select **iPhone/iPad**.
  - 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
  - 3 On the old device, open the **Phone Clone** app, touch **This is the old device**, and follow the onscreen instructions to connect the old device with your new device by scanning a code or connecting manually.
  - 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.
-  You can search for iOS versions that support **Phone Clone** in **App Store** and view more information on the app details screen.

## Back Up with an External Storage Device

### Back Up Data with a Memory Card


Insert a memory card into your device so you can conveniently back up your data to keep it safe.

- 1 Go to **Settings > System & updates > Backup & restore > Data backup > External storage** and select **Memory card**.
- 2 Touch **BACK UP**, select data that you wish to back up, then touch **Back up**.
- 3 Follow the onscreen instructions to set the password and password hint. The data will then be encrypted and backed up. A password will be required if you want to restore your data backup.




To reset the password, access the **Memory card** backup screen, go to  **> Reset password**, and follow the onscreen instructions.



 The new password is only valid for future backups.

**4** After the backup is complete, you can find your data backup in the **Huawei** folder in **Files > Browse > Memory card**.

 Please make sure your device has been updated to the latest system version.

You can go to the **Memory card** backup screen and enable **Auto-backup**. Your device will then automatically back up your data every seven days when it is being charged, the screen is turned off, and it has sufficient power.

### Restore Your Backup from a Memory Card

**1** Go to **Settings > System & updates > Backup & restore > Data backup > External storage** and touch **Memory card**.

**2** Select the backup you want to restore from the **RESTORE FROM BACKUP** list.

**3** Select the data you want to restore, touch **Restore**, and enter the password as prompted.

### Back Up with a USB Storage Device

In case of insufficient storage space on your device, you can back up large files and any data on a USB storage device, such as a USB flash drive or card reader.

**1** Connect your device to a USB storage device via a USB OTG cable.

**2** On the **External storage** screen of your device, touch **USB storage**.

**3** Touch **BACK UP**, select the data you want to back up, then touch **Back up**.

**4** Follow the onscreen instructions to set the password and password hint. The data will be encrypted and backed up. The password will be required if you want to restore your data backup.

To reset the password, go to the **USB storage** backup screen, then  **> Reset password**.

 The new password is only valid for backups created thereafter.

### Restore Your Data from a USB Storage Device

**1** Connect your device to a USB storage device via a USB OTG cable.

**2** On the **External storage** screen of your device, touch **USB storage**.

**3** Select the backup you want to restore from the **RESTORE FROM BACKUP** list.

**4** Select the data you want to restore, touch **Restore**, and enter the password as prompted.

### Back Up with a NAS Device

You can back up your important data on a network-attached storage (NAS) device, also known as a private cloud storage server. The NAS device provides shared folders for data backup.

**1** On the **External storage** screen of your device, touch **Shared folder**.

- 2 On your device, scan for available NAS devices using your Wi-Fi network, then touch an applicable one to access and add its shared folders.
- 3 Touch **BACK UP**, select the data you want to back up, then touch **Back up**.
- 4 Follow the onscreen instructions to set the password and password hint. The data will be encrypted and backed up. The password will be required if you want to restore your data backup.

To reset the password, go to the **Shared folder** backup screen, then **> Reset password**.

 The new password is only valid for backups created thereafter.

### Restore Your Data from an NAS Device

- 1 On the **External storage** screen of your device, touch **Shared folder**.
- 2 On your device, scan for available NAS devices using your Wi-Fi network, then touch an applicable one to access and add its shared folders.
- 3 Select the backup you want to restore from the **RESTORE FROM BACKUP** list.
- 4 Select the data you want to restore, touch **Restore**, and enter the password as prompted.

### Restore Your Device to Default Settings

#### Reset Network Settings

This operation will reset your Wi-Fi, mobile data network, and Bluetooth settings. It will not change any other settings on your device or delete any data.

Go to **Settings > System & updates > Reset**, touch **Reset network settings**, then follow the onscreen instructions to reset network settings.

#### Restore All Settings

This operation will reset all network settings, your lock screen password, and the home screen layout. If your device supports fingerprint or facial recognition, the enrolled fingerprints and facial data will be deleted as well. Other data or files will not be deleted from your device. This operation does not restore the settings of Find Device, Users & accounts, Device administrators, or app settings either.

Go to **Settings > System & updates > Reset**, touch **Reset all settings**, and follow the onscreen instructions to complete the operation.

#### Restore Factory Settings

This operation will erase data on your device, including your accounts, app data and system settings, installed apps, music, images, all files in the internal storage, security chip contents, and locally-stored system, app, and personal data related to HUAWEI IDs. Make sure to back up your data before restoring your device to its factory settings.

Go to **Settings > System & updates > Reset > Reset phone**, touch **Reset phone**, and follow the onscreen instructions to restore factory settings.

## Enable or Exit Simple Mode

Simple mode adopts a more concise layout for easy navigation, enlarges icons and fonts for the home screen, and maximises the volume.

### Enable Simple Mode

Go to **Settings > System & updates > Simple mode** and follow the onscreen instructions to enable Simple mode.


In Simple mode, you can touch and hold any icon to drag it to the desired position or uninstall it if you don't need to use the app.

### Exit Simple mode

Open **Settings** and touch **Exit Simple mode**.


## Update Your Device System Online

When an update is available, your device will prompt you to download and install the update package.

-  Before updating, make sure that your device is running an official system version. Otherwise, the update may fail and your device may experience some issues.
- Back up your user data before the update.
- After an update, third-party apps that aren't compatible with the new system version may become unavailable. In such cases, it may take some time for a compatible app version to be released.
- During the update, do not power off or restart your device, remove the memory card, or insert a memory card.

**1** Go to **Settings > System & updates**, and touch **Software update**.

**2** When an update is available, you can either manually download and install the update package, or choose for your device to be updated automatically overnight.



- Download and install the update package: Go to **New version > DOWNLOAD AND INSTALL**. To avoid data usage, connect your device to a Wi-Fi network when downloading the update package.  
Your device will automatically restart once the update is complete.
- Update overnight: Touch , and enable **Auto-download over Wi-Fi** and **Update overnight**.

To disable automatic updates, touch  on the **Software update** screen, then disable **Auto-download over Wi-Fi**.


## Update the Parameter Version of Your Device Online

The parameter version may update operator parameters, time zone parameters, and device parameters, among others, and offer optimizations for functions, including the mobile network, power consumption and performance, and feature compatibility. Your device will prompt you to install the update for these parameters to be automatically adjusted for a better experience.

### Automatic update

- 1 Go to **Settings > About phone > Parameter version**, touch , and make sure that **Auto-update parameters** is enabled.
- 2 When a new parameter version is detected, your device will automatically download and update it.
  -  You will be prompted if the device needs to be restarted for the update to take place.

### Manual update

- 1 Go to **Settings > About phone > Parameter version**, touch , and disable **Auto-update parameters**.
- 2 When a new parameter version is detected, a message will be displayed. Follow the onscreen instructions to complete the update.

## About Phone

### Legal Notice

Copyright © Huawei 2022. All rights reserved.

This guide is for reference only. The actual product, including but not limited to the color, size, and screen layout, may vary. All statements, information, and recommendations in this guide do not constitute a warranty of any kind, express or implied.

Please visit <https://consumer.huawei.com/en/support/hotline> for recently updated hotline and email address in your country or region.

Model: BAL-L49

EMUI12.0\_02